



SPARE PARTS LIST

Models 1, 16H, 18 and ES2
for 1948 and 1949

Models 30, 40, 30M and 40M
for 1946 to 1949 inclusive

■
NORTON MOTORS LTD.
BRACEBRIDGE ST., BIRMINGHAM, 6
ENGLAND



SPARE PARTS LIST

Models 1, 16H, 18 and ES2 for 1948 and 1949

Models 30, 40, 30M and 40M for 1946 to 1949 inclusive

NORTON MOTORS LIMITED
Bracebridge Street, Birmingham 6, England

Phone: Aston Cross 3711 (Private Branch Exchange)

Grams: "Nortomo, Birmingham."

INDEX.

	Page		Page
Air control cable	38	Magdyno parts (Lucas)	72
Amal carburetters	25	Magneto and air control levers	34
Battery carrier and fittings	70	Magneto control cable	38
B.T.H. magneto and fittings	71	Magneto or Magdyno driving parts and fittings	21
Carburetter (Amal)	25	Magneto and fittings (B.T.H.)	71
Carburetter (remote needle type)	29	Main bearings	10
Carburetter (type 10 T.T.)	28	Mattress and fittings (Manx models)	70
Chains (front and rear)	57	Number plates and fittings (front and rear)	66
Clutch control cable	38	O.H.C. vertical shaft drive and rocker box, etc.	17
Clutch group	48	Oil tank and fittings	41
Connecting rods	24	Overhead rockers	17
Control cable adjusters and nipples	37	Petrol tanks and fittings	39
Crankcase, engine plate bolts, studs, etc. (O.H.C. models)	11	Pillion footrests and fittings	71
Crankcase, engine plate bolts, studs, etc. (S.V. and O.H.V. models)	12	Pillion seat and fittings	70
Crankcase and fittings	5	Pistons and rings	24
Cylinder barrel and head	23	Positive foot change parts	49
Dry sump oil pump and drive parts (O.H.C. models)	22	Prop stand	64
Dry sump oil pump and drive parts (S.V. and O.H.V. models)	22	Push rods and fittings (for O.H.V. models)	15
Electric horn and fittings	73	Racing number plates and stone guard	66
Engine plates (front and rear)	62	Rear brake pedal and fittings	60
Engine sprocket	57	Rear brake rod and fittings	60
Exhaust control cable	39	Rear carrier	70
Exhaust lifter control lever	37	Rear chain adjusters	57
Exhaust lifter and fittings—for crankcase and rocker box (S.V. and O.H.V. models)	14	Rear chainguard and fittings	59
Exhaust lifter and fittings—for O.H.C. rocker box	15	Rear hubs and fittings	53
Exhaust pipes and fittings	30	Rear lamp and fittings	73
Float chamber	27	Rear mudguard, stays and fittings	68
Flywheels, assemblies and big end bearings	8	Remote needle type carburetter (Models 30 and 40 Manx)	29
Footrests and fittings	60	Revolution counter	71
Forks and steering damper (Norton Road holder)	32	Rocker box and fittings (for O.H.V. models)	15
Frame	62	Rubber cable clips	75
Frame rear springing	62	Saddle and fittings	69
Front brake control cable	38	Sidecar chassis and fittings	75
Front brake and clutch control levers	36	Silencer, megaphone and fittings	30
Front chaincase and fittings	57	Speedometer and fittings	70
Front chainguard and fittings	59	Stand and fittings (front)	69
Front hubs and fittings	55	Stand and fittings (rear)	69
Front mudguard, stays and fittings	64	Stone guard (Manx models)	66
Gear control rod and fittings	51	Tappets	14
Gearbox axle sprocket	48	Throttle control cable	38
Gearbox fixing bolts	44	Timing gear	14
Gearbox—foot change parts	49	Tool box and fittings	69
Gearbox front chain adjuster	44	Tools	74
Gearbox pinions, shafts and bearings	44	Transfers	75
Gearbox shell	44	Twist grip	37
Handlebar and fittings	34	Type 10 T.T. carburetter (Models 30 and 40 International)	28
Headlamp and parts	72	Tyre security bolts	56
Hub brake shoes and linings	55	Valve cover and fittings (S.V. models)	15
Hubs (parts common to both front and rear)	56	Valves, guides, springs and fittings	24
Kickstarter parts	48	Voltage regulator and fittings	73
Legshields and fittings	74	Wheel—complete assemblies (front and rear)	51
		Wheel rims and spokes	53
		Wheel with hub shell only (front and rear)	51

INSTRUCTIONS FOR ORDERING SPARE PARTS.

This Spare Parts List deals with replacement parts for Models 1, 16H, 18 and ES2 of 1948, 1949 manufacture, and for Models 30, 30M, 40 and 40M of 1945, 1946, 1947, 1948 and 1949 manufacture.

It is most essential that the Engine and Frame Number of the machine is stated. The Engine Number is to be found on the transmission side of the Crankcase, and the Frame Number is stamped on the Head Lug of the Frame, below the steering damper anchor plate. It is always advisable to order parts on a separate sheet, and not to include on the same sheet other matter of a different nature; this facilitates prompt despatch.

It is found in a number of instances that money orders and postal orders are sent in parcels containing patterns; this is inadvisable. We strongly recommend parts as patterns being despatched separately, and a covering letter sent containing the remittance for replacement parts.

RETURNING MACHINES FOR OVERHAULING.

When returning machines or parts for repair or overhaul, these should be sent carriage paid, and with the sender's name and address in full securely attached. It is also advisable to state on the tally that a letter has been sent respecting the parts, and giving the date. All easily detached fittings should be removed, such as Lamps, Horns, Tool Bags, Speedometers, etc.; these are liable to be lost or damaged in transit, and the Company cannot accept any responsibility for them.

ESTIMATES FOR REPAIRING MACHINES.

We are always prepared to give approximate estimates for the cost of repairs; it is quite impossible to give a firm quotation. Additional parts may be found necessary during the process of repair, unforeseen when preparing an estimate. Should our estimate for repair not be accepted, a charge may be made in accordance with work entailed in dismantling and re-assembling. When we give an estimate for the cost of repairs, and this is curtailed by the owner, we cannot accept any responsibility for the performance of the machine; it is always preferable to accept our estimate in full.

TERMS OF BUSINESS.

Our terms are strictly nett cash with order or cash against prepayment invoice. The exact amount, plus 5% to cover postage or carriage and packing (subject to a minimum of 6d.), packing cases or crates to be extra, must be remitted, or when the cost of the parts required is unknown, a sum likely to cover the cost should be enclosed; if the amount remitted is more than the cost of the parts that are ordered, the balance will be returned. Cheques and postal orders should be made payable to "Norton Motors, Ltd.," and crossed Barclays Bank, Ltd. Prices quoted in this list do not include the cost of carriage or fitting. We reserve the right to alter prices or specification of any parts at any time without notice. Where parts are urgently required, remittance may be sent by Telegraphic Money Order, but it is absolutely essential that the sender fill in his name and address in the space provided on the Post Office Money Order Form. Unless this is done, the Post Office do not give us the information in the telegram. It is necessary that all orders given by wire or 'phone should be confirmed by letter at the earliest opportunity.

DEPOSIT ACCOUNT.

We strongly recommend riders of our machines to open a deposit account; this can be done by depositing with us not less than £10. This will ensure goods to that value being despatched with the least possible delay. When ordering by 'phone, wire or post, this often avoids great inconvenience, and for the benefit of the depositor, a monthly statement of account is rendered, showing credit balance. Under no circumstances whatever can parts be despatched without remittance covering same has been sent, unless a deposit account is opened. Should the machine be disposed of at a later date, we are always prepared to remit any amount that may be remaining.

PARTS BY C.O.D. SYSTEM.

Unless remittance is received with order, parts are despatched by C.O.D. System or against proforma invoice at our discretion.

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	--------------	---------------------------


CRANKCASE AND FITTINGS.

C2/1	...	Crankcase with timing cover, magneto chain cover and bushes (Less studs and tappet guides)	1	18, ES2 1, 16H,	12 12 0
A11/1	...	Crankcase with bevel cover, magneto chain cover and bushes	1	30 ...	17 0 0
A10/1	...	Crankcase with bevel cover, magneto chain cover and bushes	1	40 ...	17 0 0
A11M/1	...	Crankcase with bevel cover, magneto chain cover and bushes	1	30M ...	22 0 0
A10M/1	...	Crankcase with bevel cover, magneto chain cover and bushes	1	40M (1946/7)	22 0 0
C10M/1	...	Crankcase with bevel cover, magneto chain cover and bushes	1	40M (1948/9)	22 0 0
A2/703	A.38	Driving side half crankcase	1	1, 16H, 18, ES2	4 0 0
A11/703	...	Driving side half crankcase	1	30 ...	4 10 0
A10/703	...	Driving side half crankcase	1	40 ...	4 10 0
A11M/703	...	Driving side half crankcase	1	30M ...	7 0 0
A10M/703	...	Driving side half crankcase	1	40M (1946/7)	7 0 0
C10M/703	...	Driving side half crankcase	1	40M (1948/9)	7 0 0
C2/704	A.44	Timing side half crankcase	1	1, 16H, 18, ES2	5 6 0
A11/704	...	Timing side half crankcase	1	30 ...	9 4 0
A10/704	...	Timing side half crankcase	1	40 ...	9 4 0
A11M/704	...	Timing side half crankcase	1	30M ...	11 0 0
A10M/704	...	Timing side half crankcase	1	40M (1946/7)	11 0 0
C10M/704	...	Timing side half crankcase	1	40M (1948/9)	11 0 0

(Halves of crankcases cannot be supplied separately. Therefore, it is necessary to return the sound half also timing or bevel covers for matching in the works).

A2/2	A.8	Crankcase cylinder stud	4	1, 16H	1 0
A3/2	A.15	Crankcase cylinder stud	4	18, ES2	1 0
A11/2	B.31	Crankcase cylinder stud	4	30, 30M	1 6
A10/2	B.31	Crankcase cylinder stud	4	40, 40M	1 6
A2/3	C.39	Crankcase cylinder stud nut	3	1, 16H	1 8
C2/686	C.38	Crankcase cylinder stud nut (long)	1	1, 16H	1 8
C2/6	A.20	Crankcase timing cover with bushes	1	1, 16H, 18, ES2	2 10 0
A11/7	B.15	Crankcase bevel cover with bush	1	30 ...	2 5 0
A11M/7	B.15	Crankcase bevel cover with bush	1	30M, (40M 1948/9)	2 7 6
A10/7	B.15	Crankcase bevel cover with bush	1	40 ...	2 5 0
A10M/7	B.15	Crankcase bevel cover with bush	1	40M (1946/7)	2 7 6
A11/38	B.14	Crankcase bevel cover bush	1	30, 30M, 40, 40M	6 0
A11/44	B.31	Crankcase bevel cover paper washer	1	30, 30M, 40, 40M	10
A11/45	B.67	Oil filter for crankcase bevel chamber ...	1	30, 30M, 40, 40M	5 0
E5264	B.66	Oil filter washers	1	30, 30M, 40, 40M	3
A11/36	...	Crankcase sump screw	1	30, 30M, 40, 40M	6
A3/93	A.16	Timing cover screw cheese head (top) ...	3	1, 16H, 18, ES2	5
C2/96	A.17	Timing cover screw cheese head (bottom)	3	1, 16H, 18, ES2	5
C2/37	A.18	Timing cover screw, countersunk	2	1, 16H, 18, ES2	5
A11/687	...	Crankcase bevel cover screw	5	30, 30M, 40, 40M	5

PLATE. A.

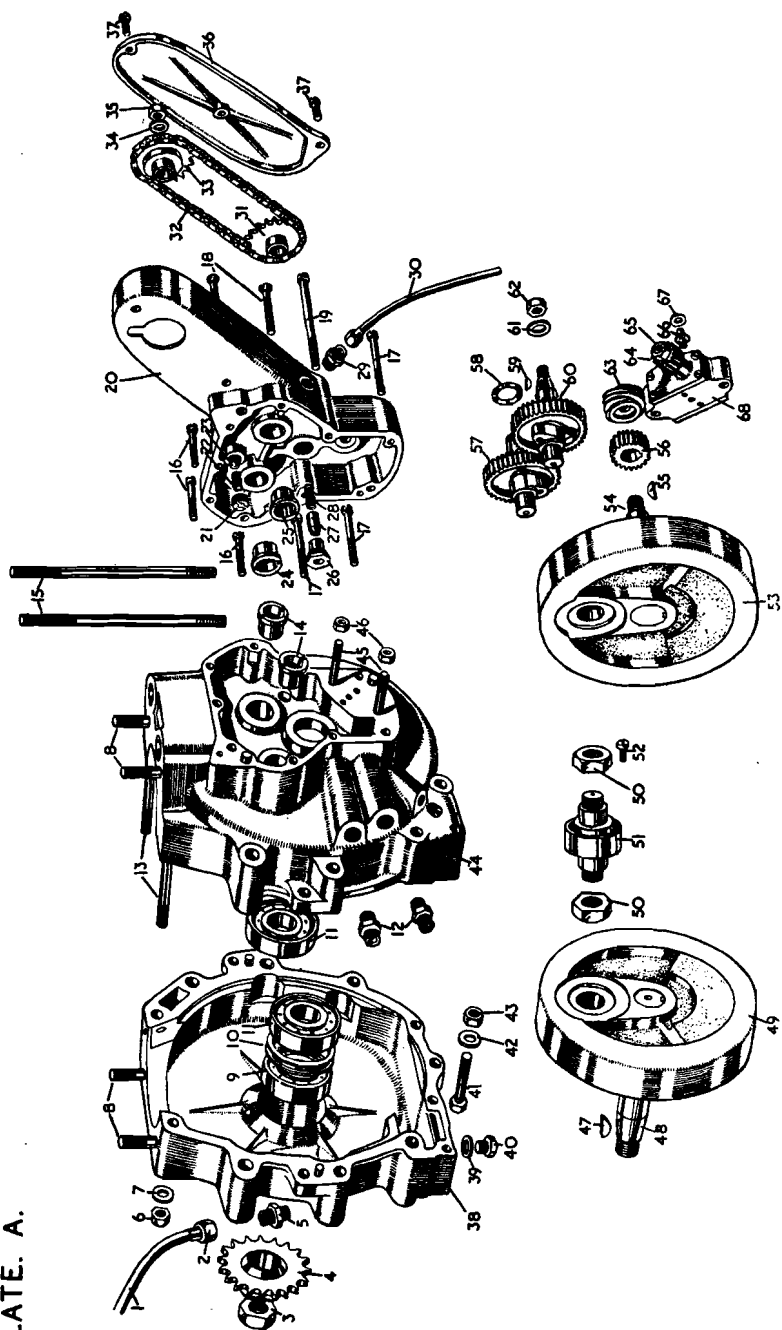

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
CRANKCASE AND FITTINGS—cont.					
A2/9	...	A.36 Magneto chain cover	1	1, 16H, 18, ES2	16 0
A11M/9	...	B.3 Magneto chain cover	1	30M, 40M	17 6
A11/9	...	B.51 Magneto chain cover	1	30, 40	16 0
C2/687	...	A.37 Magneto chain cover screw (short)	2	1, 16H, 18, ES2	5
A11/688	...	B.2 Magneto chain cover screw (long)	1	30, 40, 30M, 40M	9
C2/688	...	A.19 Magneto chain cover screw (long)	1	1, 16H, 18, ES2	9
A11/687	...	B.1 Magneto chain cover screw (short)	1	30, 40, 30M, 40M	5
A2/722	...	Fibre washers for cheese head screws	9	1, 16H, 18, ES2	1
A2/10	...	A.30 Magneto chain cover pipe with nut	1	1, 16H, 18, ES2	3 0
A2/11	...	A.29 Magneto chain cover pipe union	1	1, 16H, 18, ES2	1 6
A11/717	...	B.23 Crankcase bottom bevel chamber pressure release pipe	1	30, 30M, 40, 40M	3 0
A2/718	...	B.24 Crankcase bottom bevel chamber pressure release pipe nut	1	30, 30M, 40, 40M	3
A11/719	...	B.25 Crankcase bottom bevel chamber pressure release pipe union	1	30, 30M, 40, 40M	2 6
C2/12	...	A.27 Timing cover and mainshaft oil connection jet	1	1, 16H, 18, ES2	4 0
A11/12	...	B.12 Bevel cover and mainshaft oil connection jet	1	30, 30M, 40, 40M	4 0
C2/13	...	A.26 Timing cover and mainshaft oil connection jet holder	1	1, 16H, 18, ES2	5 0
A11/13	...	B.13 Bevel cover and mainshaft oil connection jet holder	1	30, 30M, 40, 40M	5 0
A2/14	...	A.28 Mainshaft oil connection jet spring	1	1, 16H, 18, ES2	3
A11/14	...	B.11 Mainshaft oil connection jet spring	1	30, 30M, 40, 40M	3
A11/716	...	B.10 Mainshaft oil connection jet holder nut ...	1	30, 30M, 40, 40M	1 0
A2/15	...	A.23 Pressure release ball $\frac{1}{4}$ in.	1	1, 16H, 18, ES2	3
A2/16	...	A.22 Pressure release ball spring	1	1, 16H, 18, ES2	2
C2/17	...	A.21 Pressure release ball screw	1	1, 16H, 18, ES2	8
A11/42	...	B.18 Pressure release adjusting screw	1	30, 30M, 40, 40M	2 0
A11/43	...	B.19 Pressure release adjusting screw locknut ..	1	30, 30M, 40, 40M	4
A11/15	...	B.21 Pressure release ball $\frac{3}{8}$ in.	1	30, 30M, 40, 40M	3
A11/16	...	B.20 Pressure release ball spring	1	30, 30M, 40, 40M	3
C2/18	...	A.14 Camshaft bush crankcase (inlet or exhaust)	2	1, 16H, 18, ES2	5 0
C2/19	...	A.25 Camshaft bush (timing cover) inlet	1	1, 16H, 18, ES2	5 0
A2/20	...	A.24 Camshaft bush (timing cover) exhaust ...	1	1, 16H, 18, ES2	5 0
13765	...	A.40 Crankcase drain plug	1	1, 16H, 18, ES2	1 0
13881	...	A.39 Crankcase drain plug washer	1	1, 16H, 18, ES2	3

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
CRANKCASE AND FITTINGS—cont.					
E3336	... B.32	Crankcase drain plug	1	30, 30M 40, 40M	1 0
E5264	... B.33	Crankcase drain plug washer	1	30, 30M 40, 40M	3
A2/476	...	Crankcase breather with pipe (driving side)	1	1, 16H, 18, ES2	3 6
A2/707	... A.5	Crankcase breather	1	1, 16H, 18, ES2	2 0
A2/708	... A.1	Crankcase breather pipe	1	1, 16H, 18, ES2	1 3
A2/718	... A.2	Crankcase breather pipe nut	1	1, 16H, 18, ES2	3
A11/476	...	Crankcase breather with pipe (driving side)	1	30, 30M, 40, 40M	5 6
A2/707	... B.45	Crankcase breather (driving side)	1	30, 30M, 40, 40M	2 0
A11/708	... B.47	Crankcase breather pipe (driving side) ...	1	30, 30M, 40, 40M	3 6
A2/718	... B.46	Crankcase breather pipe nut (driving side)	1	30, 30M, 40, 40M	3
A11M/720	... B.48	Crankcase pressure release pipe (front)	1	30M, 40M	4 0
A2/718	... B.49	Crankcase pressure release pipe nut	1	30M, 40M	3
A11/719	... B.50	Crankcase pressure release pipe union (front)	1	30M, 40M	2 6
A2/721	... A.12	Crankcase oil delivery or return pipe union	1	1, 16H, 18, ES2	2 6
A11/721	... B.22	Crankcase oil delivery or return pipe union	1	30, 30M, 40, 40M	3 0
A11/719	... B.27	Crankcase to rocker box oil pipe union ...	1	30, 30M, 40, 40M	2 6
A11/8	... B.26	Oil pump tell tale	1	30, 40	12 0
A11/39	... B.70	Cylinder feed lubrication crankcase bolt ..	1	30, 30M, 40, 40M	7 0
A11/878	... B.69	Cylinder feed lubrication bolt nut	1	30, 30M, 40, 40M	1 0
A11/879	... B.71	Cylinder feed lubrication bolt washer	1	30, 30M, 40, 40M	3
A11/40	... B.67	Cylinder feed lubrication adjuster screw ..	1	30, 30M, 40, 40M	2 0
A11/41	... B.68	Cylinder feed lubrication adjuster screw nut	1	30, 30M, 40, 40M	4

FLYWHEELS, ASSEMBLIES AND BIG END BEARINGS.

C7/24	...	Flywheels complete with shafts, crankpin bearing and con rod	1	1 ... 11	3 0
C3/24	...	Flywheel complete with shafts, crankpin bearing and con rod	1	18, ES2	11 3 0
C2/24	...	Flywheels complete with shafts, crankpin bearing and con rod	1	16H ... 11	3 0
A11/24	...	Flywheels complete with shafts, crankpin bearing and con rod	1	30 ... 13	0 0
A11M/24	...	Flywheels complete with shafts, crankpin bearing and con rod	1	30M ... 18	0 0
A10/24	...	Flywheels complete with shafts, crankpin bearing and con rod	1	40 ... 13	0 0
A10M/24	...	Flywheels complete with shafts, crankpin bearing and con rod	1	40M ... 18	0 0
C10M/24	...	Flywheels complete with shafts, crankpin bearing and con rod	1	(1946/7) 40M ... 18	0 0
C7/25	... A.53	Flywheel timing side with shaft	1	(1948/9) 1	3 8 0
C2/25	... A.53	Flywheel timing side with shaft	1	16H, 18, ES2	3 8 0
A11/25	... B.60	Flywheel timing side with shaft	1	30 ... 3	15 0
A11M/25	... B.60	Flywheel timing side with shaft	1	30M ... 5	0 0
A10/25	... B.60	Flywheel timing side with shaft	1	40 ... 3	15 0
A10M/25	... B.60	Flywheel timing side with shaft	1	40M ... 5	0 0
				(1946/7)	

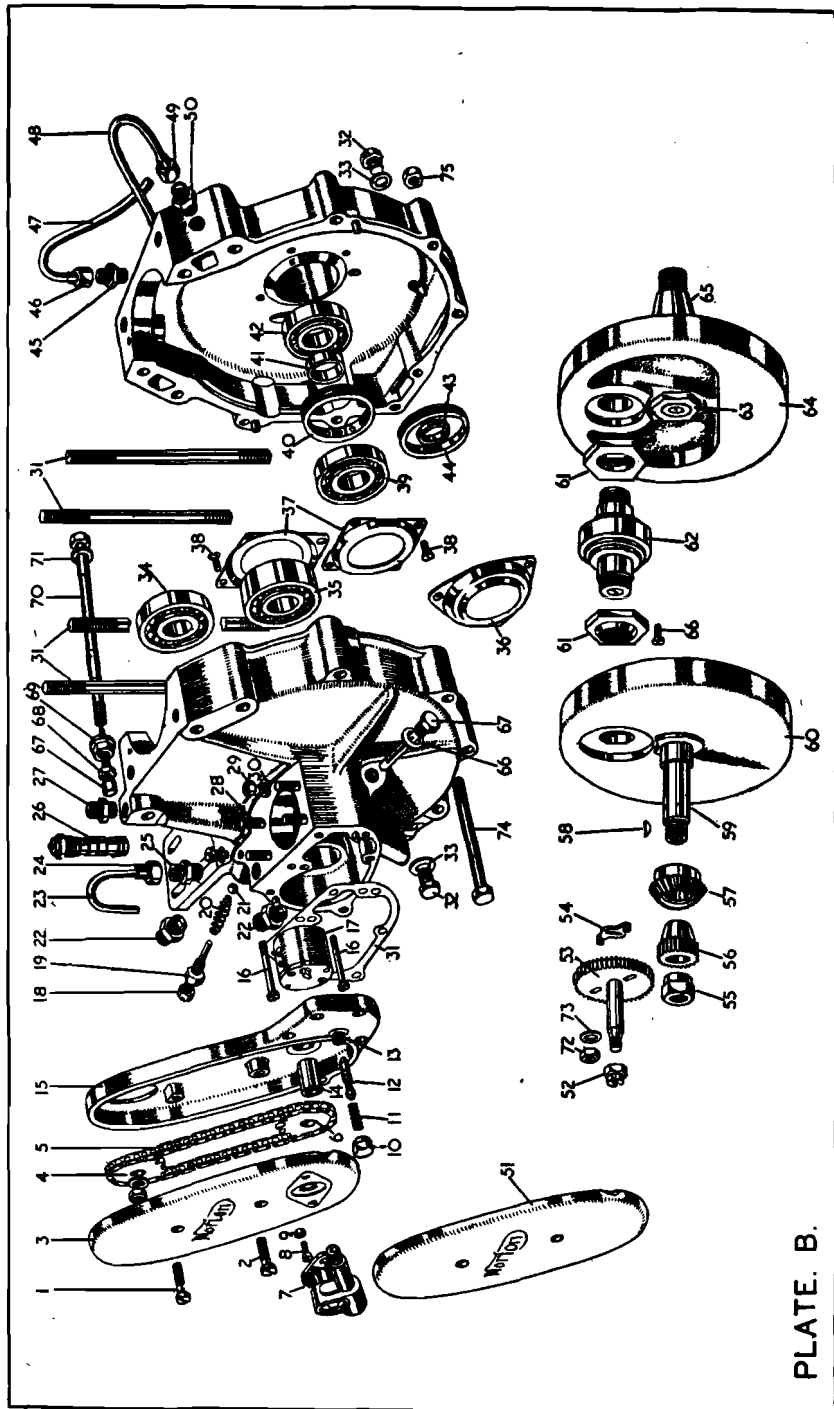


PLATE. B.

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
FLYWHEELS, ASSEMBLIES AND BIG END BEARINGS—cont.					
C10M/25 ...	B.60	Flywheel timing side with shaft	1	40M ... (1948/9)	5 0 0
C7/26 ...	A.49	Flywheel driving side with shaft	1	1 ...	3 8 0
C2/26 ...	A.49	Flywheel driving side with shaft	1	16H, 18, ES2 ...	3 8 0
A11/26 ...	B.64	Flywheel driving side with shaft	1	30 ...	3 10 0
A11M/26 ...	B.64	Flywheel driving side with shaft	1	30M ...	4 17 6
A10/26 ...	B.64	Flywheel driving side with shaft	1	40 ...	3 10 0
A10M/26 ...	B.64	Flywheel driving side with shaft	1	40M ... (1946/7)	4 17 6
C10M/26 ...	B.64	Flywheel driving side with shaft	1	40M ... (1948/9)	4 17 6
C2/705 ...	A.54	Timing side flywheel shaft	1	1, 16H, 18, ES2 ...	1 5 0
A11/705 ...	B.59	Timing side flywheel shaft	1	30, 30M, 40, 40M ...	1 15 0
A2/706 ...	A.48	Driving side flywheel shaft	1	1, 16H, 18, ES2 ...	1 7 6
A11/706 ...	B.65	Driving side flywheel shaft	1	30, 30M, 40, 40M ...	2 0 0
E3682 ...		Key for flywheel shaft	1	All Models	4
A11/723 ...	B.63	Timing or driving side flywheel shaft securing nut	1	30, 30M, 40, 40M ...	2 6
A11/724 ...		Timing side flywheel shaft plug	1	30, 30M, 40, 40M ...	1 0

NOTE:—We recommend Flywheels be returned to the works for the fitting of Shafts.

A2/27 ...	A.51	Crankpin bearing with nuts	1	1, 16H, 18, ES2 ...	2 16 0
A11/27 ...	B.62	Crankpin bearing with nuts	1	30 ...	3 16 0
A11M/27 ...	B.62	Crankpin bearing less nuts	1	30M, 40M ...	4 10 0
A10/27 ...	B.62	Crankpin bearing with nuts	1	40 ...	3 16 0

NOTE:—Crankpin bearing for Manx models is supplied less nuts, unless ordered additionally.

A2/28 ...	A.50	Crankpin bearing nut	2	1, 16H, 18, ES2 ...	1 4
A11/28 ...	B.61	Crankpin bearing nut	2	30 ...	4 0
A11M/28 ...	B.61	Crankpin bearing nut	2	30M ...	4 0
A10/28 ...	B.61	Crankpin bearing nut	2	40 ...	4 0
A10M/28 ...	B.61	Crankpin bearing nut	2	40M ...	4 0
A2/29 ...	A.52/B.66	Crankpin bearing nut locking screw	2	All Models	3

NOTE:—Crankpin Spare Parts cannot be supplied separately, each Outer Race has its individual Pin.

MAIN BEARINGS.

A2/30 ...	A.9	Mainshaft ball bearing driving side	1	1, 16H, 18, ES2 ...	1 2 0
A2/32 ...	A.11	Mainshaft roller bearings	2	1, 16H, 18, ES2 ...	1 10 4
A11/31 ...	B.34	Mainshaft ball bearing timing side	1	30, 40 ...	1 5 6
A11M/31 ...	B.35	Mainshaft ball bearing timing side	1	30M, 40M ...	1 15 0
A11/32 ...	B.39	Mainshaft bearing driving side roller	1	30, 30M, 40, 40M ...	1 19 0
A11/30 ...	B.42	Mainshaft bearing driving side ball	1	30, 30M, 40, 40M ...	1 3 6
A2/33 ...	A.10	Mainshaft bearing driving side oil spacing ring	1	1, 16H, 18, ES2 ...	2 0
A11/33 ...	B.40	Mainshaft bearing driving side oil spacing ring	1	30, 40 ...	2 0
A10/33 ...	B.44	Mainshaft bearing driving side oil spacing ring	1	30M, 40M ...	2 0
A11/834 ...	B.41	Mainshaft bearing distance piece driving side	1	30, 40 ...	9
A11M/835 ...	B.43	Mainshaft bearing distance piece driving side	1	30M, 40M ...	9

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
MAIN BEARINGS—cont.					
A11/34 ...	B.36	Mainshaft bearing securing plate	2	30, 40 ...	3 6
A11M/34 ...	B.37	Mainshaft bearing securing plate	2	30M, 40M	3 6
A11/35 ...	B.38	Mainshaft bearing securing plate screw ...	3	30, 40 ...	3
			4	30M, 40M	3
A2/46 ...		Mainshaft packing washer	1	1, 16H, 18, ES2	4
A11/46 ...		Mainshaft packing washer between main- shaft bearing and flywheel driving side	1	30, 30M, 40, 40M	4

CRANKCASE, ENGINE PLATE BOLTS, STUDS, ETC., O.H.C. MODELS.


12747 ...	W.20	Front engine plate and horn attachment bolt	1	30, 40 ...	2 6
E3238 ...	W.18	Front engine plate and horn attachment bolt nut	1	30, 40 ...	5
E5375 ...	W.19	Front engine plate and horn attachment washer	2	30, 40 ...	3
E3224 ...	W.21	Horn fixing bolt nut	1	30, 40 ...	4
E4256 ...	W.14	Front and rear engine plate crankcase bolt	4	30, 40 ...	2 6
E3238 ...	W.22	Front and rear engine plate crankcase bolt nut	4	30, 40 ...	5
E5375 ...	W.15	Front and rear engine plate crankcase bolt washer	8	30, 40 ...	3
E4268 ...	W.23	Rear engine plate frame attachment bolt, 7/16 in. x 7/16 in.	2	30, 40 ...	1 6
E4261 ...	W.26	Crankcase and rear engine plate stud bottom	1	30, 40 ...	1 6
E3223 ...	W.27	Crankcase and rear engine plate stud nut	2	30, 40 ...	4
E4262 ...	B.74/W.28	Crankcase frame cradle bolt	2	30, 30M, 40, 40M	2 6
E3223 ...	B.75/W.29	Crankcase frame cradle bolt nut	2	30, 30M, 40, 40M	4
13289 ...	X.31	Front engine plate and frame bolt (drilled)	1	30M, 40M	7 6
E3227 ...	X.33	Front engine plate and frame bolt nut ...	1	30M, 40M	5
11809 ...	X.32	Front engine plate and frame bolt washer	2	30M, 40M	3
10410 ...	X.28	Crankcase and front engine plate bolt, bottom	1	30M, (40M 1948/9)	1 6
E3238 ...	X.30	Crankcase and front engine plate bolt nut	1	30M, (40M 1948/9)	5
E5375 ...	X.29	Crankcase and front engine plate bolt washer	2	30M, (40M 1948/9)	3
13294 ...	X.25	Crankcase and front engine plate bolt, top	1	30M, (40M 1948/9)	2 6
E3224 ...	X.27	Crankcase and front engine plate bolt nut	1	30M, (40M 1948/9)	4
E5376 ...	X.26	Crankcase and front engine plate bolt washer	2	30M, (40M 1948/9)	3
13293 ...		Crankcase bolt front (centre)	1	30M, (40M 1948/9)	5 0
E3238 ...		Crankcase bolt front nut	1	30M, (40M 1948/9)	5
E5375 ...		Crankcase bolt front washer	2	30M, (40M 1948/9)	3
E4251 ...		Crankcase and front chainguard attach- ment bolt	1	30M, (40M 1948/9)	2 6
E3224 ...		Crankcase and front chainguard attach- ment bolt nut	2	30M, (40M 1948/9)	4
E5376 ...		Crankcase and front chaincase attachment bolt washer	2	30M, (40M 1948/9)	3
E4268 ...	X.2	Rear engine plate frame attachment bolt	2	30M, 40M	1 6
10432 ...	X.1	Crankcase and rear engine plate bolt	2	30M, (40M 1948/9)	2 6

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
CRANKCASE, ENGINE PLATE BOLTS, STUDS, ETC., O.H.C. MODELS—cont.					
E3238	... X.6	Crankcase and rear engine plate bolt nut .	2	30M, (40M 1948/9)	5
E5375	... X.5	Crankcase and rear engine plate bolt nut washer	4	30M, (40M 1948/9)	3
E4261	... X.7	Crankcase and rear engine plate stud bottom	1	30M, (40M 1948/9)	1 6
E3223	... X.9	Crankcase and rear engine plate bolt nut .	2	30M, (40M 1948/9)	4
E5456	... X.8	Crankcase and rear engine bolt washer ...	2	30M, (40M 1948)	3
13294	...	Crankcase and front engine plate bolt ...	2	40M (1945/6/7)	2 6
E3224	...	Crankcase and front engine plate bolt nut	2	40M (1945/6/7)	4
E5376	...	Crankcase and front engine plate bolt washer	2	40M (1945/6/7)	3
E4251	...	Bottom crankcase and front chainguard attachment bolt	1	40M (1945/6/7)	2 6
E3224	...	Bottom crankcase and front chainguard attachment bolt nut	2	40M (1945/6/7)	4
E4260	...	Crankcase bolt top (front)	1	40M (1945/6/7)	1 6
E3224	...	Crankcase bolt top nut	1	40M (1945/6/7)	4
E5376	...	Crankcase bolt top washer	2	40M (1945/6/7)	3
E4251	...	Crankcase and rear engine plate bolt	3	40M (1945/6/7)	2 6
E3224	...	Crankcase and rear engine plate bolt nut	3	40M (1945/6/7)	4
E5376	...	Crankcase and rear engine plate bolt washer	6	40M (1945/6/7)	3
13870	... A.41	Crankcase bolt, short	3	30, 30M, 40, 40M	1 0
E3223	... A.43	Crankcase bolt nut	3	30, 30M, 40, 40M	4
E5456	... A.42	Crankcase bolt washer	3	30, 30M, 40, 40M	4

CRANKCASE, ENGINE PLATE BOLTS, STUDS, ETC., SIDE AND O.H.V. MODELS.

E4256	... Y.1	Mag. platform bolt, $\frac{7}{8}$ in. diameter	1	1, 16H, 18, ES2	2 6
E3238	... Y.9	Mag. platform nut, $\frac{7}{8}$ in. diameter	1	1, 16H, 18, ES2	5
E5377	... Y.2	Mag. platform nut washer	2	1, 16H, 18, ES2	3
E3209	... A.13	Top crankcase stud, $\frac{1}{2}$ in. diameter	2	1, 16H, 18, ES2	2 6
E3223	... A.6	Top crankcase stud nuts, $\frac{1}{2}$ in. diameter ..	2	1, 16H, 18, ES2	4
E5456	... A.7	Top crankcase stud nut washer	2	1, 16H, 18, ES2	4
E3166	... Y.33	Front engine plate crankcase bolt, $\frac{7}{8}$ in. dia.	2	1, 16H, 18, ES2	2 6
E3238	... Y.35	Front engine plate bolt nut	2	1, 16H, 18, ES2	5
E5375	... Y.34	Front engine plate bolt nut washer	2	1, 16H, 18, ES2	3
E4256	...	Rear engine plate bolt, $\frac{7}{8}$ in. diameter ...	2	1, 16H, 18, ES2	2 6

PLATE. C.

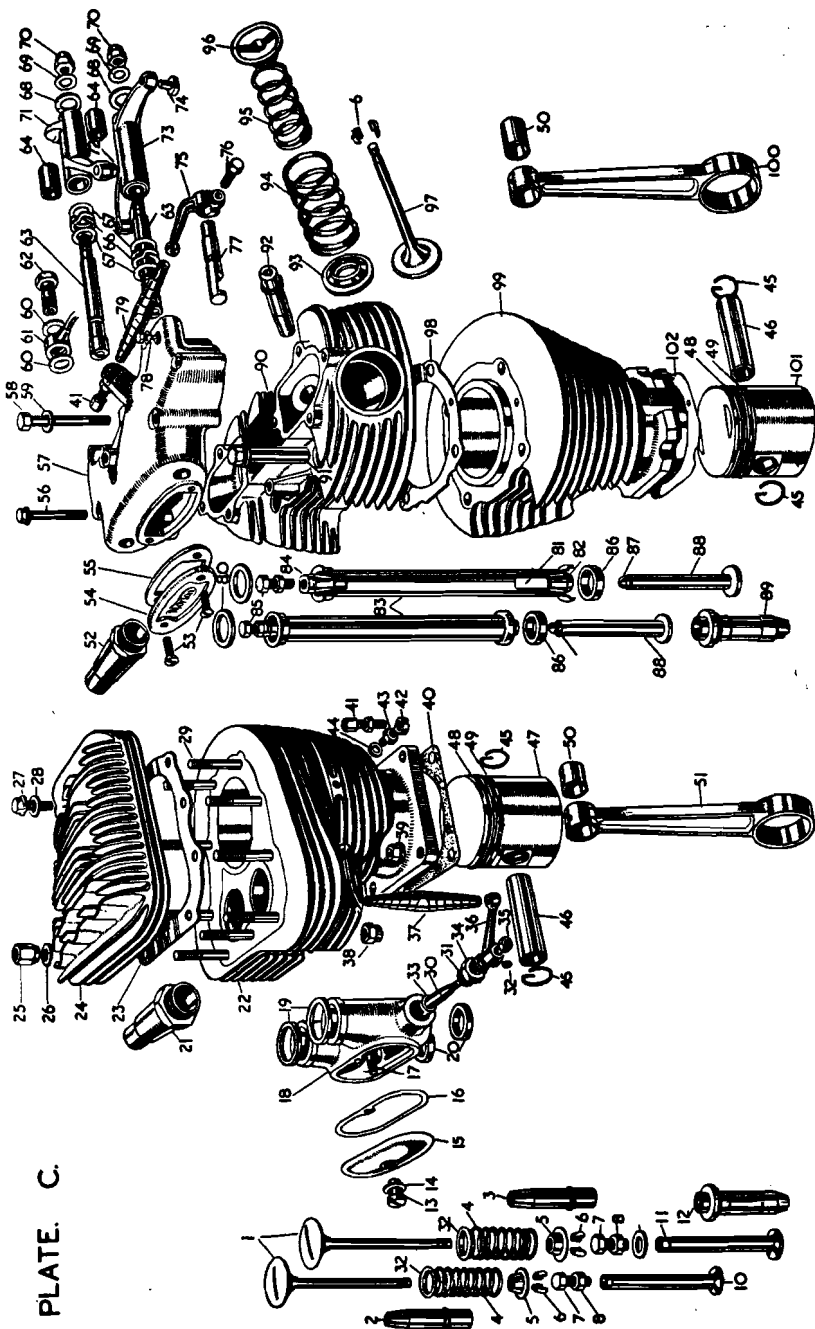

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
CRANKCASE, ENGINE PLATE BOLTS, STUDS, ETC., SIDE AND O.H.V. MODELS—cont.					
E3238	...	Rear engine plate bolt nut	2	1, 16H, 18, ES2	5
E5375	...	Rear engine plate bolt washer	2	1, 16H, 18, ES2	3
E4268	... Y.3	Rear engine plate bolt, $\frac{7}{8}$ in. diameter ...	2	1, 16H, 18, ES2	1 6
11779	...	Bottom front crankcase stud, $\frac{3}{8}$ in. diameter	1	1, 16H, 18, ES2	2 6
E3224	...	Bottom front crankcase stud nut	1	1, 16H, 18, ES2	4
E4259	...	Rear bottom crankcase bolt, $\frac{3}{8}$ in. diameter	1	1, 16H, 18, ES2	2 6
E3224	...	Rear crankcase bolt nut	1	1, 16H, 18, ES2	4
E5376	...	Rear crankcase bolt washer	1	1, 16H, 18, ES2	3
E4262	... X.11	Engine cradle bolt, $\frac{7}{8}$ in. diameter	1	1, 16H, 18, ES2	2 6
E3223	... X.10	Engine cradle bolt nut	1	1, 16H, 18, ES2	4
13040	... Y.38	Front engine plate stud, $\frac{1}{2}$ in. diameter ...	1	1, 16H, 18, ES2	2 6
E3227	... Y.36	Front engine plate stud nut	2	1, 16H, 18, ES2	5
11809	... Y.37	Front engine plate stud nut washer	2	1, 16H, 18, ES2	3
13870	... A.41	Crankcase bolt, short	3	1, 16H, 18, ES2	1 0
E3223	... A.43	Crankcase bolt nut	3	1, 16H, 18, ES2	4
E5456	... A.42	Crankcase bolt washer	3	1, 16H, 18, ES2	4

TIMING GEAR.

C2/58	... A.56	Half time pinion	1	1, 16H, 18, ES2	10 0
A2/59	... A.55	Half time pinion key	1	1, 16H, 18, ES2	3
C2/60	... A.57	Exhaust cam wheel complete	1	1, 16H, 18, ES2	2 7 0
C3/60	... A.57	Exhaust cam wheel complete	1	1, 16H, 18, ES2	2 7 0
C2/61	... A.60	Inlet cam wheel complete	1	1, 16H, 18, ES2	2 10 0
C3/61	... A.60	Inlet cam wheel complete	1	1, 16H, 18, ES2	2 10 0
C2/694	... A.58	Cam wheel packing washer	2	1, 16H, 18, ES2	2

TAPPETS.

C2/63	... C.12	Tappet guide	2	1, 16H, 18, ES2	12 6
C3/63	... C.89	Tappet guide	2	1, 16H, 18, ES2	12 6
C2/689	...	Tappet guide location peg	2	1, 16H, 18, ES2	3
C2/75	...	Tappet adjustable inlet, complete	1	1, 16H, 18, ES2	12 6
C2/76	...	Tappet adjustable exhaust, complete	1	1, 16H, 18, ES2	12 6
C3/75	... C.88	Tappet complete	2	1, 16H, 18, ES2	12 6
C2/691 (In)	... C.10	Tappet only, inlet	1	1, 16H, 18, ES2	10 0
C2/691 (Ex)	... C.11	Tappet only, exhaust	1	1, 16H, 18, ES2	10 0
C2/692	... C.9	Tappet washer (exhaust)	1	1, 16H, 18, ES2	6
C2/77	... C.7	Tappet adjuster	2	1, 16H, 18, ES2	2 0
A2/78	... C.8	Tappet adjuster nut	2	1, 16H, 18, ES2	6
C3/693	... C.87	Tappet ball end	2	1, 16H, 18, ES2	3 6

EXHAUST LIFTER AND FITTINGS.

For Crankcase and Rocker Box. (Side and O.H.V. Models).

C2/64	... C.30	Exhaust valve lifter	1	1, 16H, 18, ES2	5 0
C3/64	... C.77	Exhaust valve lifter	1	1, 16H, 18, ES2	7 0

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	--------------	---------------------------

EXHAUST LIFTER AND FITTINGS—cont.

For Crankcase and Rocker Box. (Side and O.H.V. Models.)

A3/66	... C.78	Exhaust valve lifter securing pin	1	18, ES2	5
C2/67	... C.36	Exhaust valve lifter lever	1	1, 16H	9 8
A2/67	... C.75	Exhaust valve lifter lever	1	18, ES2	9 8
A2/68	... C.76	Exhaust valve lifter lever securing bolt	1	18, ES2	6
E3229	... C.35	Exhaust valve lifter lever securing nut	1	1, 16H	4
10771	... C.32	Exhaust valve lifter lever securing nut washer	1	1, 16H	3
A2/69	... C.37	Exhaust valve lifter return spring	1	1, 16H	2 8
A3/69	... C.79	Exhaust valve lifter return spring	1	18, ES2	2 8
C2/65	... C.34	Exhaust valve lifter copper washer	1	1, 16H	3
C2/690	... C.33	Exhaust valve lifter rubber sealing washer	1	1, 16H, 18, ES2	6
C2/695	... C.31	Exhaust valve lifter bush	1	1, 16H	2 3
C2/728	... C.42	Exhaust valve lifter cable adjuster stop	1	1, 16H	2 3
13933	... C.43	Exhaust valve lifter cable adjuster stop nut	1	1, 16H	3
13834	... C.44	Exhaust valve lifter cable adjuster stop spring washer	1	1, 16H	3

EXHAUST LIFTER FITTINGS (For O.H.C. Rocker Box).

A11/64	... F.39	Exhaust lifter cam	1	30, 40 ...	3 6
A11/67	... F.37	Exhaust lifter cam lever	1	30, 40 ...	9 6
A2/68	... F.36	Exhaust lifter lever bolt	1	30, 40 ...	6
A3/69	... F.35	Exhaust lifter cam return spring	1	30, 40 ...	2 8
A11/728	... F.34	Exhaust lifter cable stop (for panel cover)	1	30, 40 ...	2 3
E3231	... F.32	Exhaust lifter cable stop nut	1	30, 40 ...	4
11796	... F.33	Exhaust lifter cable stop washer	1	30, 40 ...	3
A11/695	... F.38	Exhaust lifter cam bush (for panel cover)	1	30, 40 ...	2 3

VALVE COVER AND FITTINGS (Side Valve Models).

C2/696	... C.18	Valve chest (alum)	1	1, 16H	1 5 0
C2/70	... C.15	Valve chest cover	1	1, 16H	12 6
C2/71	... C.16	Valve chest cover washer	1	1, 16H	3
C2/72	... C.17	Valve chest cover securing stud	1	1, 16H	8
C2/73	... C.13	Valve chest cover securing stud nut	1	1, 16H	3 6
C2/74	... C.14	Valve chest cover stud nut fibre washer	1	1, 16H	4
C2/697	... C.19	Valve chest sealing washer, top	2	1, 16H	6
C3/88	... C.20	Valve chest sealing washer, bottom	2	1, 16H	6


PUSH RODS AND FITTINGS (For O.H.V. Models).

C3/82	... C.81	Push rod, complete	2	18, ES2	15 0
C3/83	... C.82	Push rod, bottom	2	18, ES2	5 6
C3/86	... C.84	Push rod, top	2	18, ES2	5 0
C3/87	... C.85	Push rod adjuster and locknut	2	18, ES2	6 0
C3/84	... C.83	Push rod cover	2	18, ES2	7 0
C3/88	... C.86	Push rod cover, bottom, sealing washer	2	18, ES2	6
C3/89	... C.80	Push rod cover, top, sealing washer	2	18, ES2	6

ROCKER BOX AND FITTINGS (O.H.V. Models).

C3/90	... C.57	Rocker box with cover	1	18, ES2	4 15 0
C3/92	... C.54	Rocker box inspection cover	1	18, ES2	3 0
C3/94	... C.53	Rocker box inspection cover screw	2	18, ES2	6
C3/95	... C.55	Rocker box inspection cover washer	1	18, ES2	1 0
C3/108	... C.58	Rocker box securing bolt, long	7	18, ES2	1 3
C3/110	... C.56	Rocker box securing bolt, short	2	18, ES2	9
A3/109	... C.59	Rocker box securing bolt washer	7	18, ES2	3
C3/699	M.42/C.61	Rocker box lubrication pipe with banjo connection	1	18, ES2	5 0
C3/700	... C.62	Rocker box lubrication pipe connection bolt	1	18, ES2	2 6
C3/701	... C.60	Rocker box lubrication pipe connection bolt washer	2	18, ES2	4

PLATE. D.

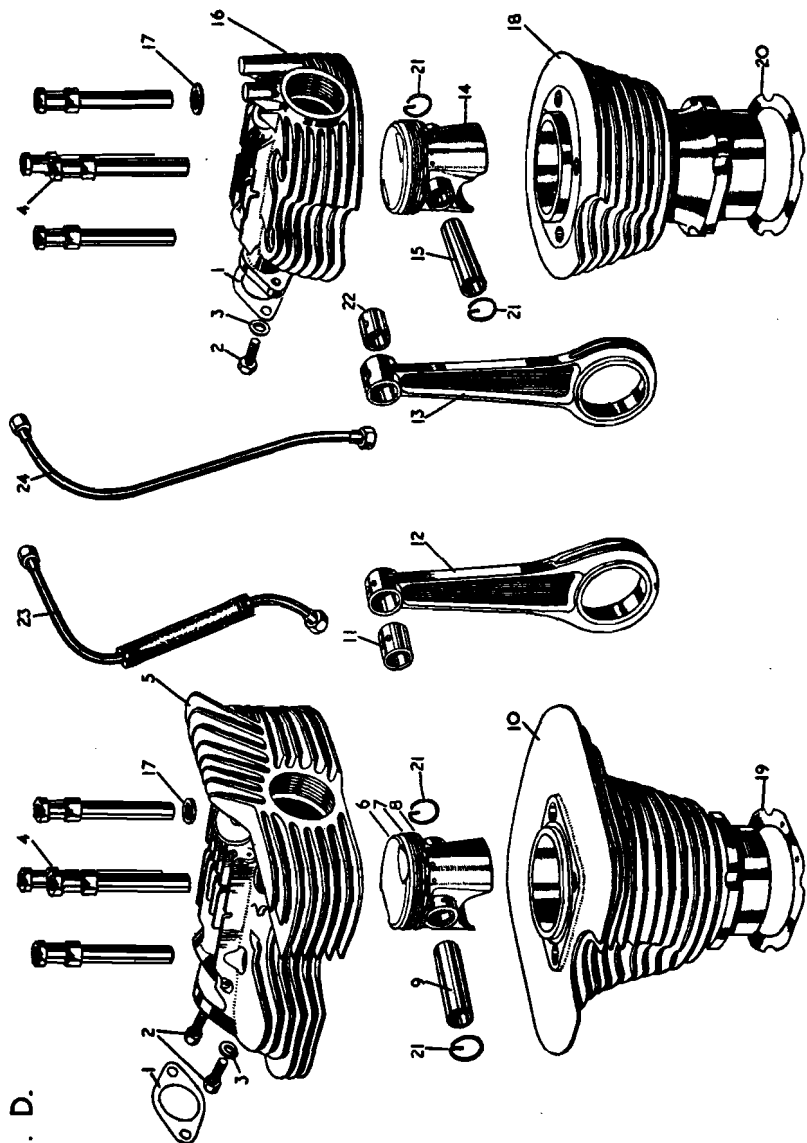

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	-------------	---------------------------


OVERHEAD ROCKERS.

C3/96	... C.64	Rocker bush	4	18, ES2	5 0
C3/97	... C.63	Rocker shaft	2	18, ES2	19 6
C3/98	... C.67	Rocker shaft shim washer (as necessary)		18, ES2	3
C3/102	... C.70	Rocker shaft nut	2	18, ES2	6
13802	... C.69	Rocker shaft nut copper washer	2	18, ES2	3
13794	... C.68	Rocker shaft washer, large	2	18, ES2	6
13818	... C.66	Rocker shaft thrust spring washer	2	18, ES2	4
C3/99	... C.71	Rocker arm, inlet	1	18, ES2	1 11 6
C3/100	... C.73	Rocker arm, exhaust	1	18, ES2	1 11 6
C3/104	... C.72	Rocker arm ball end	2	18, ES2	3 6
C3/105	... C.74	Rocker arm pad	2	18, ES2	5 0

O.H.C. VERTICAL SHAFT DRIVE AND ROCKER BOX, ETC.


A11/748	... B.57	Mainshaft bevel	1	30, 40 ...	3 0 0
A11M/748	... B.57	Mainshaft bevel	1	30M, 40M	3 0 0
A11/749	... B.58	Mainshaft bevel key	1	30, 30M, 40, 40M	4
A11/750	...	Mainshaft bevel washer	1	30, 30M, 40, 40M	4
A11/751	... E.20	Vertical shaft bottom bevel	1	30, 30M, 40, 40M	5 0 0
A11/752	... E.17	Vertical shaft bottom bevel housing with bush	1	30, 30M, 40, 40M	2 15 0
A11/753	... E.19	Vertical shaft bottom bevel bush	1	30, 30M, 40, 40M	13 0
A11/754	... E.7	Vertical shaft top or bottom bevel collar	1	30, 30M, 40, 40M	6
A11/755	... E.5	Vertical shaft top or bottom bearing	2	30, 30M, 40, 40M	16 6
A11/756	... E.16	Vertical shaft bottom bearing dished washer	1	30, 30M, 40, 40M	1 0
A11/757	... E.6	Vertical shaft top rubber ring, steel cup ...	1	30, 30M, 40, 40M	2 6
A11/758	... E.10	Vertical shaft top rubber ring	1	30, 30M, 40, 40M	1 6
A11/759	... E.15	Vertical shaft bottom rubber ring, steel cup	1	30, 30M, 40, 40M	2 6
A11/760	... E.13	Vertical shaft bottom rubber ring	1	30, 30M, 40, 40M	1 6
A11/761	... E.12	Vertical shaft tube top or bottom union nut	2	30, 30M, 40, 40M	7 0
A11/762	... E.11	Vertical shaft tube top or bottom union nut washer	2	30, 30M, 40, 40M	6
A11/763	... E.14	Vertical shaft	1	30 ...	3 10 0
A11M/763	... E.14	Vertical shaft	1	30M ...	3 10 0
A10/763	... E.14	Vertical shaft	1	40 ...	3 10 0
A10M/763	... E.14	Vertical shaft	1	40M ... (1946/7)	3 10 0
C10M/763	... E.14	Vertical shaft	1	40M ... (1948/9)	3 10 0
A11/764	... E.8	Vertical shaft top or bottom coupling	2	30, 30M, 40, 40M	12 6
A11/764P	...	Vertical shaft top or bottom coupling (thick) (for Pool petrol)	1	30, 30M, 40, 40M	12 6
A11/765	... E.9	Vertical shaft tube	1	30, 30M, 40, 40M	7 0
A11/766	... E.18	Vertical shaft bottom bearing housing packing washer	1	30, 30M, 40, 40M	6
A11/767	... E.1	Vertical shaft top bevel	1	30, 30M, 40, 40M	4 0 0
A11/768	... E.4	Vertical shaft top bevel housing with bush	1	30, 40 ...	2 15 0
A11M/768	... E.4	Vertical shaft top bevel housing with bush	1	30M, 40M	2 15 0

PLATE. E.

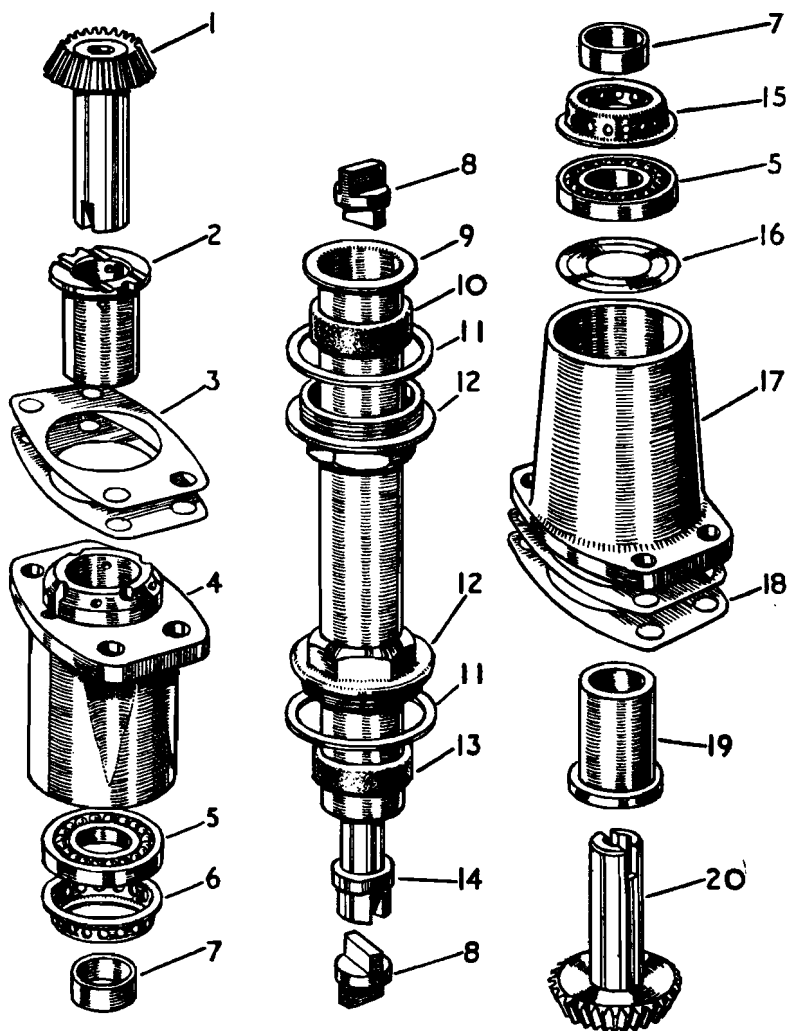

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
O.H.C. VERTICAL SHAFT DRIVE AND ROCKER BOX, ETC.—cont.					
A11/769 ...	E.2	Vertical shaft top bevel bush	1	30, 40 ...	13 0
A11M/769 ...	E.2	Vertical shaft top bevel bush	1	30M, 40M	13 0
A11/770 ...	E.3	Vertical shaft top bevel housing washer ...	1	30, 30M, 40, 40M	6
A11/771 ...	F.10	Camshaft bevel	1	30, 30M, 40, 40M	3 10 0
A11/772 ...	F.9	Camshaft bevel securing nut	1	30, 30M, 40, 40M	4
A11/773 ...	F.11	Camshaft bevel locating peg	1	30, 30M, 40, 40M	2
A11/774 ...		Camshaft bevel packing washer	1	30, 30M, 40, 40M	8
A11/775 ...	F.17	Distance piece between mainshaft and ballrace	1	30, 30M, 40, 40M	9
A11/776 ...	F.19	Rocker box with cover	1	30, 40 ...	8 0 0
A11M/776 ...	F.19	Rocker box with cover	1	30M, 40M	10 0 0
A11/777 ...	F.30	Rocker box panel cover	1	30, 40 ...	2 5 0
A11M/777 ...	F.30	Rocker box panel cover	1	30M, 40M	2 7 6
A11/778 ...	F.64	Valve guide lubrication pipe	1	30, 30M, 40, 40M	1 6
A11/779 ...	F.65	Valve guide lubrication pipe nut	1	30, 30M, 40, 40M	3
A11/780 ...	F.66	Valve guide lubrication pipe union	1	30, 30M, 40, 40M	2 0
A11/781 ...	F.12	Rocker box inspection cover	1	30, 40 ...	5 0
A11M/781 ...	F.2	Rocker box inspection cover	1	30M, 40M	12 6
A11/782 ...	F.3	Rocker box inspection cover washer	1	30, 40 ...	8
A11M/782 ...	F.3	Rocker box inspection cover washer	1	30M, 40M	8
A11/719 ...	F.16	Rocker box or crankcase oil feed pipe union	1	30, 30M, 40, 40M	2 6
A11/783	B.28/F.71	Vertical shaft top or bottom bevel housing studs	8	30, 30M, 40, 40M	6
E3231	B.29/F.73	Vertical shaft top or bottom bevel housing stud nut	8	30, 30M, 40, 40M	4
11796	B.30/F.72	Vertical shaft top or bottom bevel housing stud washer	8	30, 30M, 40, 40M	3
A11/784 ...	F.1	Rocker box inspection cover screw	1	30, 30M, 40, 40M	4
A11/687 ...	F.311	Rocker box panel cover screw or crankcase bevel cover screw	1	30, 30M, 40, 40M	5
A11/785 ...	F.18	Camshaft bearing (rocker box) (ball)	1	30, 30M, 40, 40M	19 0
A11/786 ...	F.28	Camshaft bearing (panel cover) (roller) ...	1	30, 40 ...	1 12 0
A11M/786 ...	F.28	Camshaft bearing (panel cover) (roller) ...	1	30M, 40M	1 12 0
A11/787 ...	F.15	Camshaft bearing rocker box retaining washer	1	30, 30M, 40, 40M	3 6
A11/35 ...	F.14	Camshaft bearing rocker box retaining washer screws	1	30, 30M, 40, 40M	3
A11/788 ...	F.27	Distance piece between cams and roller bearing	1	30, 30M, 40, 40M	9
A11/789 ...	D.24	Rocker box oil feed pipe	1	30, 40 ...	7 6
A11M/789 ...	D.23	Rocker box oil feed pipe	1	30M, 40M	10 6
A11/790 ...	F.13	Camshaft	1	30, 40 ...	17 0
A11M/790 ...	F.13	Camshaft	1	30M, 40M	1 0 0
A11M/791 ...		Plug for camshaft	1	30M, 40M	9
A11M/792 ...	F.8	Camshaft oil feed jet	1	30M, 40M	4 0
A2/13 ...	F.7	Camshaft oil feed jet holder	1	30M, 40M	5 0
A2/14 ...	F.6	Camshaft oil feed jet spring	1	30M, 40M	3
A11M/793 ...	F.4	Camshaft oil feed jet holder nut	1	30M, 40M	1 0
A11/794 ...	F.25	Cam inlet (No. 6212)	1	30 ...	1 10 0
A10/794 ...	F.25	Cam inlet (No. 6466)	1	40, 40M	1 10 0

PLATE. F.

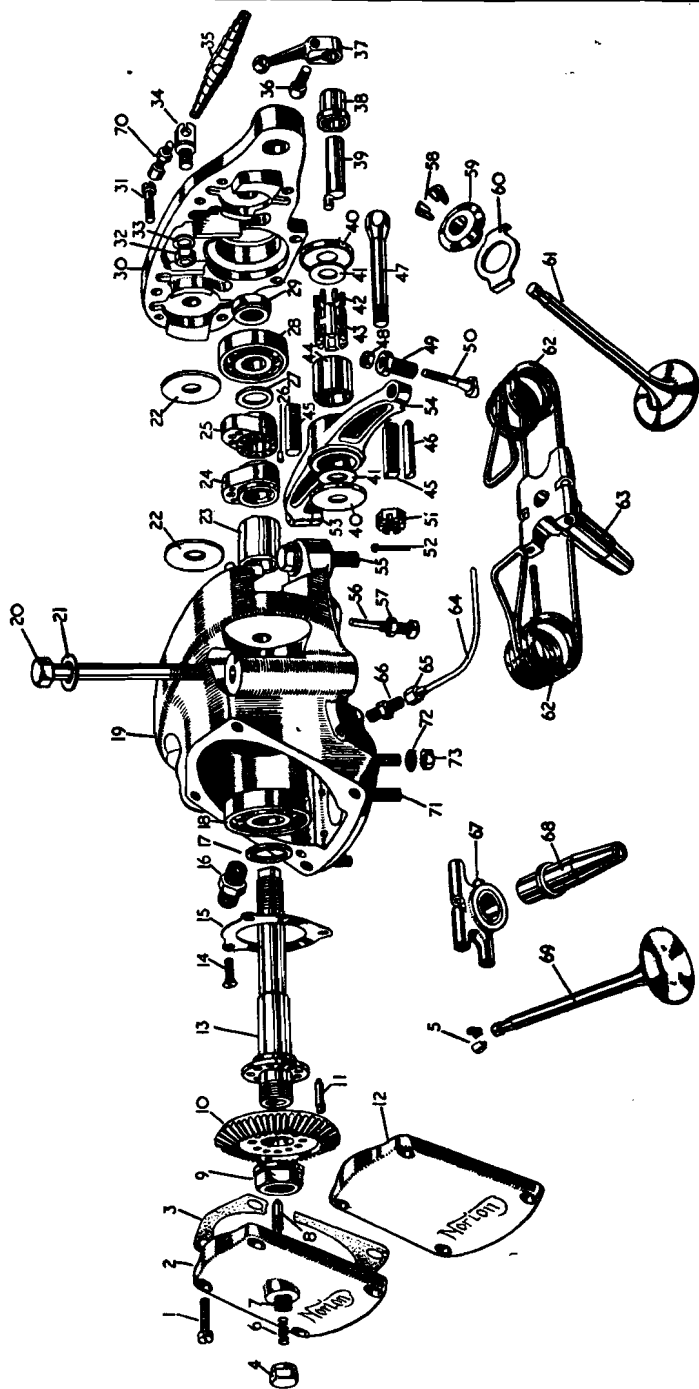

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
O.H.C. VERTICAL SHAFT DRIVE AND ROCKER BOX, ETC.—cont.					
A11M/794 ...	F.25	Cam inlet (No. 11587)	1	30M ...	1 10 0
A11/795 ...	F.24	Cam exhaust (No. 6213)	1	30 ...	1 10 0
A10/795 ...	F.24	Cam exhaust (No. 6389)	1	40, 40M	1 10 0
A11M/795 ...	F.24	Cam exhaust (No. 11588)	1	30M ...	1 10 0
A11/796 ...	F.26	Cam securing roller	1	30, 30M, 40, 40M	4
A11/797 ...		Cam key	1	30, 30M, 40, 40M	4
A11/798 ...	F.25	Camshaft slotted bush	1	30, 30M, 40, 40M	3 6
A11/799 ...	F.29	Camshaft nut (left-hand thread) panel cover end	1	30, 30M, 40, 40M	8
A11/800 ...		Camshaft packing washer	1	30, 30M, 40, 40M	2
A11/801 ...	F.54	Cam rocker (inlet or exhaust)	2	30, 30M, 40, 40M	1 17 0
A11/802 ...	F.53	Cam rocker pad (inlet or exhaust)	2	30, 30M, 40, 40M	5 0
A11/803 ...	F.50	Rocker adjusting screw	2	30, 30M, 40, 40M	4 6
A11/804 ...	F.49	Rocker adjusting screw sleeve	2	30, 30M, 40, 40M	3 6
A11/805 ...	F.48	Rocker adjusting screw nut	2	30, 30M, 40, 40M	6
A11/806 ...	F.44	Cam rocker bush	2	30, 30M, 40, 40M	5 0
A11/807 ...	F.43	Cam rocker roller cage	2	30, 30M, 40, 40M	17 0
A11/808 ...	F.42	Cam rocker rollers (per rocker)	1	30, 30M, 40, 40M	5 0
A11/809 ...	F.41	Cam rocker roller retaining washers	4	30, 30M, 40, 40M	2
A11/810 ...	F.47	Cam rocker pivot bolt	2	30, 30M, 40, 40M	7 0
A11/811 ...	F.51	Cam rocker pivot bolt nut	2	30, 30M, 40, 40M	8
A11/812 ...	F.52	Cam rocker pivot bolt cotter pin	2	30, 30M, 40, 40M	2
A11/813 ...	F.22	Cam rocker cork washer	4	30, 30M, 40, 40M	4
A11/814 ...	F.40	Cam rocker cork washer steel cup	4	30, 30M, 40, 40M	6
A11/815 ...	F.45	Cam rocker box rubber pad	4	30, 30M, 40, 40M	8
A11/816 ...	F.46	Cam rocker box rubber pad roller	2	30, 30M, 40, 40M	6
A11/817 ...	F.56	Rocker box rubber pad bottom adjusting screw	2	30, 30M, 40, 40M	4
A11/818 ...	F.57	Rocker box rubber pad bottom adjusting screw nut	2	30, 30M, 40, 40M	2
A11/108(L)	F.20	Rocker box bolt, long	2	30, 30M, 40, 40M	1 6
A11/108(S)	F.55	Rocker box bolt, short	2	30, 30M, 40, 40M	1 0
E5455 ...	F.21	Rocker box bolt washer	4	30, 30M, 40, 40M	3

MAGNETO OR MAGDYN0 DRIVING PARTS AND FITTINGS.

C2/79 ...	A.31	Magneto sprocket (engine)	1	1, 16H, 18, ES2	8 6
A2/79 ...	B.6	Magneto sprocket (engine)	1	30, 30M, 40, 40M	8 6
A2/80 ...	A.62/B.72	Magneto sprocket securing nut	1	30, 40, 1 16H, 18, ES2	8

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
MAGNETO OR MAGDYNO DRIVING PARTS AND FITTINGS—cont.					
E5376	A.61/B.73	Magneto sprocket securing nut washer ...	1	30, 40, 1, 16H, 18, ES2	3 3
A2/81	... A.59	Magneto sprocket key	1	All Models	3
A11M/80	... B.52	Magneto sprocket and rev. counter drive nut	1	30M, 40M	2 6
C2/112	... A.33	Magdyno sprocket	1	1, 16H, 18, ES2	8 6
A11/112	... B.4	Magneto (B.T.H.) or magdyno sprocket ...	1	30, 30M, 40, 40M	8 6
A2/115	... A.35	Magdyno sprocket securing nut	1	All Models	8
A2/116	... A.34	Magdyno sprocket securing nut washer ...	1	All Models	3
E6270	... H.28	Base stud for B.T.H. magneto	3	30M, 40M	9
E4267	... H.30	Base stud for Lucas magdyno	3	30, 40 ...	6
E3837	... H.31	Long nut securing magneto or magdyno to platform	1	30, 30M, 40, 40M	3 0
E3224	... H.29	Short nut securing magneto or magdyno to platform	2	30, 30M, 40, 40M	4
E5455	...	Washer for magneto base stud	3	30, 30M, 40, 40M	3
C2/117	... Y.4	Magdyno platform	1	1, 16H, 18, ES2	6 0
E3831	... Y.6	Magdyno platform countersunk screw ...	4	1, 16H, 18, ES2	5
1518A	... Y.5	Magdyno platform countersunk screw shake proof washer	4	1, 16H, 18, ES2	4
A2/118	... Y.7	Magdyno platform locking plate	1	1, 16H, 18, ES2	2 0
E3798	... Y.8	Magdyno platform locking plate pin	1	1, 16H, 18, ES2	4
C2/113	... A.32	Magdyno chain (44 link)	1	1, 16H, 18, ES2	11 8
A11/113	... B.5	Magdyno chain (46 link)	1	30, 30M	11 8
A10/113	... B.5	Magdyno chain (45 link)	1	40, 40M	11 8

DRY SUMP OIL PUMP AND DRIVE PARTS.

Side and O.H.V. Models.

A2/128	... A.68	Dry sump gear pump, complete	1	1, 16H, 18, ES2	3 0 0
A2/129	... A.65	Dry sump gear pump spindle nut	1	1, 16H, 18, ES2	5
A2/130	... A.64	Dry sump gear pump spindle worm gear wheel	1	1, 16H, 18, ES2	6 6
A2/131	...	Dry sump gear pump spindle worm gear wheel key	1	1, 16H, 18, ES2	3
A2/132	... A.66	Dry sump gear pump body and timing cover connection bush	1	1, 16H, 18, ES2	8
A2/133	... A.67	Dry sump gear pump body and timing cover connection fibre washer	1	1, 16H, 18, ES2	3
C2/134	... A.63	Engine mainshaft pump driving worm ...	1	1, 16H, 18, ES2	7 6
E4440	... A.45	Dry sump gear pump crankcase stud	2	1, 16H, 18, ES2	9
E3231	... A.46	Dry sump gear pump crankcase stud nut	2	1, 16H, 18, ES2	4

DRY SUMP OIL PUMP AND DRIVE PARTS.

O.H.C. Models.

A11/128	... B.17	Dry sump gear pump, complete	1	30, 30M, 40, 40M	3 5 0
---------	----------	------------------------------------	---	---------------------	-------

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
DRY SUMP OIL PUMP AND DRIVE PARTS. O.H.C. Models—cont.					
A11/729 ...	B.54	Dry sump gear pump spindle driving plate	1	30, 30M, 40, 40M	1 6
A11/134 ...	B.56	Engine mainshaft pump driving pinion	1	30, 30M, 40, 40M	11 0
A11/730 ...	B.55	Engine mainshaft pump driving pinion nut	1	30, 30M, 40, 40M	2 0
A11/731 ...	B.53	Pump and magneto drive gear wheel	1	30, 30M, 40, 40M	1 5 0
A11/732 ...	B.16	Oil pump securing screw	2	30, 30M, 40, 40M	6

NOTE.—Dry sump pump parts cannot be supplied separately. It is necessary to return the complete pump to the works for attention.

CYLINDER BARREL AND HEAD.

C7/135 ...	C.22	Cylinder barrel with valve guides	1	16H ...	7 0 0
C2/135 ...	C.22	Cylinder barrel with valve guides	1	1 ...	7 5 0
C3/135 ...	C.99	Cylinder barrel	1	18, ES2	5 0 0
A11/135 ...	D.18	Cylinder barrel	1	30 ...	6 5 0
A11/135AL		Cylinder barrel (aluminium)	1	30 ...	9 10 0
A11M/135 ...	D.10	Cylinder barrel	1	30M ...	10 0 0
A10/135 ...	D.18	Cylinder barrel	1	40 ...	6 0 0
A10/135AL		Cylinder barrel (aluminium)	1	40 ...	9 10 0
A10M/135 ...	D.10	Cylinder barrel	1	40M ...	10 0 0
C10M/135 ...	D.10	Cylinder barrel	1	(1946/7) 40M ...	10 0 0
C7/136 ...	C.24	Cylinder head	1	(1948/9) 1 ...	3 0 0
C7/136 ...	C.24	Cylinder head	1	16H ...	3 0 0
C3/136 ...	C.90	Cylinder head with valve guides	1	18, ES2	7 0 0
C7/137 ...	C.23	Cylinder head joint washer	1	1 ...	7 0 0
C2/137 ...	C.23	Cylinder head joint washer	1	16H ...	5 0 0
C3/137 ...	C.98	Cylinder head joint washer	1	18, ES2	2 0 0
A11/136 ...	D.16	Cylinder head with valve guides (cast iron)	1	30 ...	7 16 0
A11/136AL		Cylinder head with valve guides (aluminium)	1	30 ...	16 15 0
A11M/136 ...	D.5	Cylinder head with valve guides	1	30M ...	17 10 0
A10/136 ...	D.16	Cylinder head with valve guides (cast iron)	1	40 ...	7 16 0
A10/136AL		Cylinder head with valve guides (aluminium)	1	40 ...	16 15 0
A10M/136 ...	D.5	Cylinder head with valve guides	1	40M ...	17 10 0
C2/152 ...	C.27	Compression plug	1	1, 16H	5 6
C3/153 ...	C.28	Compression plug copper abestos washer ..	1	1, 16H	5
A2/154 ...	C.21	Carburettor adaptor	1	1, 16H	9 6
A3/154 ...	C.52	Carburettor adaptor	1	18, ES2	9 6
C2/155 ...	C.29	Cylinder head holding down stud	9	1, 16H	1 0
A3/156 ...	C.91	Cylinder head holding down stud nut ...	4	18, ES2	2 0
A2/156 ...	C.25	Cylinder head holding down stud nut ...	9	1, 16H	1 8
E5455 ...	C.26	Cylinder head holding down stud nut washer	9	1, 16H	3
A11/156 ...	D.4	Cylinder head holding down sleeve nut ...	4	30, 30M	7 6
A10/156 ...	D.4	Cylinder head holding down sleeve nut ...	4	40, (40M 1946/7)	7 6
C10/156 ...	D.4	Cylinder head holding down sleeve nut ...	4	40M ...	7 6
E6662 ...	D.17	Cylinder head sleeve nut washer	4	(1948/9) 30, 30M, 40, 40M	3
C3/157 ...	C.102	Cylinder base paper washer	1	18, ES2	5
C2/157 ...	C.40	Cylinder base paper washer	1	1, 16H	5
A11/157 ...	D.20	Cylinder base paper washer	1	30 ...	5
A10/157 ...	D.20	Cylinder base paper washer	1	40 ...	5
A11/726 ...	D.19	Compression plate, $\frac{1}{2}$ m/m to 2 m/m ...	1	30, 30M	2 0
A10/726 ...	D.19	Compression plate, $\frac{1}{2}$ m/m to 2 m/m ...	1	40, 40M	2 0
A11/727 ...	D.1	Carburettor flange washer	1	30, 30M, 40, 40M	3
E3798 ...	D.2	Carburettor flange bolt	2	30, 30M, 40, 40M	4
11796 ...	D.3	Carburettor flange bolt washer	2	30, 30M, 40, 40M	3

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	--------------	---------------------------

VALVES, GUIDES, SPRINGS AND FITTINGS.

A2/141	...	C.1	Valve only (inlet or exhaust)	2	16H	...	12	0
C7/141	...	C.1	Valve only (inlet or exhaust)	2	1	...	12	0
A3/142	...	C.97	Valve only (inlet or exhaust)	2	18, ES2	...	12	0
A11/142	...	F.69	Valve inlet	1	30	...	19	6
A11M/142	...	F.69	Valve inlet	1	30M	...	19	6
A10/142	...	F.69	Valve inlet	1	40	...	19	6
A10M/142	...	F.69	Valve inlet	1	40M	...	19	6
A11/143	...	F.61	Valve exhaust	1	30, 30M	...	19	6
A10/143	...	F.61	Valve exhaust	1	40	...	19	6
A10M/143	...	F.61	Valve exhaust	1	40M	...	19	6
A2/138	...	C.2	Valve guide inlet	1	1, 16H	...	6	6
A2/139	...	C.3	Valve guide exhaust	1	1, 16H	...	6	6
A3/140	...	C.92	Valve guide (inlet or exhaust)	2	18, ES2	...	6	6
A11/138	...	F.68	Valve guide inlet	1	30, 30M, 40, 40M	...	8	0
A11/139	...	F.63	Valve guide exhaust	1	30, 30M, 40, 40M	...	18	6
A11/148	...	F.67	Inlet valve guide bottom collar	1	30, 30M, 40, 40M	...	9	0
A2/144	...	C.4	Valve spring (inlet or exhaust)	2	1, 16H	...	1	0
A3/145	...	C.95	Valve spring small inner (inlet or exhaust)	2	18, ES2	...	1	0
A3/146	...	C.94	Valve spring outer (inlet or exhaust)	2	18, ES2	...	2	0
A11/144	...	F.62	Hairpin valve spring	4	30, 30M, 40, 40M	...	6	0
C2/147	...	C.32	Valve spring cup top	2	1, 16H	...	1	0
A2/148	...	C.5	Valve spring cup bottom	2	1, 16H	...	2	0
A3/147	...	C.96	Valve spring cup top	2	18, ES2	...	5	6
A3/148	...	C.93	Valve spring bottom collar	2	18, ES2	...	1	0
A11/147	...	F.59	Hairpin valve spring top cup	2	30, 30M, 40, 40M	...	6	0
A11/725	...	F.60	Hairpin valve spring top cup plate	2	30, 30M, 40, 40M	...	1	0
A2/149	...	C.6	Valve split cotter (2 pairs per valve)	2	1, 16H, 18, ES2	...	1	0
A11/150	...	F.5	Valve cotter inlet (2 halves)	2	30, 30M, 40, 40M	...	1	0
A11/151	...	F.58	Valve cotter exhaust (2 halves)	2	30, 30M, 40, 40M	...	1	0

CONNECTING RODS.

A2/158	...	C.51	Connecting rod with small end bush	1	1, 16H	2	4	0
A3/158	...	C.100	Connecting rod with small end bush	1	18, ES2	2	4	0
A11/158	...	D.13	Connecting rod with small end bush	1	30	...	2	4
A11M/158	...	D.12	Connecting rod with small end bush	1	30M, (40M 1946/7)	3	5	0
C10M/158	...	D.12	Connecting rod with small end bush	1	40M (1948/9)	3	5	0
A10/158	...	D.13	Connecting rod with small end bush	1	40	...	2	4
A2/159	...	C.50/D.22	Small end bush	1	1, 16H, 18, ES2, 30	...	7	0
A11M/159	...	D.11	Small end bush	1	30M, 40, 40M	...	7	0

PISTONS AND RINGS.

C7/160	...	C.47	Piston only	1	1	...	2	9	6
C2/160	...	C.47	Piston only	1	16H	...	2	5	3
C3/160	...	C.101	Piston only	1	18, ES2	...	2	5	3
A11/160	...	D.14	Piston only	1	30	...	2	5	3
A11M/160	...	D.6	Piston only	1	30M	...	3	10	0
A10/160	...	D.14	Piston only	1	40	...	2	5	3
A10M/160	...	D.6	Piston only	1	40M (1946/7)	...	3	10	0
C10M/160	...	D.6	Piston only	1	40M (1948/9)	...	3	10	0
A11/160	...		Piston only, high compression (for use with alcohol fuel)	1	30	...	2	13	8


PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
PISTONS AND RINGS—cont.					
A11M/160(HC)		Piston only, high compression (for use with alcohol fuel)	1	30M ...	3 10 0
A10/160(HC)		Piston only, high compression (for use with alcohol fuel)	1	40, (40M 1946/7)	3 10 0
C10/160(HC)		Piston only, high compression (for use with alcohol fuel)	1	40M ... (1948/9)	3 10 0
C7/702 ...		Piston complete with rings, gudgeon pin and circlips	1	1 ...	3 5 9
C2/702 ...		Piston complete with rings, gudgeon pin and circlips	1	16H ...	3 2 9
C3/702 ...		Piston complete with rings, gudgeon pin and circlips	1	18, ES2	3 2 9
A11/702 ...		Piston complete with rings, gudgeon pin and circlips	1	30 ...	3 2 9
A11M/702 ...		Piston complete with rings, gudgeon pin and circlips	1	30M ...	4 11 7
A10/702 ...		Piston complete with rings, gudgeon pin and circlips	1	40 ...	3 2 9
A10M/702 ...		Piston complete with rings, gudgeon pin and circlips	1	40M ... (1946/7)	4 11 7
C10M/702 ...		Piston complete with rings, gudgeon pin and circlips	1	40M ... (1948/9)	4 11 7
C7/161 ...	C.48	Piston ring	2	1 ...	3 4
A2/161 ...	C.48	Piston ring	2	16H, 18 ES2, 30	3 0
A11M/161 ...	D.7	Piston ring	2	30M ...	3 0
A10/161 ...	D.7	Piston ring	2	40, 40M	3 0
C7/162 ...	C.49	Scraper piston ring	1	1 ...	4 0
A2/162 ...	C.49	Scraper piston ring	1	16H, 18, ES2, 30	4 0
A11M/162 ...	D.8	Scraper piston ring	1	30M ...	4 0
A10/162 ...	D.8	Scraper piston ring	1	40, (40M 1946/7)	4 0
C10/162 ...	D.8	Scraper piston ring	1	40M ... (1948/9)	4 0
A2/163 ...	C.46	Gudgeon pin	1	1, 16H, 18, ES2, 30	10 0
A11M/163 ...	D.9	Gudgeon pin	1	30M ...	12 6
A10/163 ...	D.15	Gudgeon pin	1	40 ...	10 0
A10M/163 ...	D.9	Gudgeon pin	1	40M ...	12 6
A2/164 ...	C.45/D.21	Gudgeon pin circlip	2	All Models	6

Pistons and rings can be supplied in the following oversizes: .010, .020, .030, .040. State size when ordering.


AMAL CARBURETTERS.

276/AT ...		Amal-Norton carburetter complete	1	1, 16H	3 6 0
276/AU ...		Amal-Norton carburetter complete	1	18, ES2	3 10 3
276/408 ...	G.13	Mixing chamber	1	1, 16H	14 0
276/407 ...	G.13	Mixing chamber	1	18, ES2	14 0
6/031 ...	G.4	Mixing chamber cap	1	1, 16H, 18, ES2	2 6
6/032B ...	G.5	Mixing chamber top	1	1, 16H, 18, ES2	2 6
6/033 ...	G.30	Mixing chamber union nut	1	1, 16H, 18, ES2	2 3
4/035 ...	G.1	Cable adjusters	1	1, 16H, 18, ES2	6
4/263 ...	G.11	Throttle valve spring	1	1, 16H, 18, ES2	4
6/040 ...	G.29	Washer for jet block	1	1, 16H, 18, ES2	2
4/230 ...	G.6	Spring clip for needle	1	1, 16H, 18, ES2	6


PLATE G.

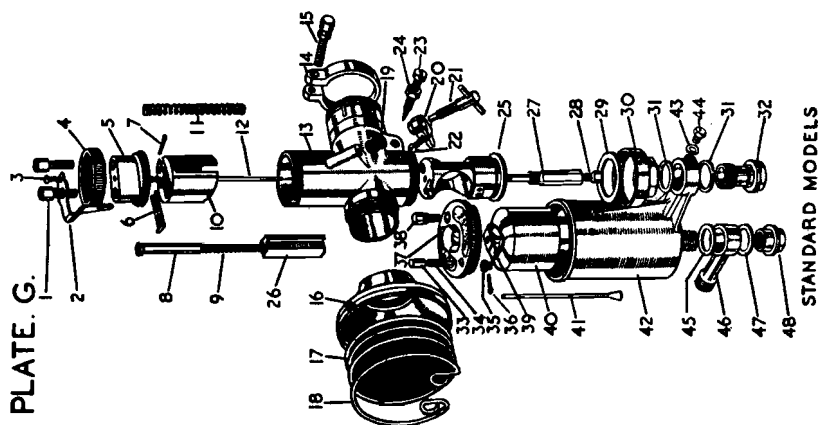

STANDARD MODELS

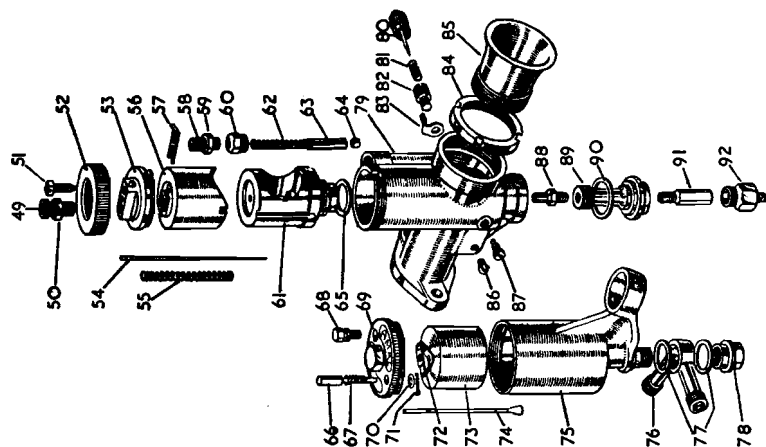

INTERNATIONAL

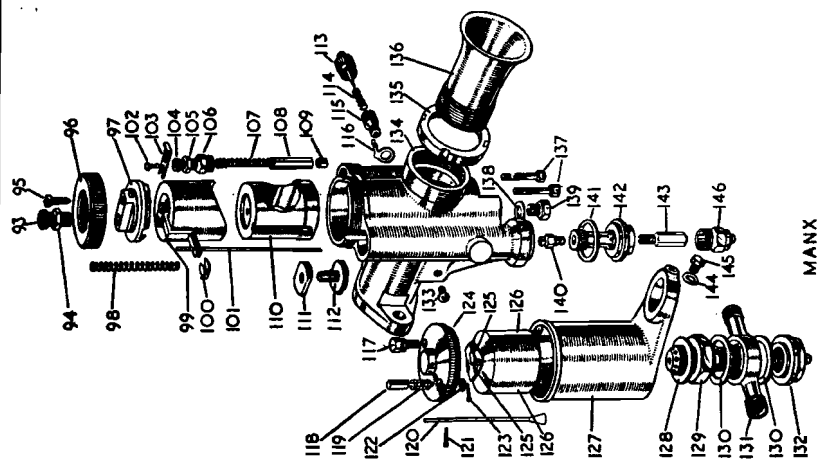

MANX

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
AMAL CARBURETTORS—cont.					
4/042	... G.28	Jet No. 160	1	1, 16H, 18, ES2	8
4/043	... G.32	Holding bolt	1	1, 16H, 18, ES2	3 0
6/045	... G.26	Air valve	1	1, 16H, 18, ES2	3 9
4/046	... G.9	Air valve spring	1	1, 16H, 18, ES2	4
6/047	... G.8	Air valve guide	1	1, 16H, 18, ES2	1 0
6/042	... G.10	Throttle valve 6/5	1	1, 16H, 18, ES2	6 0
6/052	... G.10	Throttle valve 6/4	1	18, ES2	6 0
4/053	... G.31	Holding bolt washer	1	1, 16H, 18, ES2	2
206/058	... G.25	Jet block and barrel complete	1	1, 16H	7 6
206/059	... G.25	Jet block and barrel complete	1	18, ES2	7 6
4/060	... G.7	Split cotter for throttle valve	1	1, 16H, 18, ES2	1
4/061	... G.27	Needle jet	1	1, 16H, 18, ES2	2 6
6/065	... G.12	Needle	1	1, 16H, 18, ES2	2 0
13/129	... G.23	Air adjusting screw	1	1, 16H, 18, ES2	9
16/010	... G.24	Air adjusting screw locknut	1	1, 16H, 18, ES2	2
4/235	... G.2	Spring clip for top	1	1, 16H, 18, ES2	9
4/241	... G.3	Screw for spring clip	1	1, 16H, 18, ES2	2
15/2546	... G.21	Throttle stop screw	1	1, 16H, 18, ES2	1 2
15/1860	... G.20	Throttle stop body	1	1, 16H, 18, ES2	1 2
13/203	... G.19	Spring	1	1, 16H, 18, ES2	4
15/1988	... G.22	Screw	1	1, 16H, 18, ES2	1
30/109	... G.16	Air intake body	1	1, 16H, 18, ES2	3 5
30/080	... G.18	Air intake gauze spring clip	1	1, 16H, 18, ES2	1 2
6/201	... G.14	Outlet clip	1	1, 16H, 18, ES2	2 6
4/048	... G.15	Outlet clip pin	1	1, 16H, 18, ES2	6
30/110	... G.17	Air intake gauze complete	2	1, 16H, 18, ES2	1 6

FLOAT CHAMBER.

64/156B	... G.42	Float chamber body	1	1, 16H, 18, ES2	14 0
14/208B	... G.37	Float chamber cover	1	1, 16H, 18, ES2	3 9
14/014R	... G.39	Bow spring for float	1	1, 16H, 18, ES2	4
14/015	... G.40	Float	1	1, 16H, 18, ES2	3 9
14/021	... G.38	Cover locking screw	1	1, 16H, 18, ES2	4
14/024	... G.41	Needle complete	1	1, 16H, 18, ES2	1 6
14/209	... G.33	Tickler	1	1, 16H, 18, ES2	10
14/210	... G.35	Tickler stop	1	1, 16H, 18, ES2	9

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
FLOAT CHAMBER—cont.					
14/032	...	G.34 Tickler spring	1	1, 16H, 18, ES2	2
14/289	...	G.36 Tickler cotter	1	1, 16H, 18, ES2	1
13/153	...	G.44 Plug screw	1	1, 16H, 18, ES2	3
14/039	...	G.43 Plug screw washer	1	1, 16H, 18, ES2	1
14/175	...	G.45 Needle seating washer	1	1, 16H, 18, ES2	2
14/035	...	G.46 Banjo	1	1, 16H, 18, ES2	3 0
14/036	...	G.48 Banjo nut	1	1, 16H, 18, ES2	9
14/037	...	G.47 Banjo nut washer	1	1, 16H, 18, ES2	2
18E	...	Float chamber complete	1	1, 16H, 18, ES2	1 7 0

TYPE 10 T.T. CARBURETTER. Models 30 and 40 International.

10TT/30	...	Carburetter complete	1	30	...	7 3 0
10TT/40	...	Carburetter complete	1	40	...	7 3 0
175/043	...	G.79 Mixing chamber body	1	30	...	2 5 0
175/060	...	G.79 Mixing chamber body	1	40	...	2 5 0
TT/3334	...	G.53 Mixing chamber top	1	30, 40	...	3 3
TT/3338	...	G.52 Mixing chamber cap	1	30, 40	...	3 3
TT/2626	...	G.58 Air cable adjuster	1	30, 40	...	6
TT/2627	...	G.59 Air cable adjuster locknut	1	30, 40	...	2
TT/3360	...	G.49 Throttle cable adjuster	1	30, 40	...	6
TT/3369	...	G.50 Throttle cable adjuster locknut	1	30, 40	...	2
TT/3367	...	G.51 Adjusting screw for lock plunger	1	30, 40	...	2
TT/2507	...	G.60 Air barrel top	1	30, 40	...	10
175/108	...	G.61 Choke adaptor 1½ in. bore	1	30, 40	...	15 0
175/101	...	G.61 Choke adaptor 1½ in. bore				
TT/3326	...	G.88 Main jet	1	30, 40	...	1 6
TT/3970	...	G.91 Needle jet	1	30, 40	...	2 6
TT/3971	...	G.54 Jet needle	1	30, 40	...	2 0
4/230	...	G.57 Jet needle clip	1	30, 40	...	6
134/104	...	G.56 Throttle valve (please state no. of cut-way)	1	30, 40	...	6 6
TT/2558	...	G.55 Throttle valve spring	1	30, 40	...	4
TT/2502	...	G.63 Air valve	1	30, 40	...	1 6
TT/2558	...	G.62 Air valve spring	1	30, 40	...	4
15/625	...	G.89 Jet holder	1	30, 40	...	3 9
TT/3348	...	G.92 Jet holder plug screw	1	30, 40	...	9
134/107	...	G.65 Adaptor washer	1	30, 40	...	2
36/006	...	G.90 Float chamber arm washer	1	30, 40	...	2
TT/2981	...	G.80 Pilot needle	1	30, 40	...	1 6
TT/2966	...	G.82 Pilot needle insert	1	30, 40	...	1 6
TT/2980	...	G.81 Pilot needle spring	1	30, 40	...	3
TT/2982	...	G.83 Pilot needle spring catch	1	30, 40	...	2
TT/2503	...	G.64 Nipple holder for air valve	1	30, 40	...	2
TT/2403	...	G.86 Small plug screw	1	30, 40	...	3
134/105	...	G.87 Adaptor location peg	1	30, 40	...	4
175/118	...	G.85 Air intake tube 1½ in. bore	1	30, 40	...	7 6
185/121	...	G.85 Air intake tube 1½ in. bore				
175/117	...	G.85 Air intake tube 1½ in. bore	1	30, 40	...	7 6
175/119	...	G.84 Lock ring for air intake tube	1	30, 40	...	7 6
14/314	...	G.75 Float chamber body only	1	30, 40	...	3 0
14/138	...	G.69 Cover complete	1	30, 40	...	1 10 0
14/021	...	G.68 Cover lock screw	1	30, 40	...	3 9
14/031	...	G.66 Tickler	1	30, 40	...	4
14/032	...	G.67 Tickler spring	1	30, 40	...	10 2

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH.	£	s.	d.
------------	--------------	--------------	------	-------------	----------------	---	----	----

TYPE 10 T.T. CARBURETTER. Models 30 and 40 International—cont.

14/033	...	G.71 Tickler cotter pin	1	30, 40	...	1		
14/189	...	G.70 Tickler washer	1	30, 40	...	1		
14/0245	...	G.74 Float needle	1	30, 40	...	1	6	
14/017	...	G.73 Float	1	30, 40	...	3	9	
14/279	...	G.72 Float bow spring	1	30, 40	...			4
14/173	...	G.76 Banjo	1	30, 40	...	3	0	
14/037	...	G.77 Washer for banjo	2	30, 40	...			2
14/036	...	G.78 Banjo nut	1	30, 40	...			9

REMOTE NEEDLE TYPE CARBURETTER. Models 30 and 40 Manx.

RN/30M	...	Carburetter complete	1	30M	...	8	4	0
RN/40M	...	Carburetter complete	1	40M	...	8	4	0
185/060	...	G.134 Mixing chamber body	1	40M	...	2	15	0
185/281	...	G.134 Mixing chamber body	1	30M	...	2	15	0
TT/3334	...	G.97 Mixing chamber top	1	30M, 40M	...			3
185/108	...	G.96 Mixing chamber cap	1	30M, 40M	...	3		3
TT/2626	...	G.104 Air cable adjuster	1	30M, 40M	...			6
TT/2627	...	G.105 Air cable adjuster locknut	1	30M, 40M	...			2
TT/3360	...	G.93 Throttle cable adjuster	1	30M, 40M	...			6
TT/3369	...	G.94 Throttle cable adjuster locknut	1	30M, 40M	...			2
TT/3367	...	G.95 Adjusting screw for mixing chamber top	1	30M, 40M	...			2
185/107	...	G.110 Choke adaptor 1½ in. bore	1	30M, 40M	...	15		0
185/294	...	G.110 Choke adaptor 1½ in. bore	1	30M, 40M	...	15		0
185/295	...	G.110 Choke adaptor 1½ in. bore	1	30M, 40M	...	15		0
TT/3326	...	G.143 Main jet	1	30M, 40M	...	1		6
185/109	...	G.140 Needle jet	1	30M, 40M	...	2		6
185/119	...	G.101 Jet needle	1	30M, 40M	...	2		0
185/150	...	G.100 Jet needle clip	1	30M, 40M	...			2
134/107	...	G.99 Throttle valve complete w/Needle Carrier (please state cut-away no.)	1	30M, 40M	...	8		0
TT/2558	...	G.98 Throttle valve spring	1	30M, 40M	...			4
15/625	...	G.142 Jet holder	1	30M, 40M	...	3		9
TT/3348	...	G.146 Jet holder plug	1	30M, 40M	...			9
185/137	...	G.139 Mixing chamber base plug	1	30M, 40M	...			9
59/027	...	G.138 Mixing chamber base plug washer	1	30M, 40M	...			2
185/110	...	Primary choke	1	30M, 40M	...	2		0
185/138	...	G.137 Choke adaptor screw	1	30M, 40M	...			6
TT/2502	...	G.108 Air valve	1	30M, 40M	...	1		6
TT/2558	...	G.107 Air valve spring	1	30M, 40M	...			4
TT/2507	...	G.106 Air barrel top	1	30M, 40M	...			10
TT/2403	...	G.133 Small plug screw	1	30M, 40M	...			3
TT/2503	...	G.109 Air valve nipple holder	1	30M, 40M	...			2
185/106	...	G.112 Needle chamber top cap	1	30M, 40M	...	1		6
185/120	...	G.111 Needle chamber top cap spring	1	30M, 40M	...			0
185/105	...	G.102 Cable stop peg	1	30M, 40M	...			3
185/141	...	G.103 Needle clip for cable stop peg	1	30M, 40M	...			6
TT/2981	...	G.113 Pilot adjuster needle	1	30M, 40M	...	1		6
TT/2966	...	G.115 Pilot adjuster needle inserts	1	30M, 40M	...	1		6
TT/2980	...	G.114 Pilot adjuster spring	1	30M, 40M	...			3
TT/2982	...	G.116 Pilot adjuster catch	1	30M, 40M	...			2
175/108	...	G.136 Air intake tube 1½ in. bore	1	30M, 40M	...	7		6
185/121	...	G.136 Air intake tube 1½ in. bore	1	30M, 40M	...	7		6
175/101	...	G.136 Air intake tube 1½ in. bore	1	30M, 40M	...	7		6
175/119	...	G.135 Air intake tube lock ring	1	30M, 40M	...	3		6
36/006	...	G.141 Washer for float chamber	2	30M, 40M	...			0
14/532	...	Float chamber complete	1	30M, 40M	...	2	7	6
14/225R	...	G.127 Float chamber body only	1	30M, 40M	...	1	7	0
14/138	...	G.124 Cover complete	1	30M, 40M	...	3		0
14/021	...	G.117 Cover lock screw	1	30M, 40M	...			4
14/031	...	G.118 Tickler	1	30M, 40M	...			10
14/032	...	G.119 Tickler spring	1	30M, 40M	...			2
14/033	...	G.123 Tickler cotter pin	1	30M, 40M	...			1

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
REMOTE NEEDLE TYPE CARBURETTOR. Models 30 and 40 Manx—cont.					
14/189	... G.122	Tickler washer	1	30M, 40M	1
14/245	... G.120	Float needle	1	30M, 40M	1 6
14/304	... G.126	Float	1	30M, 40M	3 9
14/279	... G.125	Float bow spring	1	30M, 40M	4
193/084	... G.121	Float securing cotter pin	1	30M, 40M	1
14/253	... G.129	Needle valve seating	1	30M, 40M	5 0
14/252	... G.128	Needle valve seating washer	1	30M, 40M	2
14/232	... G.145	Body base plug screw	1	30M, 40M	6
14/241	... G.144	Washer for body base plug screw	1	30M, 40M	1
14/251	... G.131	Banjo	1	30M, 40M	7 6
14/275	... G.130	Washer for banjo	2	30M, 40M	2
14/255	... G.132	Banjo nut	1	30M, 40M	1 6


EXHAUST PIPES AND FITTINGS.

C7/165	... H.38	Exhaust pipe	1	18, ES2	1 5 0
C2/165	... H.38	Exhaust pipe only	1	16H	1 5 0
C3/165	... H.41	Exhaust pipe only	1	18, ES2	1 5 0
A11/165	... H.41	Exhaust pipe only	1	30, 40	1 5 0
A11M/165	... H.41	Exhaust pipe only	1	30M, 40M	1 15 0
A3/166	... H.39	Exhaust pipe flange washer (cylinder head)	1	18, ES2, 30, 30M, 40, 40M	6
A3/167	... H.40	Exhaust pipe flange locking nut (cylinder head)	1	18, ES2, 30, 40	8 0
A11M/167	... H.40	Exhaust pipe flange locking nut (cylinder head)	1	30M, 40M	8 0
A2/168	... H.45	Exhaust pipe clip	1	1, 16H	2 6
12343	... H.47	Exhaust pipe clip bolt	1	1, 16H	8
E3229	... H.46	Exhaust pipe clip bolt nut	1	1, 16H	4
10245	... H.48	Exhaust pipe attachment bolt	1	1, 16H	3 4
E3238	... H.50	Exhaust pipe attachment bolt nut	1	1, 16H	5
E5375	... H.49	Exhaust pipe attachment bolt washer	1	1, 16H	3
A11M/168	... H.51	Exhaust pipe clip	1	30M, 40M	5 0
E3798	... H.52	Exhaust pipe clip bolt	1	30M, 40M	8
E3223	... H.53	Exhaust pipe clip bolt nut	1	30M, 40M	4
E5456	... H.54	Exhaust pipe clip bolt washer	2	30M, 40M	4
E4010	... H.55	Exhaust pipe clip engine plate attachment bolt	1	30M, 40M	1 0
E3224	... H.57	Exhaust pipe clip engine plate attachment bolt nut	1	30M, 40M	4
E5376	... H.56	Exhaust pipe clip engine plate attachment bolt washer	2	30M, 40M	3

SILENCER MEGAPHONE AND FITTINGS.

A2/169	... H.42	Silencer	1	1, 16H, 18	3 10 0
B4/169	... H.42	Silencer	1	ES2, 30, 40	3 10 0
13037	...	Silencer support stud	1	1, 16H, 18	2 8
E3224	...	Silencer support stud nut	1	1, 16H, 18	4
E4010	... H.43	Silencer sleeve bolt	1	1, 16H, 18, ES2, 30, 40	1 0
E5376	... H.44	Silencer sleeve bolt washer	1	1, 16H, 18, ES2, 30, 40	3
E3801	... H.58	Silencer clip bolt	1	1, 16H, 18, ES2, 30, 40	5
E3231	... H.59	Silencer clip bolt nut	1	1, 16H, 18, ES2, 30, 40	4
11796	...	Silencer clip bolt nut washer	1	1, 16H, 18, ES2, 30, 40	3
A11M/167	... H.35	Megaphone	1	30M	1 15 0
A10M/167	... H.35	Megaphone	1	40M	1 15 0
11307	... H.34	Megaphone frame support stud	1	30M, 40M	3 6
E4010	... H.32	Megaphone frame support stud bolt	1	30M, 40M	1 0

PLATE. H.

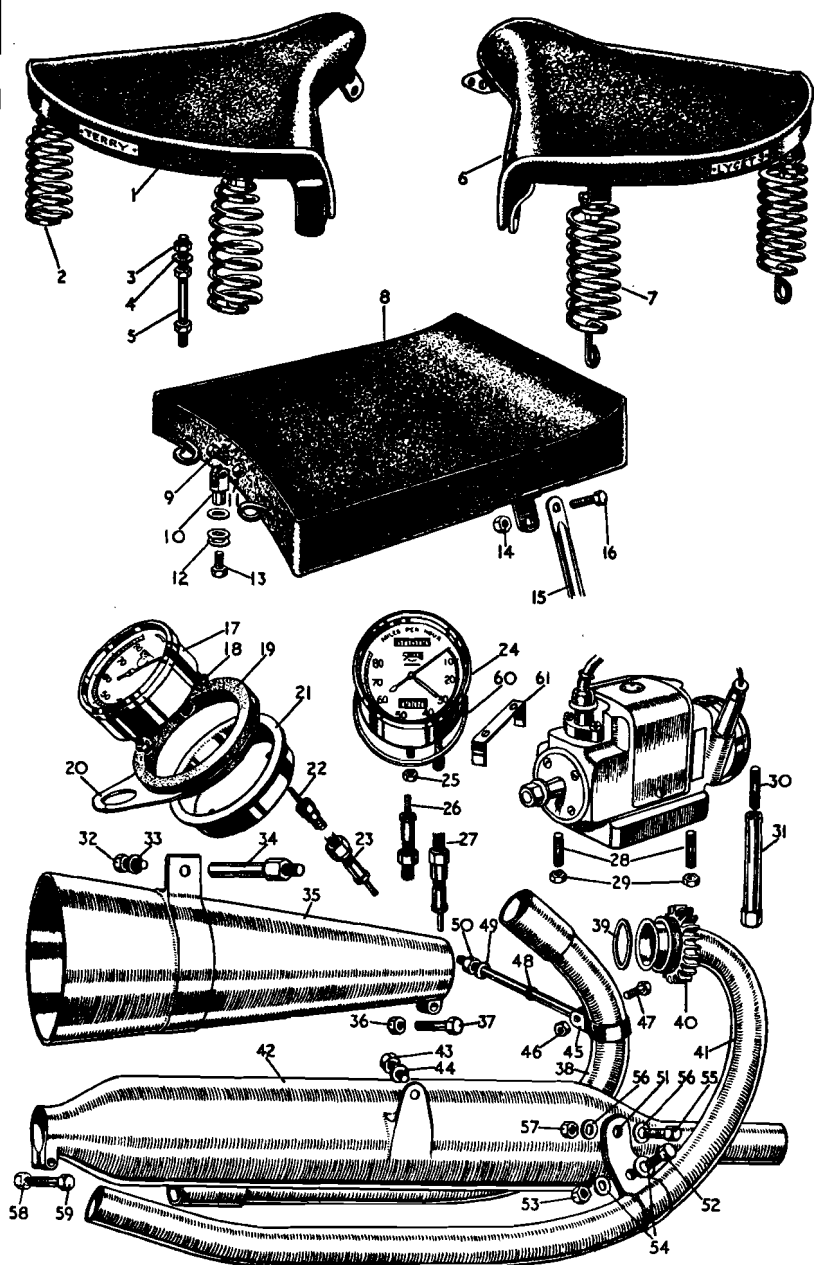


PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
SILENCER MEGAPHONE AND FITTINGS—cont.					
E5376	... H.33	Megaphone frame support stud bolt washer	1	30M, 40M	3
E3801	... H.37	Megaphone clip bolt	1	30M, 40M	5
E3231	... H.36	Megaphone clip bolt nut	1	30M, 40M	4
11796	...	Megaphone clip bolt washer	1	30M, 40M	3

NORTON ROAD-HOLDER FORKS AND STEERING DAMPER.

B11M/170	...	Road-holder fork complete	1	30M, 40M	25 0 0
B2/170	...	Road-holder fork complete	1	30, 40, 1, 16H, 18, ES2	25 0 0
B2/605	... J.7	Main tube	2	All Models	2 0 0
B2/606	... J.29	Main tube bottom bush	2	All Models	6 6
B2/607	... J.31	Main tube bottom bush locking nut	2	All Models	3 9
B2/608	... J.30	Main tube bottom bush locking nut washer	2	All Models	3
B2/609	... J.28	Fork end (left-hand)	1	30, 40, 1, 16H, 18, ES2	5 5 0
B11M/609	... J.28	Fork end (left-hand)	1	30M, 40M	5 5 0
13567	... J.39	Fork end hub spindle pinch stud off side	1	All Models	6
13433	... J.39	Fork end hub spindle pinch stud near side	1	All Models	6
13434	... J.41	Fork end hub spindle pinch stud nut	2	All Models	4
11776	... J.40	Pinch stud washer	1	All Models	3
B2/611	... J.27	Fork end (right-hand)	1	30, 40, 1, 16H, 18, ES2	5 5 0
B11M/611	... J.27	Fork end (right-hand)	1	30M, 40M	5 5 0
B2/612	... J.38	Fork end drain plug	2	All Models	4
B2/613	... J.37	Fork end drain plug washer	2	All Models	2
B2/614	... J.26	Main tube top sleeve bush	2	All Models	12 6
B2/615	... J.22	Main tube top sleeve bush locking ring	2	All Models	7 6
B2/616	... J.24	Super oil seal	2	All Models	6 6
B2/617	... J.25	Super oil seal paper washer	2	All Models	2
B2/618	... J.17	Buffer spring	2	All Models	6 6
B2/619	... J.19	Buffer spring leather washer (top)	2	All Models	6
B2/620	... J.18	Main spring	2	All Models	15 0
B2/621	... J.21	Main spring leather washer (bottom)	2	All Models	3
B2/622	... J.14	Spring cover tube (top)	2	All Models	4 0
B2/623	... J.15	Spring cover tube top securing plate	2	All Models	1 0
B2/624	... J.16	Spring cover tube top securing plate screw	6	All Models	3
B2/625	... J.20	Spring cover tube (bottom)	2	All Models	6 6
B2/626	... J.23	Spring cover tube (bottom) securing screw	4	All Models	2
B2/627	... J.33	Oil damper rod	2	All Models	15 0
B2/628	... J.34	Oil damper rod fibre washer	1	All Models	3
C2/629	... J.36	Oil damper rod plain washer	1	All Models	3
C2/630	... J.35	Oil damper rod bolt	1	All Models	3
B2/631	... J.75	Speedometer panel	1	30, 40, 1, 16H, 18, ES2	7 6
B2/632	... J.76	Speedometer panel control cable rubber grummett	2	30, 40, 1, 16H, 18, ES2	6
B2/633	... J.2	Main tube filler and retaining plug	2	All Models	5 0
B2/634	... J.3	Main tube filler and retaining plug washer	2	All Models	9
B2/635	... J.6	Main tube top cover (left-hand)	1	30, 40, 1, 16H, 18, ES2	1 1 0
B11M/635	...	Main tube top cover (left-hand)	1	30M, 40M	1 1 0
B11M/636	...	Main tube top cover (right-hand)	1	30M, 40M	1 1 0
B2/636	... J.5	Main tube top cover (right-hand)	1	30, 40, 1, 16H, 18, ES2	1 1 0
B2/637	...	Main tube top cover name plate	2	All Models	1 6
B2/638	...	Main tube top cover name plate rivet (per set 2)	2	All Models	3
B2/639	... J.4	Main tube top cover rubber ring	2	All Models	1 6
B2/201	... J.42	Steering damper adjuster	1	30, 40, 1, 16H, 18, ES2	6 0
B2/203	... J.46	Steering damper adjuster rod	1	30, 40, 1, 16H, 18, ES2	2 0

PLATE. J.

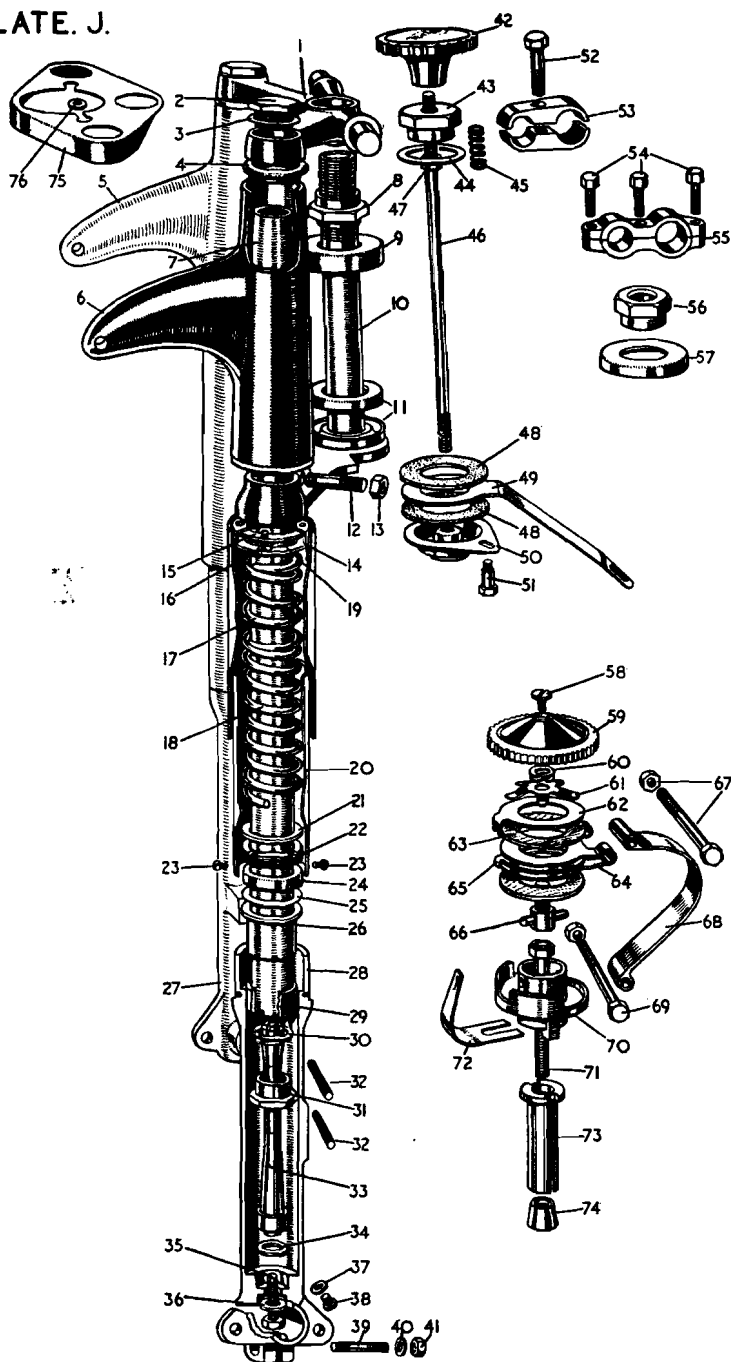

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
NORTON ROAD-HOLDER FORKS AND STEERING DAMPER—cont.					
B2/202	... J.45	Steering damper adjuster rod spring	1	30, 40, 1 16H, 18, ES2	1 0
B2/640	... J.47	Steering damper adjuster rod spring lock-nut	1	30, 40, 1 16H, 18, ES2	4
B2/207	... J.48	Steering damper friction disc	2	30, 40, 1 16H, 18, ES2	3 0
B2/206	... J.49	Steering damper friction and anchor plate	1	30, 40, 1 16H, 18, ES2	6 6
B2/208	... J.50	Steering damper bottom plate	1	30, 40, 1 16H, 18, ES2	4 0
B2/641	... J.51	Steering damper bottom plate bolt	1	30, 40, 1 16H, 18, ES2	6
A11M/836	...	Andre steering damper complete	1	30M, 40M	3 7 6
A11M/201	... J.59	Steering damper wheel	1	30M, 40M	8 0
A11M/874	... J.72	Steering damper wheel spring clip	1	30M, 40M	2 0
A11M/733	... J.58	Steering damper wheel locking screw	1	30M, 40M	1 6
A11M/734	... J.60	Steering damper wheel spring washer	1	30M, 40M	2
A11M/735	... J.61	Steering damper wheel star washer	1	30M, 40M	2 0
A11M/736	... J.62	Steering damper wheel top plate	1	30M, 40M	3 0
A11M/207	... J.63	Steering damper disc	4	30M, 40M	3 0
A11M/737	... J.65	Steering damper friction plate	1	30M, 40M	2 0
A11M/738	... J.64	Steering damper twin friction plate	1	30M, 40M	10 0
A11M/739	... J.66	Steering damper screwed T piece	1	30M, 40M	3 0
A11M/740	... J.70	Steering damper body	1	30M, 40M	15 0
A11M/741	... J.67	Steering damper top clip bolt and nut ...	1	30M, 40M	3 0
A11M/742	... J.68	Steering damper strap	1	30M, 40M	5 0
A11M/743	... J.69	Steering damper strap bolt and nut (frame head attachment)	1	30M, 40M	2 0
A11M/744	... J.73	Steering damper adaptor	1	30M, 40M	4 0
A11M/203	... J.71	Steering damper adaptor centre bolt	1	30M, 40M	2 0
A11M/745	... J.74	Steering damper adaptor centre bolt cone	1	30M, 40M	1 0
A11M/746	...	Steering damper adaptor centre bolt washer	1	30M, 40M	3
B2/172	... J.10	Fork crown and column	1	All Models	3 0 0
B2/642	... J.12	Fork crown main tube clamping stud	1	All Models	6
B2/643	... J.13	Fork crown main tube clamping stud nut	1	All Models	4
B2/173	... J.11	Fork crown or head clip ballrace	1	All Models	7 6
B2/644	... J.9	Fork head clip ballrace cover	1	1, 16H, 18, ES2, 30, 40	1 0
A11M/644	... J.57	Fork head clip ballrace cover	1	30M, 40M	1 0
B2/174	... J.1	Fork head clip	1	All Models	1 12 6
B2/645	... J.8	Fork head race adjuster nut	1	All Models	9 0
B2/205	... J.43	Fork crown and column locknut	1	30, 40, 1, 16H, 18, ES2	5 0
B11M/205	... J.56	Fork crown and column locknut	1	30M, 40M	5 0
B2/646	... J.44	Fork crown and column locknut washer ..	1	All Models	1 0


HANDLEBAR AND FITTINGS.

B2/211	... K.48	Handlebar bend only	1	1, 16H, 18, ES2, 30, 40	1 14 7
A11M/211	... K.69	Handlebar bend only	1	30M, 40M	1 14 7
B2/175	... J.53	Handlebar clip, one only, complete	2	1, 16H, 18, ES2, 30, 40	14 0
A11M/175	... J.55	Handlebar clip, one only, complete	2	30M, 40M	15 0
B2/176	... J.52	Handlebar clip pin	2	1, 16H, 18, ES2, 30, 40	10
A11M/176	... J.54	Handlebar clip pin	6	30M, 40M	10

MAGNETO AND AIR CONTROL LEVERS.

A2/213	...	Magneto control lever assembly complete	1	1, 16H, 18, ES2, 30, 40	16 8
A11M/213	...	Magneto control lever assembly complete	1	30M, 40M	16 8
A2/214	... K.16	Magneto control lever only	1	1, 16H, 18, ES2, 30, 40	6 0
A11M/214	... K.58	Magneto control lever only	1	30M, 40M	6 0

PLATE K.

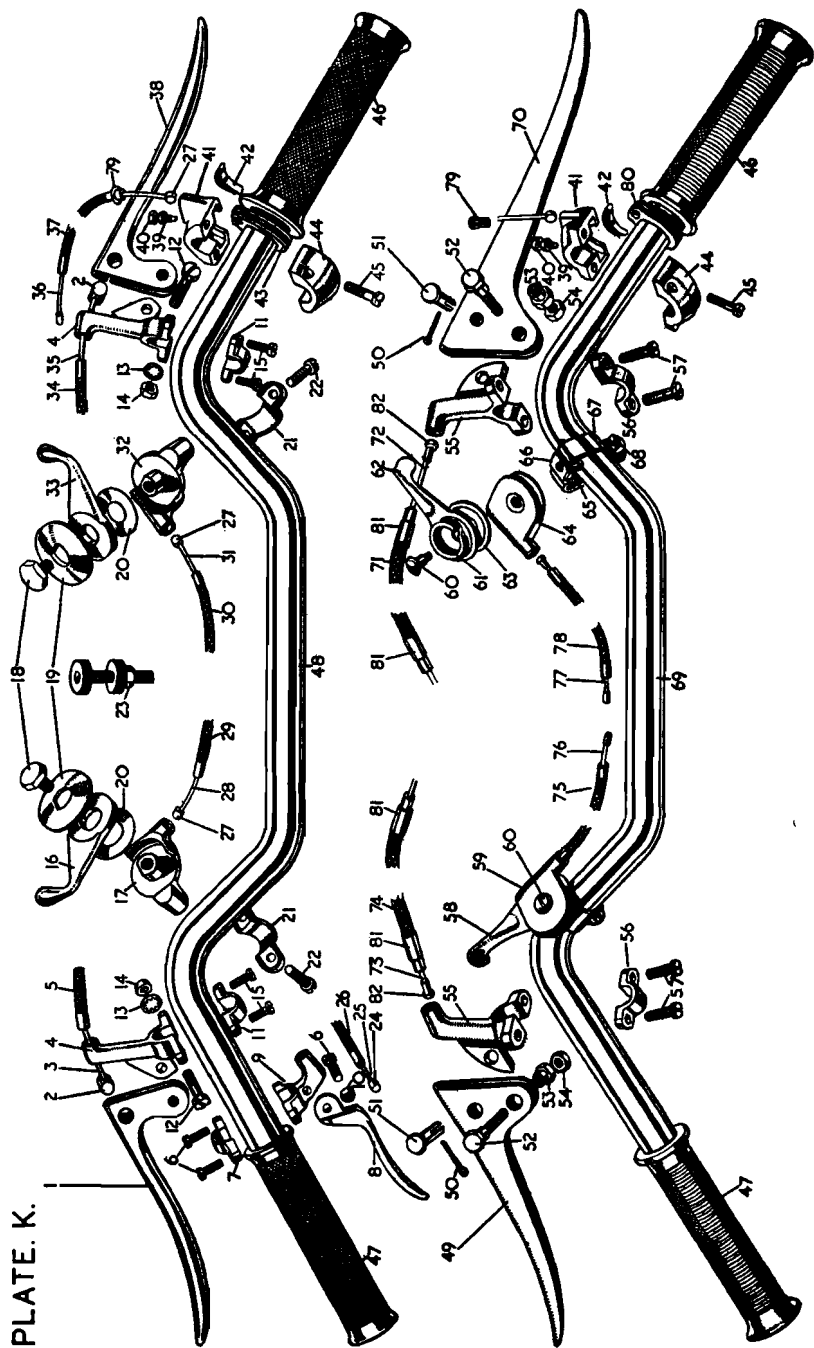

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
MAGNETO AND AIR CONTROL LEVERS—cont.					
A2/215	...	K.17 Magneto control lever body	1	1, 16H, 18, ES2, 30, 40	5 0
A11M/215	...	K.59 Magneto control lever body	1	30M, 40M	3 6
A2/216	...	Air control lever assembly complete	1	1, 16H, 18, ES2, 30, 40	16 8
A11M/216	...	Air control lever assembly complete	1	30M, 40M	16 8
A2/217	...	K.33 Air control lever only	1	1, 16H, 18, ES2, 30, 40	6 0
A11M/217	...	K.62 Air control lever only	1	30M, 40M	6 0
A2/218	...	K.32 Air control lever body	1	1, 16H, 18, ES2, 30, 40	5 0
A11M/218	...	K.64 Air control lever body	1	30M, 40M	3 6
A2/219	...	K.18 Air or magneto control lever top screw ..	2	1, 16H, 18, ES2, 30, 40	1 0
A11M/219	...	K.60 Air or magneto control lever top screw ..	2	30M, 40M	1 0
A2/220	...	K.19 Air or magneto control lever cap	2	1, 16H, 18, ES2, 30, 40	1 8
A11M/220	...	K.63 Air or magneto control lever cup	2	30M, 40M	9
A2/221	...	K.20 Air or magneto control lever cap spring washer	2	1, 16H, 18, ES2, 30, 40	4
A11M/221	...	K.61 Air or magneto control lever spring washer	2	30M, 40M	4
A2/222	...	K.21 Air or magneto control lever clip	2	1, 16H, 18, ES2, 30, 40	1 0
A11M/222(P)	...	K.67 Air or magneto control lever clip (plain)	2	30M, 40M	9
A11M/222(TH)	...	K.65 Air or magneto control lever clip (threaded)	2	30M, 40M	1 0
A2/223	...	K.22 Air or magneto control lever clip screw ..	2	1, 16H, 18, ES2, 30, 40	5
A11M/223	...	K.68 Air or magneto control lever clip screw ..	2	30M, 40M	5
A11M/747	...	K.66 Air or magneto control clip plate	2	30M, 40M	1 0

NOTE: Air and magneto levers of 1949 Models 1, 16H, 18, ES2, 30 and 40 are mounted on front brake and clutch levers respectively, dispensing with clip part number A2/222.

FRONT BRAKE AND CLUTCH CONTROL LEVERS.

A2/224	...	Front brake lever assembly complete	1	1, 16H, 18, ES2, 30, 40	19 0
A11M/224	...	Front brake lever assembly complete	1	30M, 40M	5 0
A2/225	...	K.38 Front brake lever only	1	1, 16H, 18, ES2, 30, 40	9 0
A11M/225	...	K.70 Front brake lever only	1	30M, 40M	12 6
A2/226	...	Clutch lever assembly complete	1	1, 16H, 18, ES2, 30, 40	19 0
A11M/226	...	Clutch lever assembly complete	1	30M, 40M	4 0
A2/227	...	K.1 Clutch lever only	1	1, 16H, 18, ES, 30, 40	9 0
A11M/227	...	K.49 Clutch lever only	1	30M, 40M	11 6
A2/228	...	K.4 Front brake or clutch lever body	2	1, 16H, 18, ES2, 30, 40	7 0
D2/228 LH	...	Clutch lever body (1949)	1	1, 16H, 18, ES2, 30, 40	7 0
A11M/228	...	K.55 Front brake or clutch lever body	2	30M, 40M	10 6
A2/222	...	K.11 Front brake or clutch lever clip	2	1, 16H, 18, ES2, 30, 40	1 0
A11M/222	...	K.56 Front brake or clutch lever clip	2	30M, 40M	1 0
A2/223	...	K.15 Front brake or clutch lever clip screw ...	4	1, 16H, 18, ES2, 30, 40	5
D2/228 RH	...	Front brake lever body (1949)	1	1, 16H, 18, ES2, 30, 40	7 0
A11M/223	...	K.57 Front brake or clutch lever clip screw ...	4	30M, 40M	5
A2/229	...	K.12 Front brake or clutch lever pivot pin	2	1, 16H, 18, ES2, 30, 40	1 0
A11M/229	...	K.52 Front brake or clutch lever pivot pin	2	30M, 40M	1 0
A2/230	...	K.14 Front brake or clutch lever pivot pin nut	2	1, 16H, 18, ES2, 30, 40	3
A2/873	...	K.13 Front brake or clutch lever pivot pin washer	2	1, 16H, 18, ES2, 30, 40	2

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
FRONT BRAKE AND CLUTCH CONTROL LEVERS—cont.					
A11M/230(L)	K.53	Front brake or clutch lever pivot pin nut (large)	2	30M, 40M	4
A11M/230(S)	K.54	Front brake or clutch lever pivot pin nut (small)	2	30M, 40M	3
A11M/231 ...	K.81	Front brake or clutch cable ferrule	4	30M, 40M	1 0

EXHAUST LIFTER CONTROL LEVER.

A2/233 ...		Exhaust valve lifter lever assembly complete	1	1, 16H, 18 ES2, 30, 40	14 6
A2/234 ...	K.8	Exhaust valve lifter lever only	1	1, 16H, 18 ES2, 30, 40	5 0
A2/235 ...	K.9	Exhaust valve lifter lever body	1	1, 16H, 18 ES2, 30, 40	5 0
A2/222 ...	K.7	Exhaust valve lifter lever clip	1	1, 16H, 18 ES2, 30, 40	1 0
A2/223 ...	K.6	Exhaust valve lifter lever pivot pin or clip screw	3	1, 16H, 18 ES2, 30, 40	5
A2/236 ...	K.10	Exhaust valve lifter lever pivot pin nut ...	1	1, 16H, 18 ES2, 30, 40	4

TWIST GRIP.

A2/237 ...		Twist grip complete	1	All Models	1 2 3
A11M/237 ...		Twist grip complete	1	30M, 40M	1 2 3
A2/238 ...	K.41	Twist grip top half clip	1	All Models	6 0
A2/239 ...	K.44	Twist grip bottom half clip	1	All Models	6 0
A2/240 ...	K.45	Twist grip clip fixing pin	2	All Models	8
A2/241 ...	K.43	Twist grip control barrel	1	1, 16H, 18, ES2, 30, 40	7 0
A11M/241 ...	K.80	Twist grip control barrel	1	30M, 40M	7 0
A2/242 ...	K.40	Twist grip control barrel adjusting screw	1	All Models	5
A2/236 ...	K.39	Twist grip control barrel adjusting screw nut	1	All Models	4
A2/243 ...	K.42	Twist grip control barrel adjusting screw spring	1	All Models	1 0
A2/244 ...	K.79	Twist grip cable stop	1	1, 16H, 18, ES2, 30, 40	8
A11M/244 ...	K.78	Twist grip cable stop	1	30M, 40M	8
A2/245 ...	K.46	Twist grip rubber	1	All Models	3 8
A2/246 ...	K.47	Dummy grip to match twist grip	1	All Models	3 8

CONTROL CABLE ADJUSTERS AND NIPPLES.

A2/247	P.66/K.23	Front brake or clutch cable adjuster	2	All Models	5 0
A2/248	C.41/F.70	Exhaust cable adjuster	1	1, 16H, 18, ES2, 30, 40	1 8
A2/249 ...	K.27	Magneto, air or throttle control cable nipple (handlebar end)	3	1, 16H, 18, ES2, 30, 40	3
A11M/249 ...		Magneto, air or throttle control cable nipple (handlebar end)	1	30M, 40M	3
A2/250 ...		Magneto control cable nipple, magneto end	1	1, 16H, 18, ES2, 30, 40	3
A11M/250 ...		Magneto control cable nipple, magneto end	1	30M, 40M	3
A2/251 ...		Air or throttle control cable nipple car- burettor end	2	All Models	3
A2/252 ...	K.2	Clutch or front brake control cable nipple handlebar end	2	1, 16H, 18, ES2, 30, 40	1 0
A11M/252 ...	K.82	Clutch or front brake cable nipple handle- bar end	2	30M, 40M	3
A11M/819 ...	K.51	Clutch or front brake lever cable nipple holder	2	30M, 40M	1 0
A11M/820 ...	K.50	Clutch or front brake lever cable nipple holder cotter	2	30M, 40M	2

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
------------	--------------	--------------	------	-------------	---------------------------

CONTROL CABLE ADJUSTERS AND NIPPLES—cont.

A2/253	...	Clutch control cable nipple gearbox end ..	1	All Models	3
A2/254	...	Front brake (U clip end) or exhaust lifter control cable nipple (lifter end)	2	1, 16H, 18, ES2, 30, 40	3
A11M/254	...	Front brake (U clip end) cable nipple ...	1	30M, 40M	3
A2/255	... K.24	Exhaust valve lifter control cable nipple (handlebar end)	1	1, 16H, 18, ES2, 30, 40	5

MAGNETO CONTROL CABLE.

A2/256	...	Magneto control cable inner and outer complete	1	1, 16H, 18, ES2, 30, 40	7 0
A11M/256	...	Magneto control cable inner and outer complete	1	30M, 40M	10 0
A2/257	... K.29	Magneto control cable outer	1	1, 16H, 18, ES2, 30, 40	4 0
A11M/257	... K.75	Magneto control cable outer	1	30M, 40M	7 0
A2/258	... K.28	Magneto control cable inner	1	1, 16H, 18, ES2, 30, 40	3 0
A11M/258	... K.76	Magneto control cable inner	1	30M, 40M	3 0

AIR CONTROL CABLE.

A2/259	...	Air control cable inner and outer complete	1	1, 16H, 18, ES2, 30, 40	4 6
A11M/259	...	Air control cable inner and outer complete	1	30M, 40M	6 6
A2/260	... K.30	Air control cable outer	1	1, 16H, 18, ES2, 30, 40	2 6
A11M/260	... K.78	Air control cable outer	1	30M, 40M	4 6
A2/261	... K.31	Air control cable inner	1	1, 16H, 18, ES2, 30, 40	2 0
A11M/261	... K.77	Air control cable inner	1	30M, 40M	2 0

THROTTLE CONTROL CABLE.

A2/262	...	Throttle control cable complete	1	1, 16H, 18, ES2, 30, 40	4 6
A11M/262	...	Throttle control cable complete	1	30M, 40M	6 6
A2/263	... K.37	Throttle control cable outer	1	1, 16H, 18, ES2, 30, 40	2 6
A11M/263	...	Throttle control cable outer	1	30M, 40M	4 6
A2/264	... K.36	Throttle control cable inner	1	1, 16H, 18, ES2, 30, 40	2 0
A11M/264	...	Throttle control cable inner	1	30M, 40M	2 0

CLUTCH CONTROL CABLE.

A2/265	...	Clutch control cable complete	1	1, 16H, 18, ES2, 30, 40	8 6
A11M/265	...	Clutch control cable complete	1	30M, 40M	12 6
A2/266	... K.5	Clutch control cable outer	1	1, 16H, 18, ES2, 30, 40	5 0
A11M/266	... K.74	Clutch control cable outer	1	30M, 40M	9 0
A2/267	... K.3	Clutch control cable inner	1	1, 16H, 18, ES2, 30, 40	3 4
A11M/267	... K.73	Clutch control cable inner	1	30M, 40M	3 6

FRONT BRAKE CONTROL CABLE.

B2/268	...	Front brake control cable complete	1	1, 16H, 18, ES2, 30, 40	8 0
A11M/268	...	Front brake control cable complete	1	30M, 40M	12 6
B2/269	... K.34	Front brake control cable outer	1	1, 16H, 18, ES2, 30, 40	5 0
A11M/269	... K.71	Front brake control cable outer	1	30M, 40M	9 0

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	-------------	---------------------------

FRONT BRAKE CONTROL CABLE—cont.

B2/270	...	K.35	Front brake control cable inner	1	1, 16H, 18, ES2, 30, 40	3 0
A11M/270	...	K.72	Front brake control cable inner	1	30M, 40M	3 6
A2/709	...	R.42	Front brake cable U clip	1	All Models	6
A2/427	...	R.43	Front brake cable U clip pin	1	All Models	4
A2/195	...	R.44	Front brake cable U clip pin cotter	1	All Models	2



EXHAUST CONTROL CABLE.

A2/271	...		Exhaust lifter control cable complete	1	1, 16H, 18, ES2, 30, 40	7 0
A2/272	...	K.26	Exhaust lifter control cable outer	1	1, 16H, 18, ES2, 30, 40	4 0
A2/273	...	K.25	Exhaust lifter control cable inner	1	1, 16H, 18, ES2, 30, 40	3 0

PETROL TANKS AND FITTINGS.

A2/274	...		Petrol tank	1	1, 16H, 18, ES2	12 5 0
A11/274	...		Petrol tank	1	30, 40	13 15 0
A11M/274	...		Petrol tank	1	30M, 40M	21 0 0
A2/275	...	L.23	Petrol tank platform packing washer (steel)	4	1, 16H, 18, ES2, 30, 40	4
A2/276	...	L.31	Petrol tank platform rubber washer	4	1, 16H, 18, ES2	6
A2/277	...	L.26	Petrol tank attachment bolt	4	1, 16H, 18, ES2, 30, 40	8
A2/278	...	L.24	Petrol tank attachment bolt rubber washer	4	1, 16H, 18, ES2	4
				8	30, 40	4
A2/279	...	L.25	Petrol tank attachment bolt rubber washer steel cup	4	1, 16H, 18, ES2, 30, 40	6
A11M/837	...	L.19	Petrol tank bolt front, long	2	30M, 40M	4 0
A11M/838	...	L.11	Petrol tank bolt rear, short (off side) ...	1	30M, 40M	2 6
A11M/839	...	L.10	Petrol tank bolt rear, long (near side) ...	1	30M, 40M	2 6
E3223	...	L.14	Petrol tank bolt nut (thick)	4	30M, 40M	4
E3231	...	L.15	Petrol tank bolt nut (thin)	4	30M, 40M	4
A11M/840	...	L.1	Petrol tank top rubber plug	4	30M, 40M	1 6
A2/279	...	L.6	Petrol tank rubber steel cup	8	30M, 40M	6
A11M/841	...	L.16	Petrol tank bottom rubber plug front and rear	4	30M, 40M	1 6
A11M/842	...	L.13	Petrol tank attachment bolt rubber washer (bottom)	4	30M, 40M	6
A11M/844	...	X.21	Petrol tank platform front (aluminium) ...	1	30M, 40M	10 0
13283	...	X.20	Petrol tank platform front frame securing bolt	3	30M, 40M	1 0
11796	...		Petrol tank platform front frame securing bolt washer	3	30M, 40M	3
A11/845	...	W.13	Petrol tank platform rear	1	30, 40 ...	6 8
E6453	...	W.10	Petrol tank platform rear frame stud ...	3	30, 40 ...	9
E3231	...	W.12	Petrol tank platform rear frame stud nut	3	30, 40 ...	4
11791	...	W.11	Petrol tank platform rear frame stud washer	3	30, 40 ...	3
A11M/845	...	X.16	Petrol tank platform rear	1	30M, 40M	6 8
E6749	...	X.14	Petrol tank platform rear frame stud ...	1	30M, 40M	9
12079	...	X.15	Petrol tank platform rear frame stud nut	1	30M, 40M	4
A11M/846	...	X.12	Petrol tank platform rear attachment bolt (near side) long	1	30M, 40M	2 3
A11M/847	...	X.13	Petrol tank platform rear attachment bolt short (off side)	1	30M, 40M	2 0
13263	...		Petrol tank platform rear attachment bolt nut	2	30M, 40M	4
A2/280	...	L.29	Petrol tank filler cap	1	1, 16H, 18, ES2	17 0
A11/280	...	L.20	Petrol tank filler cap	1	30, 40 ...	17 0
A11M/280	...	L.3	Petrol tank filler cap	1	30M, 40M	19 6

PLATE. L.

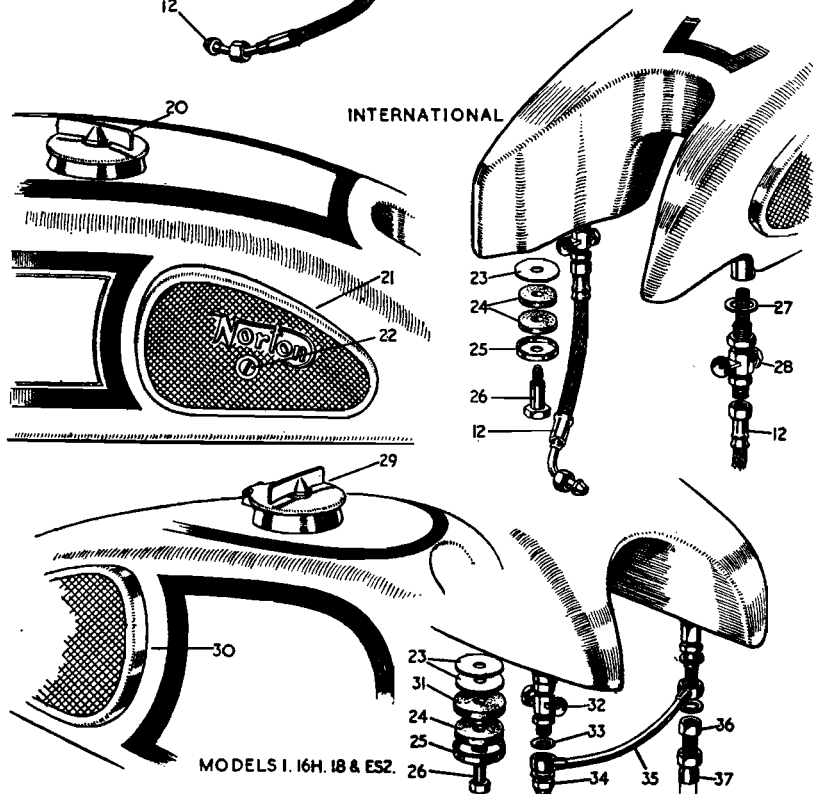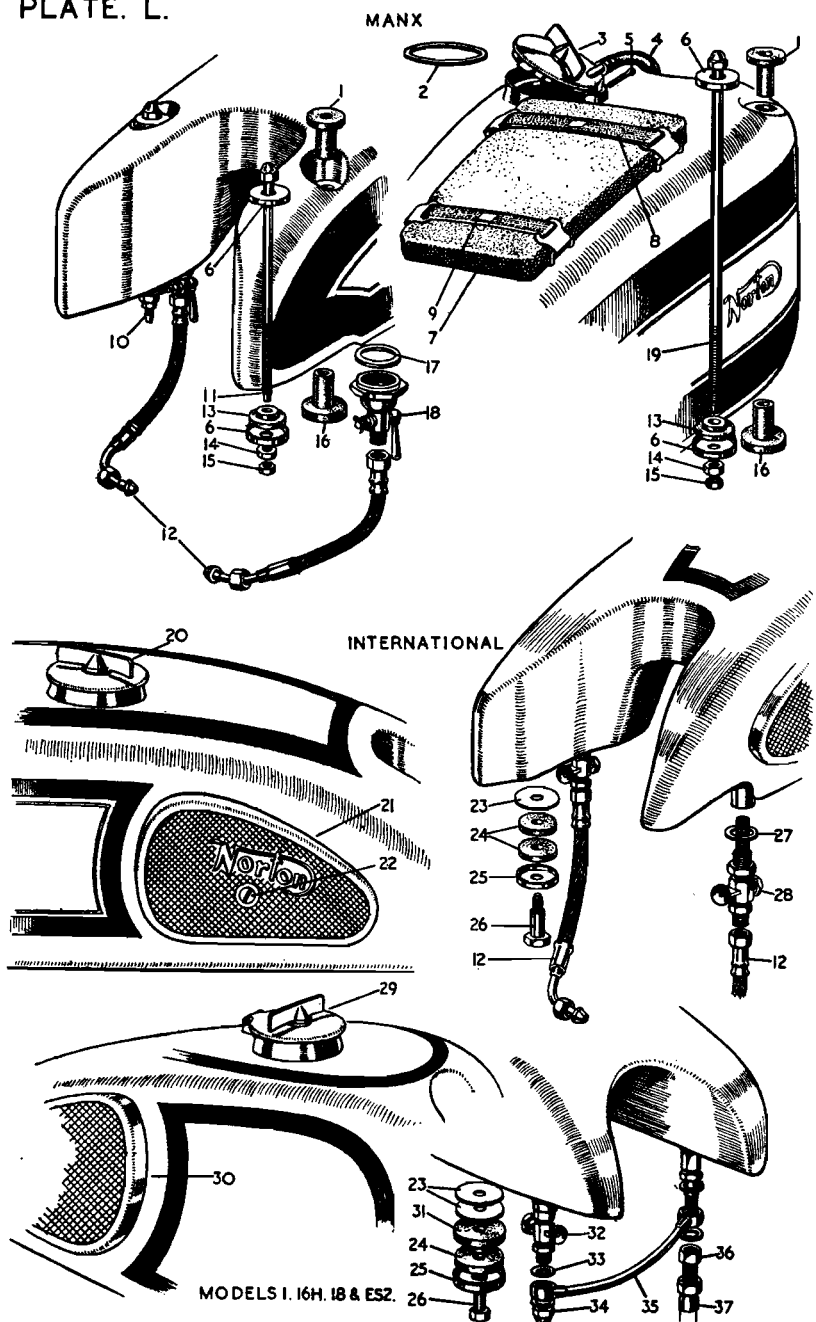

MODELS I, 16H, 18 & ES2.

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	-------------	---------------------------

PETROL TANKS AND FITTINGS—cont.

A2/710	...	Petrol tank filler cap washer	1	1, 16H, 18, ES2	1 0
A11/710	... L.2	Petrol tank filler cap washer	1	30, 30M, 40, 40M	1 3
A2/281	... L.5	Petrol tank filler cap cotter pin	1	All Models	2
A11M/848	... L.4	Petrol tank filler cap rubber vent tube ...	1	30M, 40M	4 6
A11M/849	...	Petrol tank filler cap rubber vent tube clip	1	30M, 40M	1 6
A11M/857	...	Petrol tank filler cap vent tube clip bolt	1	30M, 40M	8
E3222	...	Petrol tank filler cap vent tube clip bolt nut	1	30M, 40M	4
E5379	...	Petrol tank filler cap vent tube clip bolt washers	2	30M, 40M	3
A11M/850	... L.7	Petrol tank chin pad	1	30M, 40M	7 6
A11M/851(L)	... L.8	Petrol tank chin pad elastic (long)	1	30M, 40M	2 3
A11M/851(S)	... L.9	Petrol tank chin pad elastic (short)	1	30M, 40M	2 3
A2/282	... L.21	L.H. Knee grip (left-hand)	1	1, 16H, 18, ES2, 30, 40	6 6
A2/282	... L.30	R.H. Knee grip (right-hand)	1	1, 16H, 18, ES2, 30, 40	6 6
E6629	... L.22	Knee grip fixing pin	2	1, 16H, 18, ES2, 30, 40	5
B2/283	... L.37	Petrol pipe (rubber)	1	1, 16H, 18, ES2	6 8
A2/284	... L.35	Cross-over petrol pipe (copper)	1	1, 16H, 18, ES2	6 8
A2/285	... L.32	Petrol tap complete with filter	2	1, 16H, 18, ES2	7 0
E5264	...	Petrol tap washer	2	1, 16H, 18, ES2	3
A2/286	... L.36	Adaptor for petrol tap	1	1, 16H, 18, ES2	2 0
A2/287	... L.34	Nut petrol tap (domed)	1	1, 16H, 18, ES2	1 0
A2/288	... L.33	Petrol pipe banjo fibre washer	4	1, 16H, 18, ES2	3
A11/285	... L.28	Petrol tap with filter	2	30, 40	7 0
E5264	... L.27	Petrol tap washer	2	30, 40	3
A11M/285	... L.18	Petrol tap with sump	2	30M, 40M	10 0
A11M/852	... L.17	Petrol tap sump washer	2	30M, 40M	6
A11/283	... L.12	Petrol pipe, left or right hand	2	30, 30M, 40, 40M	11 0
A2/289	...	Petrol tank frame top tube packing	2	All Models	4

OIL TANKS AND FITTINGS.

C2/290	... M.27	Oil tank less fittings	1	1, 16H, 18, ES2	4 0 0
A11/290	... M.24	Oil tank less all fittings	1	30, 40	5 15 0
A11M/290	... M.4	Oil tank less all fittings	1	30M, 40M	9 15 0
A2/291	... M.26	Oil tank filler cap	1	1, 16H, 18, ES2	17 0
A11/291	... M.19	Oil tank filler cap	1	30, 40	17 0
A11M/291	... M.5	Oil tank filler cap	1	30M, 40M	18 0
A2/711	...	Oil tank filler cap washer	1	1, 16H, 18, ES2	1 0
A11/711	...	Oil tank filler cap washer	1	30, 30M, 40, 40M	1 0
A2/281	... M.7	Oil tank filler cap cotter pin	1	All Models	2
A11M/853	... M.6	Oil tank filler cap rubber vent tube	1	30M, 40M	4 6
A11M/849	...	Oil tank filler cap vent tube clip	1	30M, 40M	1 6
E3801	...	Oil tank vent tube clip bolt	1	30M, 40M	5
E3231	...	Oil tank vent tube clip bolt nut	1	30M, 40M	4
A2/275	...	Oil tank vent tube clip bolt large washer ..	2	30M, 40M	4
E5376	...	Oil tank vent tube clip bolt small washer	1	30M, 40M	3
A2/292	... M.36	Oil tank union and filter	1	1, 16H, 18, ES2	7 0
A2/293	... M.35	Oil tank union washer	1	1, 16H, 18, ES2	6


PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
OIL TANK AND FITTINGS—cont.					
A2/294	...	Oil tank union packing washer	1	1, 16H, 18, ES2	3
A11/292	... M.12	Oil tank union and filter	1	30, 30M, 40, 40M	7 0
A2/298	... M.34	Oil tank air release pipe	1	1, 16H, 18, ES2	4 0
E3331	... M.33	Oil tank air release pipe nut	1	1, 16H, 18, ES2	4
A11/298	... M.20	Oil tank air release pipe	1	30, 40	4 0
E3331	... M.21	Oil tank air release pipe nut	1	30, 40	4
A2/295	... M.39	Oil tank delivery pipe with union nuts and nipples	1	1, 16H, 18, ES2	7 6
A2/296	... M.37	Oil tank return pipe with union nuts and nipples	1	1, 16H	7 6
C3/296	... M.38	Oil tank return pipe with union nuts and nipples	1	18, ES2	8 6
A2/712	... M.41	Oil tank delivery pipe rubber connection	1	1, 16H, 18 ES2	2 3
A2/713	...	Oil tank return pipe rubber connection ...	1	1, 16H	2 3
C3/713	... M.40	Oil tank return pipe rubber connection ...	1	18, ES2	2 6
A11/295	... M.13	Oil tank delivery pipe	1	30, 30M, 40, 40M	17 0
A11/296	... M.11	Oil tank return pipe	1	30, 30M, 40, 40M	13 0
12868	... V.48	Oil tank attachment clip pin (mudguard bridge)	1	1, 16H, 18, ES2, 30, 40	5
B2/297	... M.25	Oil tank top and voltage regulator attach- ment clip (mudguard bridge)	1	1, 16H, 18, ES2	2 6
E5105	... V.50	Oil tank and rear mudguard distance piece	1	1, 16H, 18, ES2, 30, 40	6
E3223	... V.51	Oil tank attachment clip pin nut	1	1, 16H, 18, ES2, 30, 40	4
E5456	... V.49	Oil tank attachment clip pin washer	2	1, 16H, 18, ES2, 30, 40	3
A11/297	... M.22	Oil tank top attachment clip	1	30, 40 ...	3 0
A11/843	... M.23	Voltage regulator clip	1	30, 40 ...	1 6
A11M/297	... M.3	Oil tank top attachment clip	1	30M, 40M	3 0
11070	... V.67	Oil tank clip and rear mudguard seat stay attachment bolt	1	30M, 40M	1 0
E3223	... V.65	Oil tank clip and rear mudguard seat stay Attachment bolt nut (thick)	1	30M, 40M	4
E3231	... V.64	Oil tank clip and rear mudguard seat stay attachment bolt nut (thin)	1	30M, 40M	4
E5455	... V.66	Oil tank clip and rear mudguard seat stay attachment bolt washer	2	30M, 40M	3
E5105	... V.67	Oil tank clip and rear mudguard seat stay attachment bolt distance piece	1	30M, 40M	6
A2/278	... V.68	Oil tank clip and rear mudguard seat stay attachment bolt rubber	1	30M, 40M	4
A2/279	... V.69	Oil tank clip and rear mudguard seat stay attachment bolt rubber cup	1	30M, 40M	6
12342	... M.1	Oil tank top attachment clip pin	2	30, 30M, 40, 40M	5
E5379	... M.2	Oil tank top attachment clip pin washer	2	1, 16H, 18, ES2	5
E6745	... M.17	Oil tank bottom fixing pin	2	30M, 40M	8
A2/278	... M.15	Oil tank bottom rubber washer	4	30M, 40M	4
A2/279	... M.16	Oil tank bottom rubber washer steel cup	2	30M, 40M	6
A2/275	... M.14	Oil tank bottom steel washer	4	30M, 40M	4
E6453	... M.28	Oil tank bottom stud	2	1, 16H, 18, ES2, 30, 40	6
E3223	... M.30	Oil tank bottom stud nut	2	1, 16H, 18, ES2, 30, 40	4

PLATE. M.

MANX

INTERNATIONAL

MODELS
1. 16H. 18 & ES2.

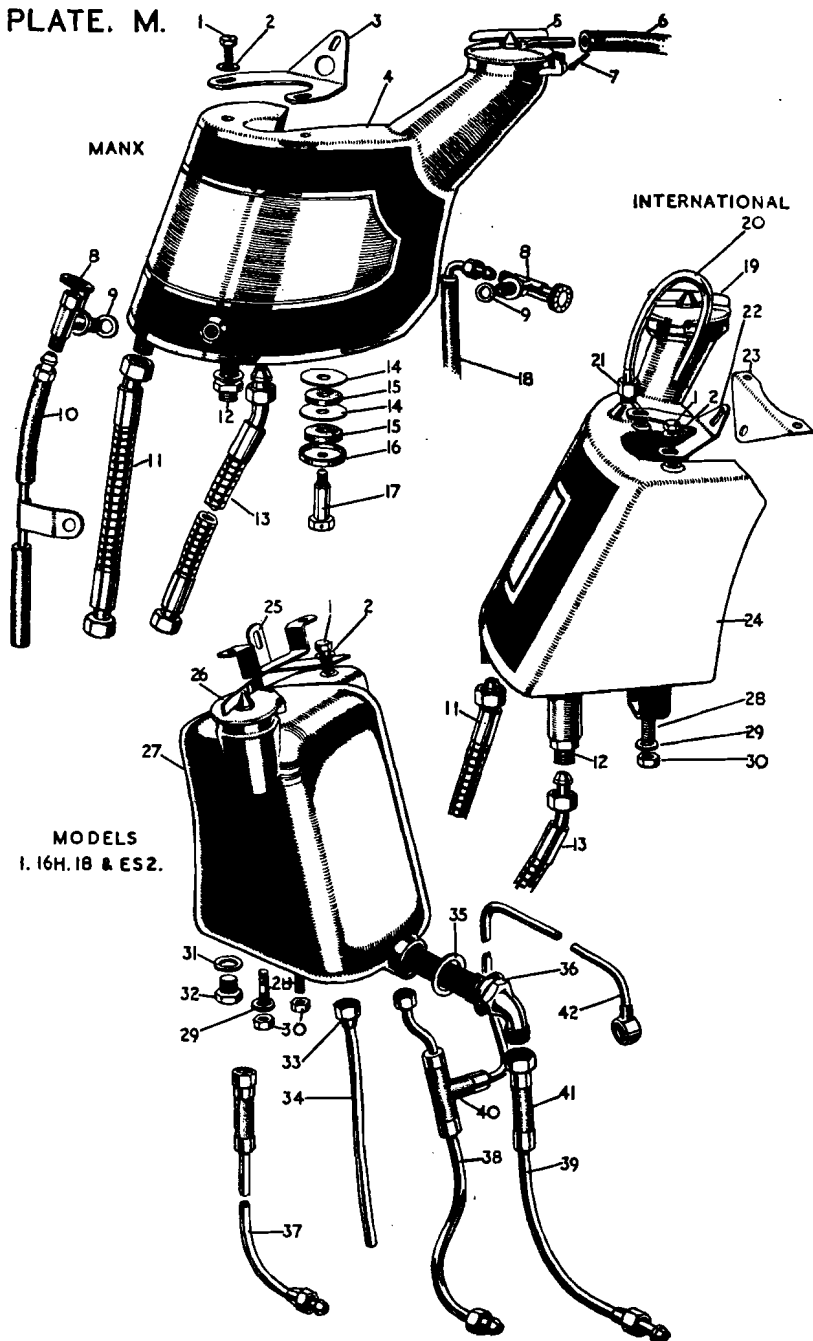

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	--------------	---------------------------

OIL TANKS AND FITTINGS—cont.

E5456	...	M.29	Oil tank bottom stud washer	2	1, 16H, 18, ES2, 30, 40	3
E3336	...	M.32	Oil tank drain plug	1	1, 16H, 18, ES2	8
E5264	...	M.31	Oil tank drain plug washer	1	1, 16H, 18, ES2	3
A11M/854	...	M.8	Oil tank chain oiler tap less pipe (front or rear)	2	30M, 40M	12 6
A11M/880	...	M.9	Oil tank chain oiler tap washer	2	30M, 40M	3
A11M/855	...	M.10	Oil tank chain oiler tap pipe (front chain)	1	30M, 40M	4 6
A11M/856	...	M.18	Oil tank chain oiler tap pipe with clip (rear chain)	1	30M, 40M	5 6

GEARBOX SHELL.

A2/299	...	N.31	Gearbox shell with studs	1	1, 16H, 18, ES2, 30, 40	6 19 0
A11M/299	...	N.31	Gearbox shell with studs	1	30M, 40M	6 19 0
A2/300	...	P.40	Gearbox end cover, inner	1	1, 16H, 18, ES2, 30, 40	2 15 0
B2/301	...	P.17	Gearbox end cover, outer	1	1, 16H, 18, ES2, 30, 40	1 0 0
A11M/301	...	Q.31	Gearbox end cover	1	30M, 40M	2 15 0
B2/302	...	P.8	Gearbox clutch worm inspection cover ...	1	1, 16H, 18, ES2, 30, 40	7 6
B2/647	...	P.7	Gearbox clutch worm inspection cover screw	2	1, 16H, 18, ES2, 30, 40	6
A2/303	...	N.30	Paper washer	—	All Models	4
A2/304	...	N.43	Gearbox cover stud	6	1, 16H, 18, ES2, 30, 40	5
A2/305	...	N.43	Gearbox cover stud	7	30M, 40M	5
A2/306	...	N.42	Gearbox cover stud (bottom)	1	1, 16H, 18, ES2, 30, 40	8
A2/307	...	P.14	Gearbox cover stud nut	7	1, 16H, 18, ES2, 30, 40	4
A11M/307	...	Q.29	Gearbox cover stud nut	7	30M, 40M	4
A2/308	...	P.15	Gearbox cover stud spring washer	7	All Models	3
A2/309	...	P.13	Gearbox outer cover fixing screw	4	1, 16H, 18, ES2, 30, 40	5
A2/315	...	P.38	Gearbox oil filler plug	1	All Models	1 8
E3336	...	N.41	Gearbox oil drain plug	1	All Models	8

GEARBOX FIXING BOLTS.

A2/310	...	N.13	Gearbox suspension bolt and nut	1	1, 16H, 18, ES2, 30, 40	6 0
A11M/310	...		Gearbox suspension bolt and nut	1	30M, 40M	6 0
A2/313	...	N.8	Gearbox suspension bolt nut	1	1, 16H, 18, ES2, 30, 40	2 8
A11M/313	...	Q.39	Gearbox suspension bolt nut	1	30M, 40M	2 8
E5454	...	N.9	Gearbox suspension bolt nut washer	1	All Models	4
A2/312	...	N.53	Gearbox bottom bolt and nut	1	All Models	3 0
A2/313	...	N.54	Gearbox bottom bolt nut	1	All Models	1 0


GEARBOX FRONT CHAIN ADJUSTER.

A2/314	...	N.7	Gearbox front chain adjuster plate assembly	1	All Models	4 8
12342	...	N.6	Gearbox front chain adjuster plate pin ...	2	All Models	5

GEARBOX PINIONS SHAFTS AND BEARINGS.


A2/316	...	N.29	Main gear wheel bearing complete	1	All Models	1 7 0
A2/317	...	N.27	Main gear wheel oil retaining washer (between main gear wheel and bearing)	1	All Models	4

PLATE. N.

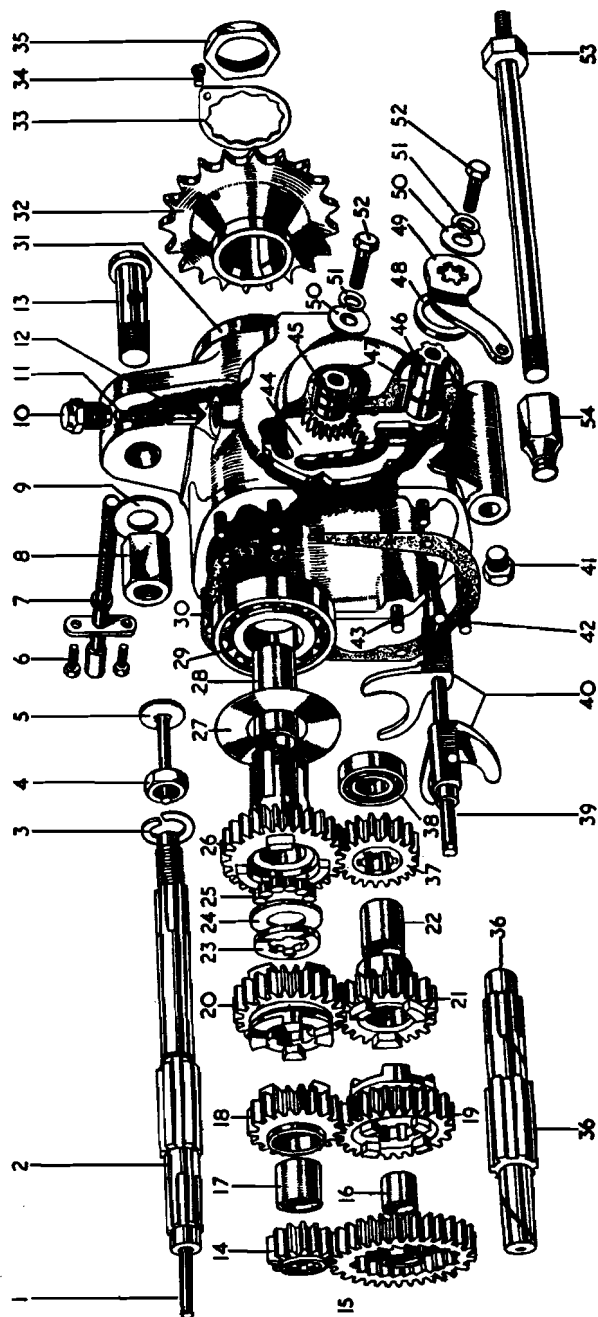

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
GEARBOX PINIONS SHAFTS AND BEARINGS—cont.					
A2/318	... N.25	Main gear wheel sleeve bearing rollers (per set 13)	1	All Models	5 0
A2/319	... N.24	Main gear wheel sleeve bearing roller retaining washer	1	All Models	2 0
A2/320		Main gear wheel bearing oil retaining washer (between gear box shell and bearing)	1	All Models	4
A2/321	... P.49	Mainshaft R.H. bearing	1	All Models	16 0
B2/322	... N.38	Layshaft L.H. bearing	1	All Models	16 0
A11M/322	... Q.30	Layshaft bearing for gearbox end cover	1	30M, 40M	16 0
A2/323	... P.48	Mainshaft bearing packing washer	1	All Models	3
A2/324	... N.2	Main axle	1	1, 16H, 18 ES2, 30, 40	2 0 0
A11M/324	... N.2	Main axle	1	30M, 40M	2 5 0
A2/325	... N.36	Layshaft	1	1, 16H, 18 ES2, 30, 40	1 16 8
A11/325	... Q.35	Layshaft	1	30M, 40M	2 0 0
A2/326	... N.26	Main gear wheel with bronze bush	1	1, 16H, 18 ES2, 30, 40	2 0 0
A11/326	... N.26	Main gear wheel with bronze bush	1	30, 30M, 40, 40M	2 5 0
A2/327	... N.28	Main gear wheel bush (per pair)	1	All Models	4 8
A2/328	... N.23	Main axle thrust washer	1	All Models	5 0
A2/329	... N.20	Main axle sliding pinion	1	1, 16H, 18, ES2	1 10 0
A11/329	... N.20	Main axle sliding pinion	1	30, 30M, 40, 40M	1 12 6
A2/330	... N.18	Main axle free pinion	1	1, 16H, 18, ES2	1 6 0
A11/330	... N.18	Main axle free pinion	1	30, 30M, 40, 40M	1 7 6
A2/331	... N.14	Main axle pinion	1	1, 16H, 18, ES2	12 0
A11M/331	... Q.32	Main axle pinion	1	30M, 40M	14 0
A11/331	... N.14	Main axle pinion	1	30, 40 ...	14 0
A11/332	... N.37	Layshaft pinion	1	30, 30M, 40, 40M	16 0
A2/332	... N.37	Layshaft pinion	1	1, 16H, 18, ES2	14 0
A11/333	... N.21	Layshaft free pinion	1	30, 30M, 40, 40M	1 5 0
A2/333	... N.21	Layshaft free pinion	1	1, 16H, 18, ES2	1 3 4
A11/334	... N.19	Layshaft sliding pinion	1	30, 30M, 40, 40M	1 12 6
A2/334	... N.19	Layshaft sliding pinion	1	1, 16H, 18, ES2	1 10 0
A2/335	... N.17	Bush for main axle free pinion	1	All Models	4 0
A2/336	... N.22	Bush for layshaft free pinion	1	All Models	5 0
A2/337	... N.15	Low gear and kickstarter wheel with bronze bush	1	1, 16H, 18, ES2	1 13 4
A11/337	... N.15	Low gear and kickstarter wheel with bronze bush	1	30, 40	1 15 0
A2/338	... N.16	Bronze bush for low gear and kick-start wheel	1	1, 16H, 18, ES2, 30, 40	4 8
A11M/337	... Q.33	Low gear wheel with bronze bush	1	30M, 40M	1 15 0
A11M/338	... Q.34	Low gear wheel bronze bush	1	30M, 40M	4 8
A2/339	... N.40	Striker fork	2	All Models	1 0 0
A2/340	... N.39	Striker fork shaft	1	All Models	5 0
A2/341	... N.44	Cam plate	1	All Models	1 0 0
A2/342	... N.45	Cam plate spindle	1	All Models	13 4
A2/343	... N.46	Cam plate quadrant with spindle	1	All Models	16 8
A2/344	... N.47	Cam plate or quadrant spindle bush	2	All Models	5 0
A2/345	... N.48	Quadrant spindle oil retaining washer (cork)	1	All Models	4
A2/346	... N.50	Cam plate or quadrant spindle washer	2	All Models	5
A2/347	... N.51	Cam plate or quadrant spring washer	2	All Models	3

PLATE. P.

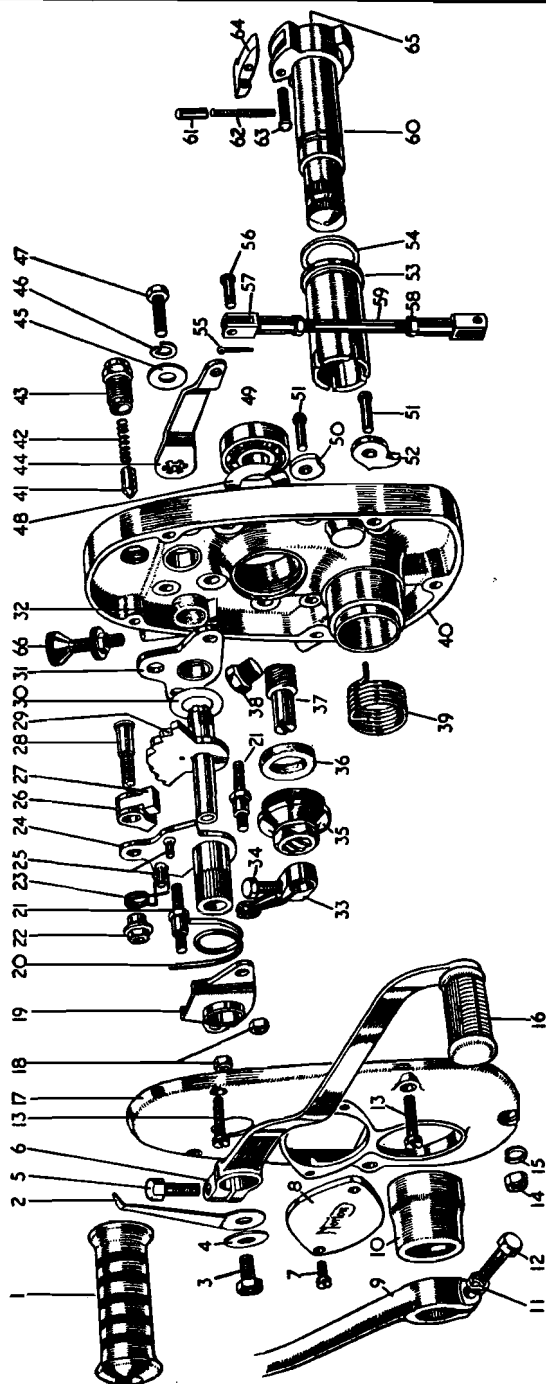

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
GEARBOX PINIONS SHAFTS AND BEARINGS—cont.					
A2/348	... N.52	Cam plate or quadrant spindle bolt	2	All Models	5
A2/349	... N.49	Cam plate quadrant lever	1	All Models	10 0
A2/350	... N.12	Indexing plunger	1	All Models	8
A2/351	... N.10	Indexing plunger bush	1	All Models	2 4
A2/352	... N.11	Indexing plunger spring	1	All Models	4
A2/372	... N.4	Main axle nut.....	1	All Models	1 0
A2/373	... N.3	Axle nut lock washer	1	All Models	3

KICKSTARTER PARTS.

A2/353	... P.60	Kick-starter axle with bronze bush	1	1, 16H, 18, ES2, 30, 40	2 0 0
A2/354	... P.65	Bronze bush for K.S. end of layshaft ...	1	1, 16H, 18, ES2, 30, 40	5 0
A2/355	... P.54	Kick-starter axle cork washer	1	1, 16H, 18, ES2, 30, 40	4
A2/356	... P.64	Kick-starter pawl	1	1, 16H, 18, ES2, 30, 40	2 8
A2/357	... P.63	Kick-starter pawl pin	1	1, 16H, 18, ES2, 30, 40	8
A2/358	... P.10	Kick-starter return spring cover	1	1, 16H, 18, ES2, 30, 40	2 4
A2/259	... P.12	Kick-starter crank bolt	1	1, 16H, 18, ES2, 30, 40	5
A2/308	... P.11	Kick-starter crank bolt washer	1	1, 16H, 18, ES2, 30, 40	3
A2/360	... P.9	Kick-starter crank	1	1, 16H, 18, ES2, 30, 40	1 6 8
A2/367	... P.39	Kick-starter return spring	1	1, 16H, 18, ES2, 30, 40	2 4
B2/648	... P.1	Kick-starter crank rubber	1	1, 16H, 18, ES2, 30, 40	2 0
A2/361	... P.50	Kick-starter cam	1	1, 16H, 18, ES2, 30, 40	8
A2/362	... P.51	Kick-starter cam or stop piece rivet.....	1	1, 16H, 18, ES2, 30, 40	3
A2/363	... P.52	Kick-starter stop piece	1	1, 16H, 18, ES2, 30, 40	10
A2/364	... P.53	Kick-starter bush	1	1, 16H, 18, ES2, 30, 40	6 0
A2/365	... P.62	Kick-starter pawl spring	1	1, 16H, 18, ES2, 30, 40	4
A2/366	... P.61	Kick-starter pawl spring plunger	1	1, 16H, 18, ES2, 30, 40	8

GEARBOX AXLE SPROCKET.

A2/368	... N.32	Axle sprocket	1	All Models	1 2 0
A2/369	... N.35	Axle sprocket locking nut	1	All Models	1 8
A2/370	... N.33	Axle sprocket nut locking plate	1	All Models	8
A2/371	... N.34	Axle sprocket locking plate screw	1	All Models	3

NOTE.—Axle sprockets supplied 16T or 19T.


CLUTCH GROUP.

A2/374	...	Clutch assembly complete	1	1, 16H, 18, ES2, 30, 40, ... 12	5 0
A11M/374	...	Clutch assembly complete	1	30M, 40M	12 5 0
A2/375	... P.37	Clutch worm	1	1, 16H, 18, ES2, 30, 40	5 0
A11M/375	... Q.28	Clutch worm	1	30M, 40M	5 0
A2/376	... P.35	Clutch worm nut	1	1, 16H, 18, ES2, 30, 40	13 4
A2/861	... P.36	Clutch worm nut felt washer	1	1, 16H, 18, ES2, 30, 40	4
A11M/376	... Q.26	Clutch worm nut	1	30M, 40M	13 4
A11M/861	... Q.25	Clutch worm nut felt washer	1	30M, 40M	4

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
CLUTCH GROUP—cont.					
A11M/862 ...	Q.24	Clutch worm nut cover	1	30M, 40M	3 4
A2/377 ...	P.33	Clutch worm lever	1	All Models	5 0
A11M/863 ...	Q.27	Clutch worm nut bearing packing washer	1	30M, 40M	3
A2/378 ...	P.34	Clutch worm lever bolt	1	All Models	4
A2/379 ...	N.1	Clutch rod	1	All Models	2 0
A2/380 ...	N.5	Thrust pin	1	1, 16H, 18, ES2, 30, 40	2 0
A11M/380 ...	Q.38	Thrust pin	1	30M, 40M	2 0
A2/381 ...	Q.2	Clutch back plate	1	1, 16H, 18, ES2, 30, 40	5 6
A11M/381 ...	Q.2	Clutch back plate	1	30M, 40M	6 6
A2/382 ...	Q.3	Clutch roller cage	1	All Models	3 6
A2/383 ...	Q.4	Clutch roller (per set 15)	1	All Models	6 6
A2/384 ...	Q.13	Clutch sprocket with inserts	1	1, 16H, 18, ES2, 30, 40	2 5 0
A11M/384 ...	Q.41	Clutch sprocket with inserts	1	30M, 40M	2 7 6
A2/385 ...	Q.7	Clutch body	1	1, 16H, 18, ES2, 30, 40	1 17 0
A11M/385 ...	Q.40	Clutch body	1	30M, 40M	1 17 0
A2/386 ...	Q.5	Clutch body back cover plate	1	All Models	4 8
A2/387 ...	Q.10	Clutch body centre	1	1, 16H, 18, ES2, 30, 40	17 0
A11M/387 ...	Q.10	Clutch body centre	1	30M, 40M	17 0
A2/388 ...	Q.8	Clutch body centre rubber buffers, large (per set of 3)	1	1, 16H, 18, ES2, 30, 40	4 6
A11M/388 ...	Q.8	Clutch body centre rubber buffers, large (per set of 3)	1	30M, 40M	4 6
A2/389 ...	Q.9	Clutch body centre rubber buffers, small (per set of 3)	1	1, 16H, 18, ES2, 30, 40	4 6
A11M/389 ...	Q.9	Clutch body centre rubber buffers, small (per set of 3)	1	30M, 40M	4 6
A2/390 ...	Q.11	Clutch body front cover plate	1	All Models	6 0
A2/391 ...	Q.12	Clutch body front cover plate retaining screw (3)	3	All Models	3
A2/392 ...	Q.14	Clutch plate (steel)	5	1, 16H, 18, ES2, 30, 40	5 6
A2/393 ...	Q.15	Clutch friction plate with inserts	4	30M, 40M	5 6
A2/394 ...		Clutch friction plate inserts (per doz.) ...	5	1, 16H, 18, ES2, 30, 40	11 0
A2/395 ...		Clutch sprocket inserts (per doz.)	3	30M, 40M	11 0
A2/396 ...	Q.18	Clutch plate cover	100	1, 16H, 18, ES2, 30, 40	3 0
A2/397 ...	Q.17	Clutch outer plate	60	30M, 40M	3 0
A2/398 ...	Q.16	Clutch plate retaining ring	20	All Models	3 0
A2/399 ...	Q.20	Clutch spring	1	1, 16H, 18, ES2, 30, 40	4 6
A11M/399 ...	Q.43	Clutch spring	1	All Models	5 6
A2/400 ...	Q.19	Clutch spring box	1	All Models	1 4
A11M/400 ...	Q.42	Clutch spring box	3	1, 16H, 18, ES2, 30, 40	8
A2/401 ...	Q.6	Clutch spring stud	3	30M, 40M	1 0
A11M/401 ...	Q.6	Clutch spring stud	3	1, 16H, 18, ES2, 30, 40	1 6
A2/402 ...	Q.1	Clutch spring stud nut	3	30M, 40M	1 6
A2/403 ...	Q.21	Clutch spring screw	3	All Models	4
A11M/403 ...	Q.44	Clutch spring screw	3	1, 16H, 18, ES2, 30, 40	4
A11M/403 ...	Q.44	Clutch spring screw	3	30M, 40M	1 6

POSITIVE FOOTCHANGE PARTS.

A2/404 ...	P.2	Gearbox change speed indicator	1	All Models	2 6
A2/405 ...	P.3	Change speed indicator bolt	1	All Models	1 8

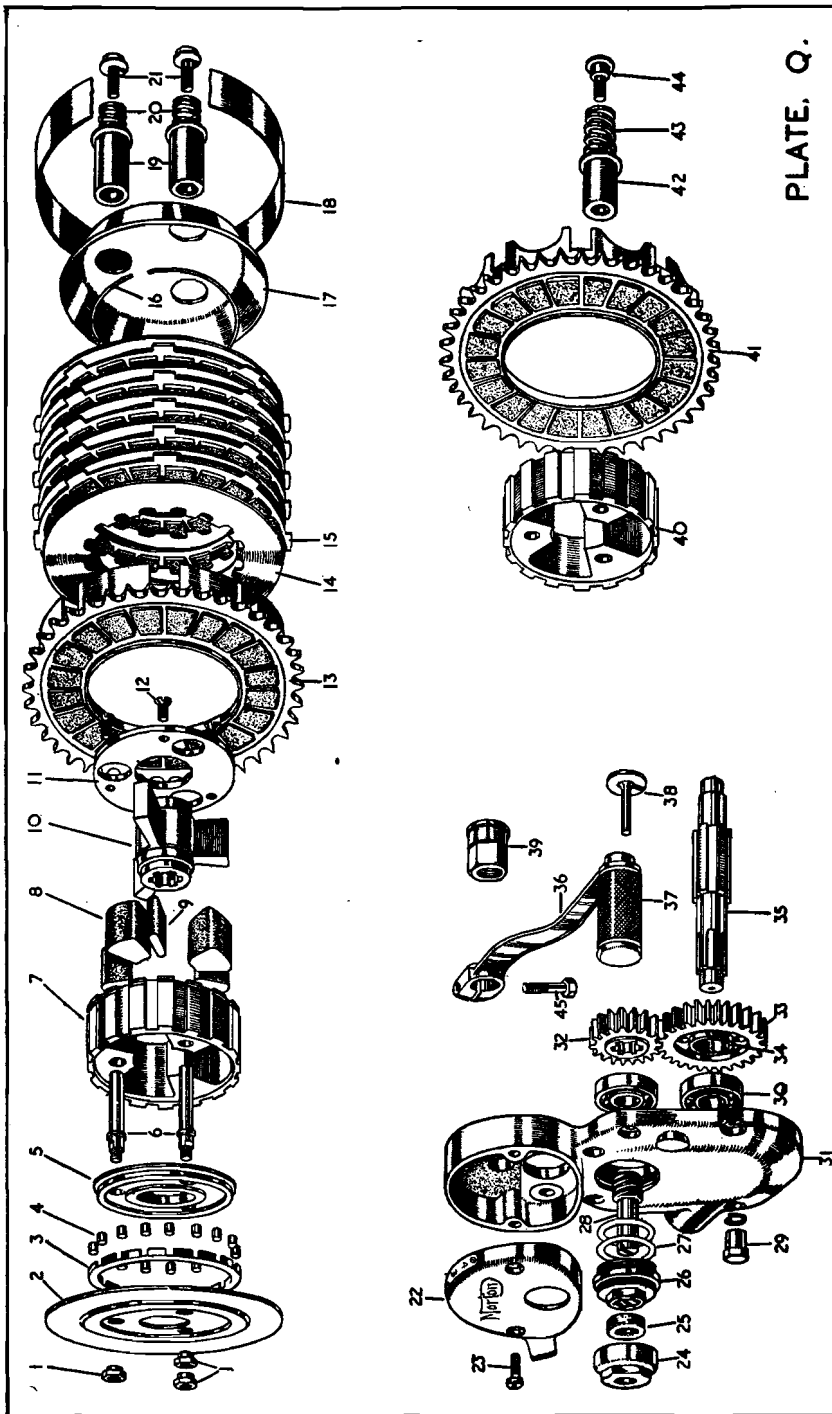

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	-------------	---------------------------

POSITIVE FOOTCHANGE PARTS—cont.

A2/864	... P.4	Change speed indicator bolt washer	1	All Models	3
B2/406	... P.6	Gear lever	1	1, 16H, 18, ES2, 30, 40	1 0 0
A11M/406	... Q.36	Gear lever	1	30, 40M	1 0 0
A11M/821	... Q.22	Positive footchange cover	1	30M, 40M	7 0
A11M/822	... Q.23	Positive footchange cover screw	2	30M, 40M	6
B2/407	... P.16	Gear lever rubber	1	1, 16H, 18, ES2, 30, 40	2 0
A11M/407	... Q.37	Gear lever rubber	1	30M, 40M	2 6
A2/408	P.5/Q.45	Gear lever securing bolt	1	All Models	8
A2/409	... P.19	Return spring cover plate	1	All Models	6 8
A2/410	... P.20	Return spring for pawl carrier	1	All Models	1 4
A2/411	... P.21	Stop stud for pawl carrier	2	All Models	1 4
A2/412F	... P.18	Stop stud nut for pawl carrier (front)	2	All Models	8
A2/412R	... P.18	Stop stud nut for pawl carrier (rear)	2	All Models	8
A2/413	... P.25	Peg for pawl carrier	2	All Models	4
A2/414	... P.24	Pawl carrier	1	All Models	13 0
A2/415	... P.30	Pawl carrier spacing washer	1	All Models	3
A2/416	... P.32	Pawl carrier felt washer	1	All Models	1 0
A2/417	... P.27	Pawl (plain)	1	All Models	4 0
A2/418	... P.26	Pawl (forked)	1	All Models	4 0
A2/419	... P.23	Pawl return spring	1	All Models	1 0
A2/420	... P.28	Pawl pin	1	All Models	1 6
A2/421	... P.22	Pawl pin nut	1	All Models	8
A2/422	... P.29	Ratchet plate	1	All Models	1 0 0
A2/423	... P.31	Cam plate	1	All Models	4 0
A2/350	... P.41	Cam plate plunger	1	All Models	8
A2/351	... P.43	Cam plate plunger bush	1	All Models	2 4
A2/352	... P.42	Cam plate plunger spring	1	All Models	4
A2/424	... P.44	Ratchet lever	1	All Models	5 0
A2/346	... P.45	Ratchet lever securing bolt washer	1	All Models	4
A2/347	... P.46	Ratchet lever securing bolt spring washer	1	All Models	3
A2/348	... P.47	Ratchet lever securing bolt	1	All Models	4

GEAR CONTROL ROD AND FITTINGS.

A2/425	... P.59	Gearbox control rod	1	All Models	2 0
A2/411	... P.58	Gearbox control rod nut	2	All Models	4
A2/426	... P.57	Gearbox control rod top or bottom connection	2	All Models	5 0
A2/427	... P.56	Gearbox control rod connection pin	2	All Models	4
A2/195	... P.55	Gearbox control rod connection split pin	2	All Models	2


FRONT AND REAR WHEEL COMPLETE ASSEMBLIES.

B2/714	...	Front wheel complete with bearings and brake (less tyre)	1	1, 16H, 18, ES2	13 10 0
B11/714	...	Front wheel complete with bearings and brake (less tyre)	1	30, 40 ...	13 10 0
A11M/714	...	Front wheel complete with bearings and brake (less tyre)	1	30M, 40M	21 0 0
B2/715	...	Rear wheel complete with bearings and brake (less tyre)	1	1, 16H, 18	... 16 0 0
B4/715	...	Rear wheel complete with bearings and brake (less tyre)	1	ES2	... 17 5 0
B11/715	...	Rear wheel complete with bearings and brake (less tyre)	1	30, 40 ...	17 5 0
A11M/715	...	Rear wheel complete with bearings and brake (less tyre)	1	30M, 40M	17 5 0

FRONT AND REAR WHEELS WITH HUB SHELL ONLY.

B2/428	...	Front wheel with hub shell only	1	1, 16H, 18, ES2	6 10 0
B11/428	...	Front wheel with hub shell only	1	30, 40 ...	6 12 6
A11M/428	...	Front wheel with hub shell only	1	30M, 40M	10 0 0

PLATE. R.

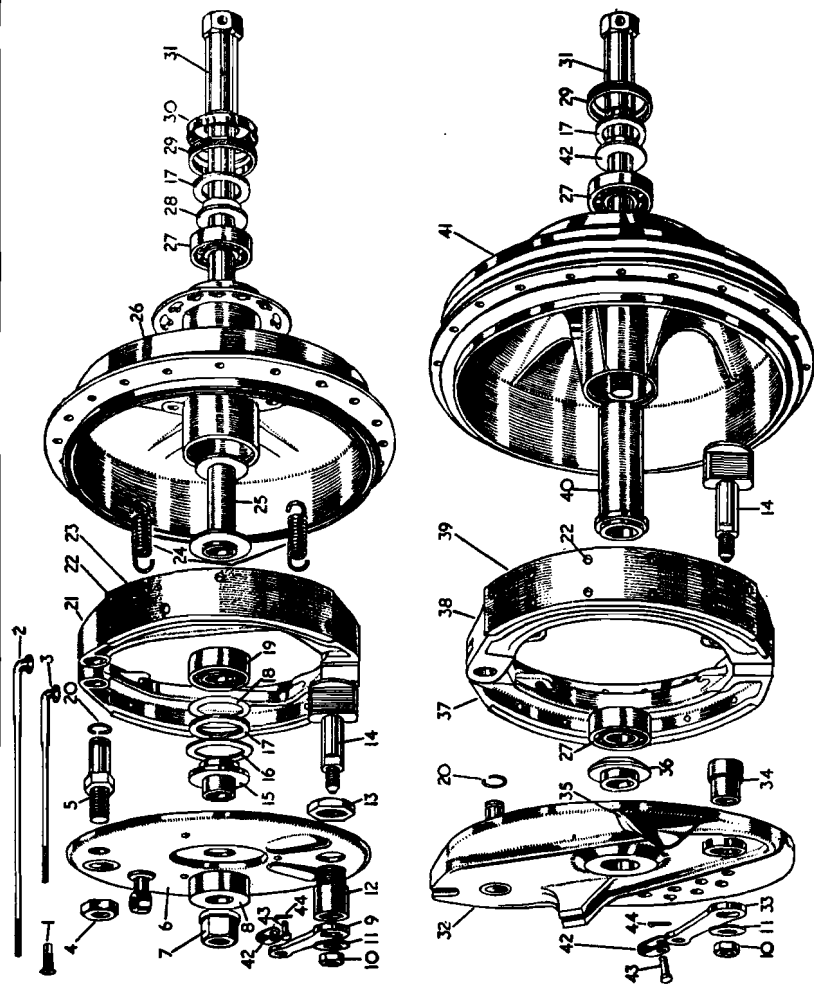

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH.		
					£	s.	d.

FRONT AND REAR WHEELS WITH HUB SHELL ONLY—cont.

82/649	...	Rear wheel with hub shell only	1	1, 16H, 18	5	17	0
84/649	...	Rear wheel with hub shell only	1	ES2	6	6	0
811/649	...	Rear wheel with hub shell only	1	30, 40	6	6	0
A11M/649	...	Rear wheel with hub shell only	1	30M, 40M	6	6	0


WHEEL RIMS AND SPOKES.

82/654	...	Wheel rim front	1	1, 16H, 18, ES2	1	5	0
811/654	...	Wheel rim front WM1/21	1	30, 40	1	7	6
A11M/654	...	Wheel rim front WM1/21	1	30M, 40M	1	5	0
A2/432	...	Wheel rim rear WM2/19	1	1, 16H, 18, ES2	1	5	0
811/432	...	Wheel rim rear WM2/20	1	30, 40	1	7	6
811M/432	...	Wheel rim rear WM2/20	1	30M, 40M	1	5	0
82/650	...	R.3 Wheel spoke front brake side (set 20)	1	1, 16H, 18, ES2	4	0	
82/651	...	R.2 Wheel spoke front plain side (set 20)	1	1, 16H, 18, ES2	4	0	
A11/650	...	Wheel spoke front brake side (set 20)	1	30, 40	4	0	
A11M/650	...	Wheel spoke front brake side (set 20)	1	30M, 40M	4	0	
A11/651	...	Wheel spoke front plain side (set 20)	1	30, 30M, 40, 40M	4	0	
82/652	...	Wheel spoke rear brake drum side (set 20)	1	1, 16H, 18, ES2	4	0	
82/653	...	Wheel spoke rear plain side (set 20)	1	1, 16H, 18, ES2	4	0	
A11/652	...	Wheel spoke rear brake drum side (set 20)	1	30, 30M, 40, 40M	4	0	
A11/653	...	Wheel spoke rear plain side (set 20)	1	30, 30M, 40, 40M	4	0	
A2/431	...	R.1 Spoke nipples (per set 40)	2	All Models	4	6	

REAR HUBS AND FITTINGS.

82/433	...	S.43 Hub shell only rear	1	1, 16H, 18	1	17	0
84/433	...	S.29 Hub shell only rear	1	ES2, 30, 30M, 40, 40M	2	15	0
A2/434	...	S.44 Hub shell bearing sleeve rear	1	1, 16H, 18	6	0	
A2/441	...	S.32 Hub bearing distance piece plain side (rear)	1	All Models	2	0	
A2/439	...	S.13 Hub bearing felt washer steel cup brake side (rear)	1	1, 16H, 18 ES2, 30, 40	1	0	
A2/460	...	S.45 Rear hub spindle	1	1, 16H, 18 ES2, 30, 30M, 40,	7	0	
84/460	...	S.39 Rear hub spindle	1	40M	2	10	0
82/659	...	S.28 Rear hub spindle washer	1	All Models	3		
82/660	...	S.35 Rear hub spindle shouldered washer (plain side) (for speedometer gearbox)	1	30, 40, 1, 16H, 18, ES2	1	6	
82/461	...	S.38 Rear hub spindle distance piece (plain side)	1	1, 16H, 18	2	0	
84/461	...	S.36 Rear hub spindle distance piece (plain side)	1	ES2, 30, 40	2	6	
A11M/461	...	S.37 Rear hub spindle distance piece (plain side)	1	30M, 40M	3	0	
A2/462	...	S.2 Rear hub brake plate	1	1, 16H, 18 ES2, 30, 30M, 40, 40M	15	6	
84/462	...	S.2 Rear hub brake plate	1	40M	15	6	
A2/463	...	S.22 Rear hub brake drum and sprocket	1	1, 16H, 18	3	0	0
84/463	...	S.21 Rear hub brake drum and sprocket	1	ES2, 30, 30M, 40, 40M	3	5	0

PLATE. S.

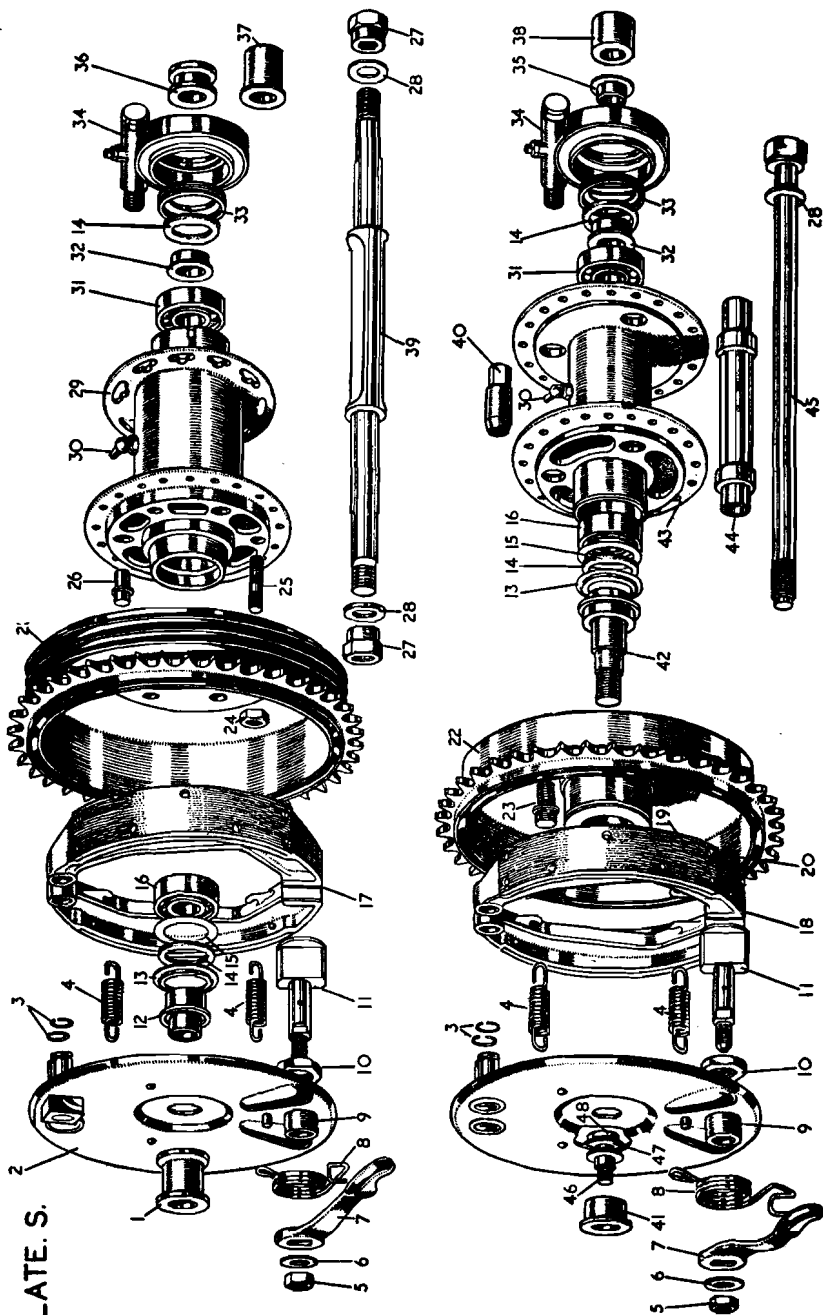

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
REAR HUBS AND FITTINGS—cont.					
A2/464	... S.42	Rear brake drum and sprocket fork end attachment piece	1	1, 16H, 18	8 0
A2/465	... S.41	Rear hub brake plate distance piece, outer	1	1, 16H, 18	2 0
B4/465	... S.1	Rear hub brake plate distance piece, outer	1	ES2, 30, 30M, 40, 40M ...	2 6
B4/661	... S.12	Rear hub brake plate distance piece, inner	1	ES2, 30, 30M, 40, 40M ...	3 0
A2/454	... S.27	Rear brake drum and sprocket fork end attachment nut	1	1, 16H, 18	2 2
A2/454	... S.27	Rear hub spindle nut	1	ES2, 30, 30M, 40, 40M ...	2 2
A2/466	... S.27	Rear hub brake torque arm	1	1, 16H, 18	5 6
A2/467	... S.27	Rear hub brake torque arm spring washer	1	1, 16H, 18	3
E3812	...	Rear hub brake torque arm frame bolt	1	1, 16H, 18	1 0
A2/468	... S.46	Rear hub brake torque arm stud	1	1, 16H, 18	4 0
11664	... S.48	Rear hub brake torque arm stud nut	1	1, 16H, 18	5
E5375	... S.47	Rear hub brake torque arm stud nut washer	1	1, 16H, 18	3
A2/469	... S.7	Rear hub brake cam lever	1	All Models	3 0
A2/470	... S.8	Rear hub brake cam lever return spring ...	1	All Models	1 0
A2/472	... S.23	Rear hub brake drum stud	3	1, 16H, 18	1 0
B2/451	... S.40	Wheel sleeve nut rear	3	1, 16H, 18	2 0
B4/662	... S.26	Rear hub shell brake drum dowel	3	ES2, 30, 30M, 40, 40M ...	2 0
B4/663	... S.25	Rear hub shell brake drum stud	3	ES2, 30, 30M, 40, 40M ...	1 0
B4/664	... S.24	Rear hub shell brake drum stud nut	3	ES2, 30, 30M, 40, 40M ...	4

HUB BRAKE SHOES AND LININGS.

A2/443	R.21/S.18	Hub brake shoe with lining (each)	4	30, 40, 1, 16H, 18, ES2	18 0
A2/444	R.23/S.19	Hub brake shoe lining (per pair)	2	30, 40, 1, 16H, 18, ES2	12 0
A2/445	R.22/S.30	Hub brake shoe lining rivet (per set 14)	2	30, 40, 1, 16H, 18, ES2	1 0
A2/445	R.22/S.30	Hub brake shoe lining rivet (rear only) ...	1	30M, 40M	1 0
A11M/445	... R.22	Hub brake shoe lining rivets (per set 20) front only	1	30M, 40M	1 4
A11M/443	... S.17	Hub brake shoe with lining rear (each) ...	1	30M, 40M	18 0
A11M/433(P)	R.37	Hub brake shoe with lining (front) plain	1	30M, 40M	2 0 0
A11M/433(F)	R.38	Hub brake shoe with lining (front) forked	1	30M, 40M	2 0 0
A11M/444(R)	...	Hub brake shoe linings (per pair) rear ...	1	30M, 40M	12 0
A11M/444(F)	R.39	Hub brake shoe linings (per pair) front ..	1	30M, 40M	12 6

FRONT HUBS AND FITTINGS.

B2/655	... R.26	Hub shell and brake drum front	1	30, 40, 1, 16H, 18, ES2 ...	3 12 0
A11M/655	... R.41	Hub shell and brake drum front	1	30M, 40M	7 5 0
B2/452	... R.31	Front hub spindle	1	All Models	15 0
92/453	... R.8	Front hub spindle distance piece	1	30, 40, 1, 16H, 18, ES2 ...	2 0
B2/454	... R.7	Front hub spindle nut	1	All Models	2 2
B2/455	... R.15	Front hub brake plate distance piece	1	30, 40, 1, 16H, 18, ES2 ...	4 0
A11M/455	... R.36	Front hub brake plate distance piece	1	30M, 40M	4 0

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
FRONT HUBS AND FITTINGS—cont.					
B2/457	... R.6	Front hub brake plate	1	30, 40, 1, 16H, 18, ES2 ...	15 6
A2/459	... R.9	Front hub brake cam lever... ..	1	30, 40, 1, 16H, 18, ES2 ...	2 0
B2/657	... R.5	Front hub brake shoe fulcrum pin	1	30, 40, 1, 16H, 18, ES2 ...	2 6
B2/658	... R.4	Front hub brake shoe fulcrum pin nut	1	30, 40, 1, 16H, 18, ES2 ...	6
A11M/457	... R.32	Front hub brake plate	1	30M, 40M	3 10 0
A11M/823	... R.35	Front hub brake plate air scoop	1	30M, 40M	2 6
A11M/829	...	Front hub brake plate air scoop rivets (per set)	1	30M, 40M	6
A11M/826	...	Front hub brake plate air scoop gauze ...	1	30M, 40M	1 0
A11M/459	... R.33	Front hub brake cam lever	1	30M, 40M	2 0
A11M/827	... R.34	Hub brake cam bush front only	1	30M, 40M	2 0
B2/441	... R.28	Hub bearing distance piece plain side (front)	1	30, 40, 1, 16H, 18, ES2 ...	1 0
A11M/441	... R.42	Hub bearing distance piece plain side (front)	1	30M, 40M	1 0
C2/656	... R.25	Hub shell bearing distance tube front ...	1	30, 40, 1, 16H, 18, ES2 ...	1 6
A11M/656	... R.40	Hub bearing distance tube front	1	30M, 40M	7 6
B2/439	... R.16	Hub bearing felt washer steel plate brake side (front)	1	30, 40, 1, 16H, 18, ES2 ...	6
B2/442	... R.30	Hub bearing dust cover (front) plain side	1	30, 40, 1, 16H, 18, ES2 ...	3 0

PARTS COMMON TO FRONT AND REAR HUBS.

A2/435	R.27/S.31	Hub bearing plain side	1	All Models	16 6
A2/435	R.27/S.31	Hub bearing front brake side	1	30M, 40M	16 6
A2/436	R.19/S.16	Hub bearing brake side	1	All Models	1 11 4
A2/436	R.19/S.16	Hub bearing brake side (rear only)	1	30M, 40M	1 11 4
A2/440	R.29/S.33	Hub bearing locking ring plain side front or rear	2	All Models	2 0
A2/437	R.17/S.14	Hub bearing felt washer	1	30, 40, 1, 16H, 18, ES2 ...	8
A2/438	R.18/S.15	Hub bearing pen steel washer brake side	2	30, 40, 1, 16H, 18, ES2 ...	4
A2/198	... S.30	Hub grease nipple	2	All Models	1 0
A2/446	R.24/S.4	Hub brake shoe return spring	4	All Models	1 0
A2/447	R.20/S.3	Hub brake shoe circlip	4	All Models	6
A2/448	R.14/S.11	Hub brake cam with nut and washer ...	2	All Models	7 0
E3224	R.10/S.5	Hub brake cam nut	2	All Models	4
E5455	R.11/S.6	Hub brake cam nut washer	2	All Models	2
A2/449	R.12/S.9	Hub brake cam bush	2	30, 40, 1, 16H, 18, ES2 ...	2 0
		Hub brake cam bush (rear only)	1	30M, 40M	2 0
A2/450	R.13/S.10	Hub brake cam bush locknut	2	30, 40, 1, 16H, 18, ES2 ...	1 0
		Hub brake cam bush locknut (rear only)	1	30M, 40M	1 0

TYRE SECURITY BOLTS.

A11M/861	...	Front wheel security bolt	1	30M, 40M	5 6
A11M/862	...	Rear wheel security bolt	1	30M, 40M	5 6

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH.		
					£	s.	d.

ENGINE SPROCKET.

A2/473	...	A.4	Engine sprocket (state number of teeth) ..	1	1, 16H, 18, ES2	1	2	0
A11/473	...		Engine sprocket (state number of teeth) ..	1	30, 30M, 40, 40M	1	2	0
A2/474	...	A.47	Engine mainshaft key	1	All Models			3
A2/475	...	A.3	Engine sprocket locknut	1	1, 16H, 18, ES2		1	0
A11/475	...		Engine sprocket locknut	1	30, 30M, 40, 40M		2	0

Sprockets can be supplied 16T to 22T inclusive.

FRONT AND REAR CHAINS.

A2/477	...		Front driving chain, 75 link	1	1, 16H, 18, ES2	1	5	0
A11/477	...		Front driving chain, 76 link	1	30, 30M, 40, 40M	1	5	0
A3/478	...		Rear driving chain, 91 link	1	18, ES2	2	3	0
A2/478	...		Rear driving chain, 90 link	1	1, 16H	2	3	0
A11/478	...		Rear driving chain, 92 link	1	30, 30M, 40, 40M	2	3	0
A2/479	...		Front chain spring link	1	30, 40, 1, 16H, 18, ES2		1	9
A2/480	...		Front chain cranked link	1	All Models		3	0
A11M/479	...		Front chain rivetting link	1	30M, 40M		1	9
A2/481	...		Rear chain spring link	1	30, 40, 1, 16H, 18, ES2		1	9
A2/482	...		Rear chain cranked link	1	All Models		3	0
A11M/481	...		Rear chain rivetting link	1	30M, 40M		1	9

REAR CHAIN ADJUSTERS.

A2/483	...	W.7	Rear chain adjuster bolt and nut	2	1, 16H, 18	3	6	
B4/483	...		Rear chain adjuster complete	2	ES2, 30, 30M, 40, 40M		6	0
B4/665	...	Y.14	Rear chain adjuster stirrup	2	ES2, 30, 30M, 40, 40M		3	0
B4/666	...	Y.15	Rear chain adjuster bolt	2	ES2, 30, 30M, 40, 40M		1	6
B4/667	...	Y.12	Rear chain adjuster bolt nut	2	ES2, 30, 30M, 40, 40M			6
B4/668	...	Y.13	Rear chain adjuster fork end cap	2	ES2, 30, 30M, 40, 40M		1	0

FRONT CHAINCASE AND FITTINGS.

A2/484	...	T.5	Front chaincase, inner portion	1	1, 16H, 18			
B4/484	...	T.5	Front chaincase, inner portion	1	ES2	3	4	0
A11/484	...	T.5	Front chaincase, inner portion	1	30, 40	3	4	0
A2/485	...	T.9	Front chaincase, outer portion	1	1, 16H, 18, ES3	3	10	0
A11/485	...	T.9	Front chaincase, outer portion	1	30, 40	3	10	0
A2/486	...	T.11	Front chaincase sealing washer	1	30, 40, 1, 16H, 18, ES2		9	0
E3336	...	T.18	Front chaincase drain plug	1	30, 40, 1, 16H, 18, ES2			10
E5264	...	T.17	Front chaincase drain plug washer	1	30, 40, 1, 16H, 18, ES2			3

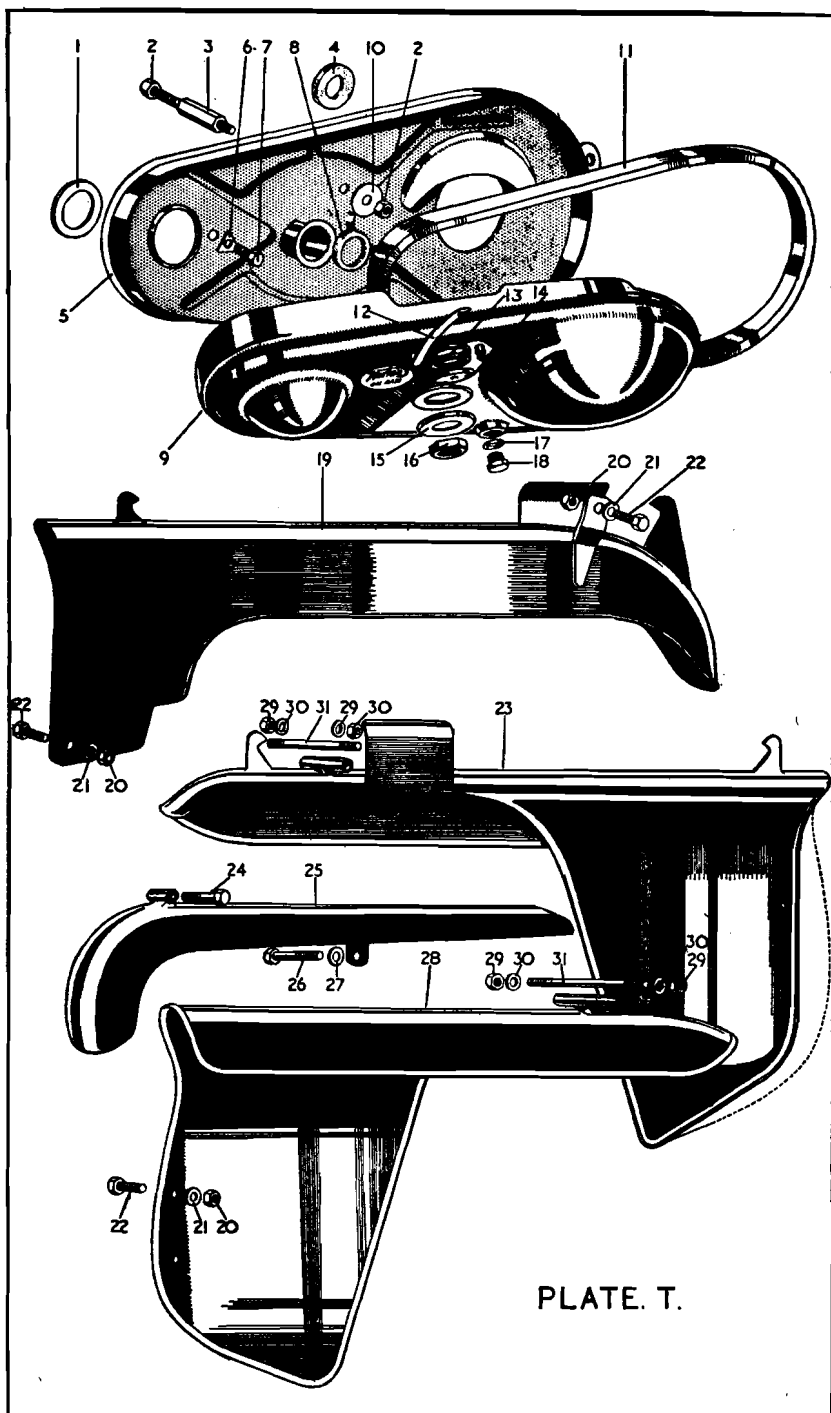


PLATE. T.

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
FRONT CHAINCASE AND FITTINGS—cont.					
A2/487	... T.14	Front chaincase inspection disc	1	30, 40, 1, 16H, 18, ES2 ...	2 0
A2/488	... T.13	Front chaincase inspection disc washer ...	1	30, 40, 1, 16H, 18, ES2 ...	1 0
A2/489	... T.12	Front chaincase inspection disc spring clip	1	30, 40, 1, 16H, 18, ES2 ...	1 0
E6354	... T.7	Front chaincase, inner portion crankcase attachment pin	1	30, 40, 1, 16H, 18, ES2 ...	5
A2/490	... T.6	Front chaincase pin locking plate	1	30, 40, 1, 16H, 18, ES2 ...	4
E3223	... T.2	Front chaincase, inner portion attachment nut	2	30, 40, 1, 16H, 18, ES2 ...	4
A2/491	... T.3	Front chaincase, inner portion attachment bolt	1	30, 40, 1, 16H, 18, ES2 ...	3 6
A2/275	... T.10	Front chaincase, inner portion attachment bolt washer	1	30, 40, 1, 16H, 18, ES2 ...	3
A2/492	... T.1	Front chaincase, inner portion crankcase washer	1	30, 40, 1, 16H, 18, ES2 ...	6
A2/493	... T.4	Front chaincase, inner portion gearbox felt washer	1	30, 40, 1, 16H, 18, ES2 ...	8
A2/494	... T.8	Front chaincase, inner portion footrest tube felt washer	1	30, 40, 1, 16H, 18, ES2 ...	4
A2/495	... T.16	Front chaincase, outer portion securing nut	1	30, 40, 1, 16H, 18, ES2 ...	2 4
A2/496	... T.15	Front chaincase, outer portion securing nut washer	1	30, 40, 1, 16H, 18, ES2 ...	2 0

FRONT CHAINGUARD AND FITTINGS.

A11M/828	... T.25	Front chainguard	1	30M, (40M 1 1948)	5 0
A10M/828	...	Front chainguard	1	40M ... 1 (1946/7)	5 0
E3801	... T.24	Front chainguard crankcase attachment bolt	1	30M, 40M	5
11796	...	Front chainguard crankcase attachment bolt washer	3	30M, 40M	3
11304	... T.26	Front chainguard engine plate bolt	1	30M, 40M	5
E3223	...	Front chainguard engine plate bolt nut ...	2	30M, 40M	4
E5456	... T.27	Front chainguard engine plate bolt washer	4	30M, 40M	3

REAR CHAINGUARD AND FITTINGS.

A2/497	... T.19	Rear chainguard	1	1, 16H, 18 ...	1 8 0
B4/497	... T.23	Rear chainguard	1	ES2 ...	1 8 0
A11/497	...	Rear chainguard	1	30, 40 ...	1 8 0

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	--------------	---------------------------

REAR CHAINGUARD AND FITTINGS—cont.

A11M/497 ...	T.28	Rear chainguard	1	30M, 40M	1 8 0
12342 ...	T.22	Rear chainguard pin (front and rear end)	2	1, 16H, 18	5
E3229 ...	T.20	Rear chainguard pin nut (front and rear end)	2	1, 16H, 18	4
E5379 ...	T.21	Rear chainguard pin washer (front and rear end)	2	1, 16H, 18	3

(Last three items attach Rear Chainguard to Mudguard. Models ES2, 30, 30M, 40, and 40M. For rear attachment see rear springing member bolt).

REAR BRAKE PEDAL AND FITTINGS.

A2/498 ...	V.74	Rear brake pedal	1	1, 16H, 18	1 4 0
B4/498 ...	V.74	Rear brake pedal	1	ES2, 30, 40	1 4 0
A11M/498 ...	V.74	Rear brake pedal	1	30M, 40M	1 4 0
A2/500 ...	V.75	Rear brake pedal grease nipple	1	All Models	1 0
A2/501 ...	V.76	Rear brake pedal adjuster and locknut ...	1	All Models	1 6
A2/502 ...	V.80	Rear brake pedal pivot bolt	1	1, 16H, 18, ES2	2 0
A11/502 ...	V.80	Rear brake pedal pivot bolt	1	30, 40	2 0
A11M/502 ...	V.80	Rear brake pedal pivot bolt	1	30M, 40M	2 0
E3223 ...	V.82	Rear brake pedal pivot bolt nut	1	All Models	4
E5456 ...	V.81	Rear brake pedal pivot bolt washer	1	All Models	3


REAR BRAKE ROD AND FITTINGS.

A2/503 ...	V.83	Rear brake rod	1	1, 16H, 18, ES2	6 0
B4/503 ...	V.83	Rear brake rod	1	ES2, 30, 40	6 0
A11M/503 ...	V.83	Rear brake rod	1	30M, 40M	6 0
A11M/829 ...	V.85	Rear brake rod spring	1	30M, 40M	9
A11M/830 ...	V.86	Rear brake rod ball cup	1	30M, 40M	2 0
A2/504 ...	V.79	Rear brake pedal jaw joint	1	All Models	4 6
A2/505 ...	V.84	Rear brake adjuster	1	All Models	3 0
A2/506 ...	V.77	Rear brake pedal jaw joint pin	1	All Models	5
A2/195 ...	V.78	Rear brake pedal jaw joint pin split cotter	1	All Models	2

FOOTRESTS AND FITTINGS.

A2/507 ...	V.88	Footrest rubber	2	All Models	2 6
A2/508 ...	V.87	Footrest rubber securing bolt and nut ...	4	All Models	10
A2/509 ...	V.97	Footrest pad holder	2	1, 16H, 18, ES2, 30, 40	5 6
A2/510 ...	V.94	Footrest rod	1	1, 16H, 18, ES2, 30, 40	4 0
A2/511 ...	V.92	Footrest rod nut	2	1, 16H, 18, ES2, 30, 40	8
E5377 ...	V.93	Footrest rod washer	2	1, 16H, 18, ES2, 30, 40	3
A2/512 ...		Footrest serrated hanger with pad holder spindle	2	1, 16H, 18, ES2	12 0
A11/512 ...		Footrest serrated hanger with pad holder spindle	2	30, 40	12 0
A2/513 ...	V.95	Footrest serrated hanger only	2	1, 16H, 18, ES2	9 8
A11/513 ...	V.96	Footrest serrated hanger only	2	30, 40	10 0
A2/514 ...	V.98	Footrest serrated hanger spindle only ...	2	1, 16H, 18, ES2, 30, 40	2 4
A2/515 ...	V.100	Footrest serrated hanger spindle nut	2	1, 16H, 18, ES2, 30, 40	5
E5376 ...	V.99	Footrest hanger spindle washer	2	1, 16H, 18, ES2, 30, 40	3
A11M/512(RH)		Footrest serrated hanger with pad holder	1	30M, 40M	17 6
A11M/512(LH)	V.89	Footrest serrated hanger with pad holder	1	30M, 40M	17 6
13274 ...	V.90	Footrest frame attachment bolt	2	30M, 40M	1 6
E5375 ...	V.91	Footrest frame attachment bolt washer	2	30M, 40M	3

PLATE. V.

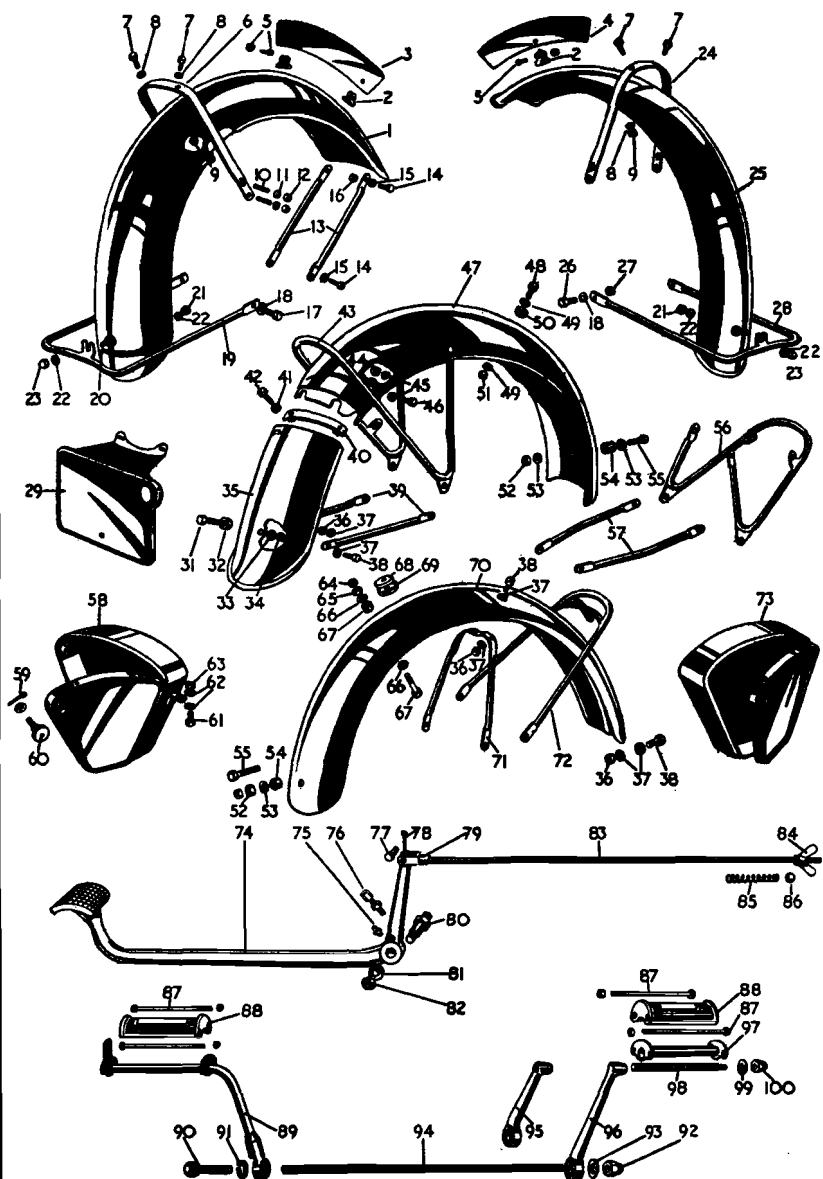

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	--------------	---------------------------

FRONT AND REAR ENGINE PLATES.

A2/522	...	Y.32	Front engine plate (left or right hand) ...	2	1, 16H, 18, ES2	8	0
A2/523	...	Y.31	Front engine plate cover	1	1, 16H, 18, ES2	6	6
A11/523	...	W.16	Front engine plate cover	1	30	6	6
A10/523	...	W.16	Front engine plate cover	1	40	6	6
A11/522	...	W.17	Front engine plate (left or right hand) ...	2	30	8	0
A10/522	...	W.17	Front engine plate (left or right hand) ...	2	40	8	0
A11M/522(LH)		X.35	Front engine plate, left hand	1	30M, (40M 1948)	8	0
A10M/522(LH)			Front engine plate, left hand	1	40M ... (1946/7)	8	0
A11M/522(RH)		X.36	Front engine plate, right hand	1	30M, (40M 1948)	8	0
A10M/522(RH)			Front engine plate, right hand	1	40M ... (1946/7)	8	0
A2/516	...	Y.10	Rear engine plate, left hand with footrest tube	1	1, 16H, 18	19	0
B4/516	...	Y.10	Rear engine plate, left hand with footrest tube	1	ES2	19	0
A2/517	...	Y.11	Rear engine plate, right hand with footrest tube	1	1, 16H, 18	19	0
B4/517	...	Y.11	Rear engine plate, right hand with footrest tube	1	ES2	19	0
A11/516	...	W.24	Rear engine plate, left hand with footrest tube	1	30	19	0
A10/516	...	W.24	Rear engine plate, left hand with footrest tube	1	40	19	0
A11M/516	...	X.3	Rear engine plate only left hand	1	30M, (40M 1948)	12	6
A10M/516	...		Rear engine plate only left hand	1	40M ... (1946/7)	12	6
A11/517	...	W.25	Rear engine plate, right hand with footrest tube	1	30	19	0
A10/517	...	W.25	Rear engine plate, right hand with footrest tube	1	40	19	0
A11M/517	...	X.4	Rear engine plate only right hand	1	30M, (40M 1948)	12	6
A10M/517	...		Rear engine plate only right hand	1	40M ... (1946/7)	12	6

FRAMES.





B2/518	...		Frame only with head races	1	1, 16H, 18	24	0	0
B4/518	...		Frame only with head races	1	ES2	30	0	0
A11/518	...		Frame only with head races	1	30, 40	30	0	0
A11M/518	...		Frame only with head races	1	30M, 40M	30	0	0
A2/519	...		Frame head race, top	1	All Models	7	6	
A2/520	...		Frame head race, bottom	1	All Models	7	6	
A2/521	...		Frame head balls, (per set 34)	1	All Models	4	0	
13195	...	X.19	Frame fork stop bolt	2	All Models	8		
11796	...	X.17	Frame fork stop bolt washer	4	All Models	3		
B2/877	...	X.18	Frame fork stop bolt distance piece	2	All Models	6		

FRAME REAR SPRINGING.



B4/669	...		Frame fork end, left hand	1	ES2, 30, 30M, 40, 40M	5	0	0
B4/670	...	Y.19	Frame fork end, right hand	1	ES2, 30, 30M, 40, 40M	5	0	0
A2/500	...	Y.20	Frame fork end grease nipple	2	ES2, 30, 30M, 40, 40M	1	0	

PLATE. W.

STANDARD MODELS.

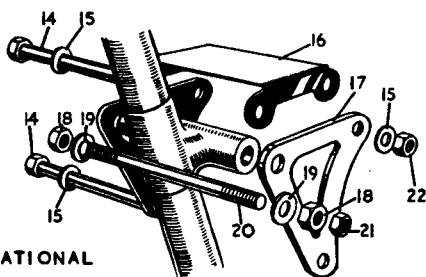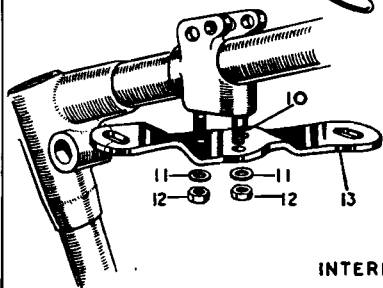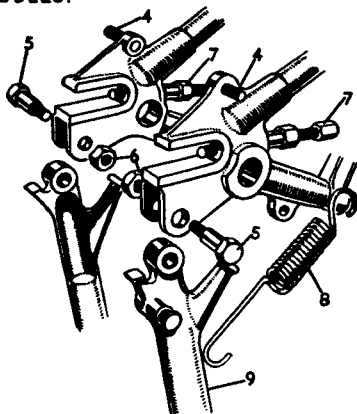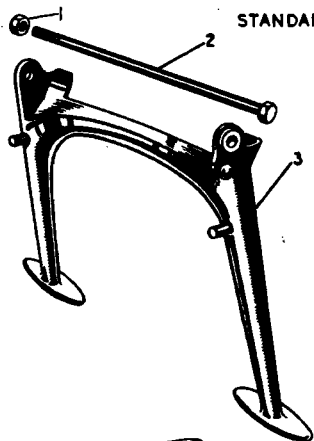

INTERNATIONAL

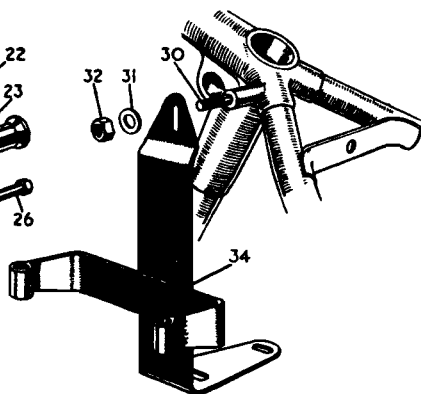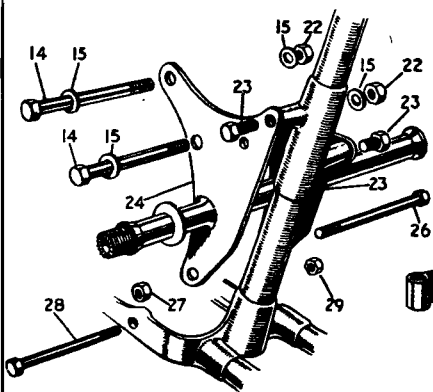

INTERNATIONAL

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
FRAME REAR SPRINGING—cont.					
B4/671	... Y.28	Frame fork end main rod	2	ES2, 30, 30M, 40, 40M ...	3 0 0
B4/672	... Y.30	Frame fork end main rod bottom bolt	2	ES2, 30, 30M, 40, 40M ...	1 0
11181	... Y.29	Frame fork end main rod bottom bolt washer	2	ES2, 30, 30M, 40, 40M ...	3
B4/673	... Y.24	Frame fork end main rod plug	2	ES2, 30, 30M, 40, 40M ...	2 0
E4261	T.31/Y.27	Rear frame member pinch bolt (nearside)	1	ES2, 30, 30M, 40, 40M ...	9
11304	...	Rear frame member pinch bolt (offside)	1	ES2, 30, 30M, 40, 40M ...	9
E3223	T.29/Y.25	Rear frame member pinch bolt nut	2	ES2, 30, 30M, 40, 40M ...	4
11796	T.30/Y.26	Rear frame member pinch bolt washer ...	4	ES2, 30, 30M, 40, 40M ...	3
B4/674	... Y.17	Frame fork end top spring	2	ES2, 30, 30M, 40, 40M ...	15 0
B4/675	... Y.16	Frame fork end top spring cover, outer ...	2	ES2, 30, 30M, 40, 40M ...	9 0
B4/676	... Y.18	Frame fork end top spring cover, inner ...	2	ES2, 30, 30M, 40, 40M ...	12 6
B4/677	... Y.22	Frame fork end bottom spring	2	ES2, 30, 30M, 40, 40M ...	12 6
B4/678	... Y.23	Frame fork end bottom spring cover, outer	2	ES2, 30, 30M, 40, 40M ...	9 0
B4/679	... Y.21	Frame fork end bottom spring cover, inner	2	ES2, 30, 30M, 40, 40M ...	12 6

PROP STAND.


A2/524	... W.3	Prop stand	1	1, 16H, 18 ...	1 5 0
B4/524	... W.3	Prop stand	1	ES2 ...	1 5 0
A11/524	... X.24	Prop stand	1	30, 30M, 40, 40M ...	1 5 0
A11/525	... X.22	Prop stand bolt	2	ES2, 30, 30M, 40, 40M ...	9
A2/525	... W.2	Prop stand frame pivot bolt	1	1, 16H, 18 ...	2 4
A2/526	... W.1	Prop stand frame pivot bolt nut	1	1, 16H, 18 ...	5
A2/527	... X.23	Prop stand return spring	1	All Models	2 0
A2/528	...	Frame bush for prop stand pivot bolt ...	1	1, 16H, 18 ...	3 4

FRONT MUDGUARD, STAYS AND FITTINGS.

B2/529	... V.1	Front mudguard only with front No. plate studs	1	30, 40, 1, 16H, 18, ES2 ...	1 0 0
--------	---------	---	---	-----------------------------------	-------

PLATE. X.

MANX

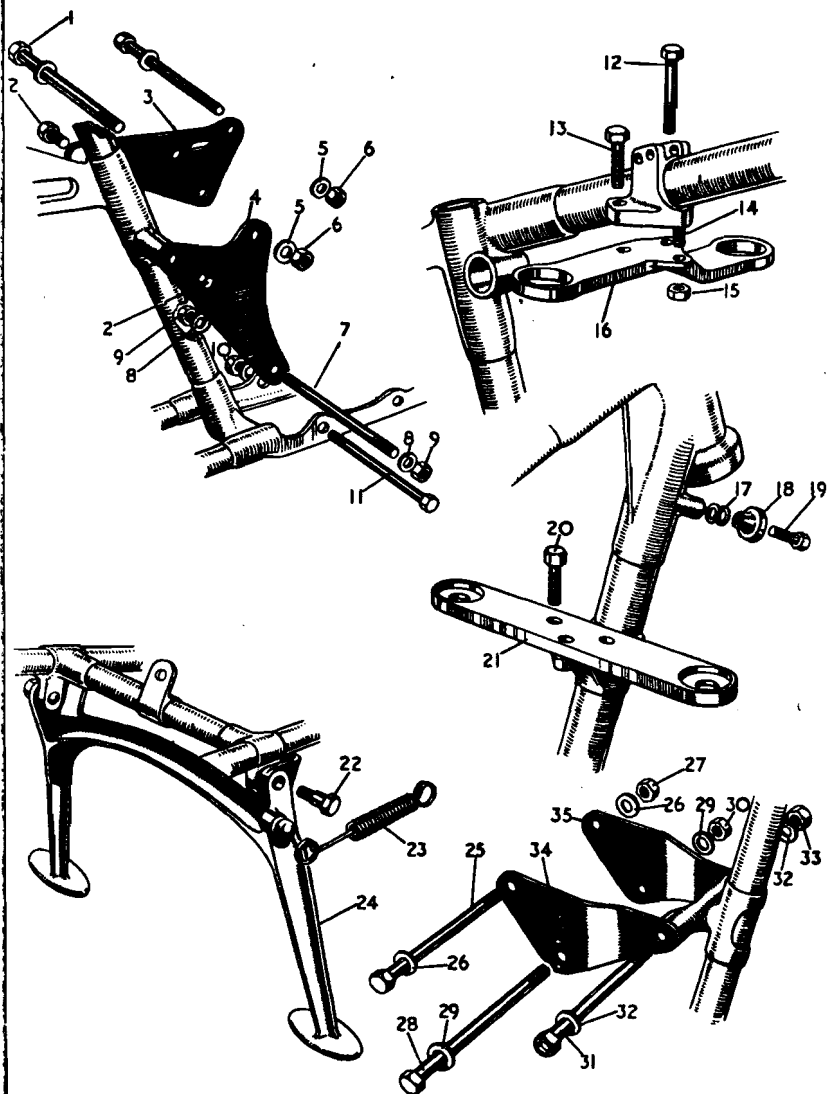

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
FRONT MUDGUARD, STAYS AND FITTINGS—cont.					
A11M/529 ...	V.25	Front mudguard	1	30M, 40M	1 0 0
A2/530 ...	V.13	Front mudguard stay, left or right hand...	2	1, 16H, 18, ES2	3 6
12342 ...	V.14	Front mudguard stay pin	4	1, 16H, 18, ES2, 30, 40	5
E3229 ...	V.16	Front mudguard stay nut	4	1, 16H, 18, ES2, 30, 40	4
E5379 ...	V.15	Front mudguard stay nut washer	2	1, 16H, 18, ES2, 30, 40	3 6
A11/530 ...	V.13	Front mudguard stay, left or right hand...	2	30, 40	3 6
B2/680 ...	V.6	Front mudguard centre stay	1	1, 16H, 18, ES2	6 6
A11/680 ...	V.6	Front mudguard centre stay	1	30, 40	6 6
A11M/680 ...	V.24	Front mudguard centre stay	1	30M, 40M	6 6
12342 ...	V.7	Front mudguard centre stay pin	2	All Models	5
E3229 ...	V.9	Front mudguard centre stay pin nut ...	2	All Models	4
E5379 ...	V.8	Front mudguard centre stay pin washer	2	All Models	3
T1085	J.32/V.10	Front mudguard centre stay fork attach- ment stud	4	All Models	6
E3229 ...	V.12	Front mudguard centre stay fork attach- ment stud nut	4	All Models	4
E5379 ...	V.11	Front mudguard centre stay fork attach- ment stud washer	4	All Models	3
E3262 ...	V.20	Front mudguard stand attachment bolt ..	1	All Models	8
E3223 ...	V.21	Front mudguard stand attachment bolt plain nut	1	All Models	4
E3218 ...	V.23	Front mudguard stand attachment bolt domed nut	1	All Models	6
E5456 ...	V.22	Front mudguard stand attachment bolt washer	2	All Models	3

RACING NUMBER PLATES AND STONE GUARD.


A11M/870 ...		Number plate front or side	3	30M, 40M	5 0
A11M/871 ...		Number plate clip (rear)	4	30M, 40M	1 0
12342 ...		Number plate fixing pin (front)	2	30M, 40M	5
12342 ...		Number plate fixing pin (rear)	8	30M, 40M	5
E3222 ...		Number plate fixing pin nut (front)	2	30M, 40M	4
E3222 ...		Number plate fixing pin nut (rear)	8	30M, 40M	4
A11M/872 ...		Handlebar gauze stone guard	1	30M, 40M	12 6
12342 ...		Handlebar gauze stone guard pin	2	30M, 40M	5
E3222 ...		Handlebar gauze stone guard pin nut...	2	30M, 40M	4

FRONT AND REAR NUMBER PLATES AND FITTINGS.




A2/531 ...	V.3	Front number plate	1	30, 40, 1, 16H, 18, ES2	2 0
A11M/531 ...	V.4	Front number plate	1	30M, 40M	2 0
A2/532 ...	V.29	Rear number plate	1	30, 40, 1, 16H, 18, ES2	5 0
D2/532 ...		Rear number plate (1949)	1	30, 40, 1, 16H, 18, ES2	5 0
12343 ...	V.31	Rear number plate bottom fixing pin ...	1	30, 40, 1, 16H, 18, ES2	8
E3222 ...	V.34	Rear number plate bottom fixing pin nut	1	30, 40, 1, 16H, 18, ES2	4
E5379 ...	V.33	Rear number plate bottom fixing pin washer	1	30, 40, 1, 16H, 18, ES2	3

PLATE. Y.

STANDARD MODELS.

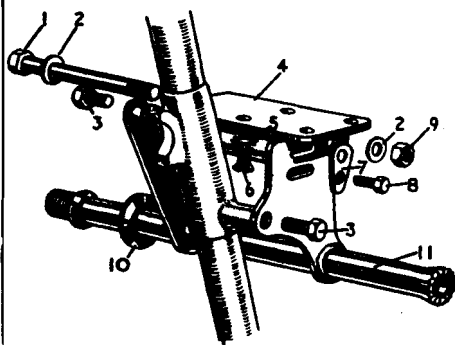


SPRING FRAME MODELS.

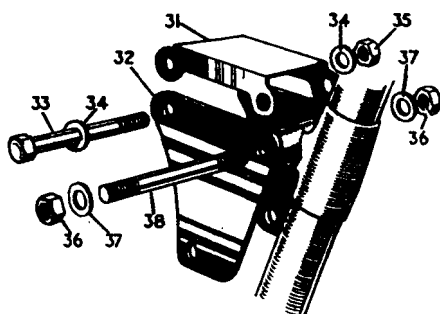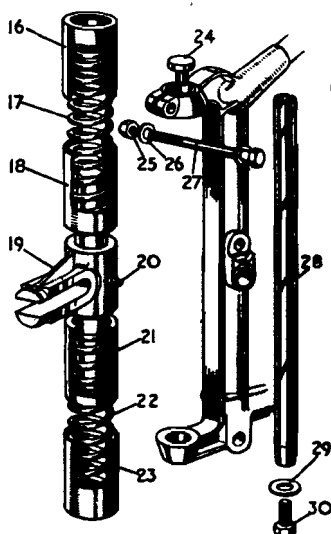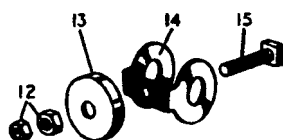

STANDARD MODELS.

SPRING FRAME MODELS.

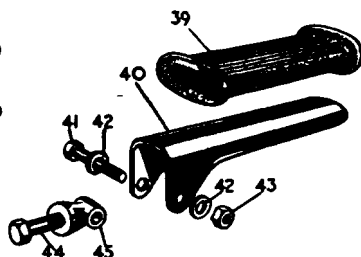

PART No	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
FRONT AND REAR NUMBER PLATES AND FITTINGS—cont.					
E5105	... V.32	Rear number plate distance piece	1	30, 40, 1, 16H, 18, ES2	6
A2/533	... V.5	Front number plate attachment pin and nut	2	30, 40, 1, 16H, 18, ES2	3
A2/875	... V.2	Front No. plate mudguard clip	2	30M, 40M 30, 40, 1, 16H, 18, ES2	1 0
			1	30M, 40M	1 0

REAR MUDGUARD STAYS AND FITTINGS.

A2/534	... V.47	Rear mudguard complete	1	1, 16H, 18, ES2	1 0 0
A11/534	... V.47	Rear mudguard complete	1	30, 40	1 0 0
A11M/534	... V.70	Rear mudguard	1	30M, 40M	1 0 0
A2/535	... V.35	Rear mudguard bottom portion	1	30, 40, 1, 16H, 18, ES2	6 0
A2/876	... V.40	Rear mudguard bottom portion strap	1	30, 40, 1, 16H, 18, ES2	2 0
12342	... V.42	Rear mudguard bottom portion fixing pins (each)	2	30, 40, 1, 16H, 18, ES2	5
E5379	... V.41	Rear mudguard bottom portion pin washer	2	30, 40, 1, 16H, 18, ES2	3
A2/536	... V.43	Rear mudguard stays and lifting handle ..	1	1, 16H, 18	1 0 0
12342	... V.46	Rear lifting stay mudguard pin	4	30, 40, 1, 16H, 18, ES2	5
E3222	... V.44	Rear lifting stay mudguard pin nut	4	30, 40, 1, 16H, 18, ES2	4
E5379	... V.45	Rear lifting stay mudguard pin washer ...	8	30, 40, 1, 16H, 18, ES2	3
B4/536	... V.56	Rear mudguard stays and lifting handle ..	1	ES2	1 0 0
A11/536	... V.56	Rear mudguard stay and lifting handle ...	1	30, 40	1 0 0
A11M/536	... V.72	Rear mudguard stay and lifting handle ...	1	30M, 40M	12 6
A11M/831	... V.71	Rear mudguard centre stay	1	30M, 40M	7 6
E6453	... W.4	Rear mudguard stays and lifting handle stud (frame attachment)	2	1, 16H, 18	8
E3223	...	Rear mudguard stays and lifting handle attachment stud nut	2	1, 16H, 18	4
A2/537	... V.39	Rear mudguard stay, left or right hand ...	2	1, 16H, 18	3 6
B4/537	... V.57	Rear mudguard stay, left or right hand ...	2	ES2	3 6
A11/537	... V.57	Rear mudguard stay, left or right hand ...	1	30, 40	3 6
12342	... V.38	Rear mudguard stay pin, mudguard attachment	2	All Models	5
E3222	... V.36	Rear mudguard stay pin nut	2	All Models	4
E5379	... V.37	Rear mudguard stay pin washer	4	All Models	3
13059	... V.54	Rear mudguard chain stay distance piece	1	30, 40, 1, 16H, 18, ES2	5
12868	... V.55	Rear mudguard chain stay attachment bolt	1	All Models	8
E3223	... V.52	Rear mudguard chain stay attachment bolt nut	1	All Models	4
E5379	... V.53	Rear mudguard stay attachment bolt washer	1	All Models	3

(See Oil Tank Fittings for Mudguard Seat Stay Attachment, Plate M).

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
'TOOLBOX AND FITTINGS.					
A2/538	... V.58	Toolbox	1	1, 16H, 18	1 5 0
B2/538	... V.73	Toolbox	1	30, 40, ES2	1 5 0
12343	...	Toolbox frame attachment bolt	2	30, 40, 1, 16H, 18, ES2	8
E3229	...	Toolbox frame attachment bolt nut	2	30, 40, 1, 16H, 18, ES2	4
A2/539	... V.60	Toolbox knob	1	30, 40, 1, 16H, 18, ES2	2 4
A2/281	... V.59	Toolbox knob cotter	1	30, 40, 1, 16H, 18, ES2	2
12342	... V.61	Toolbox bottom bolt	1	1, 16H, 18	5
E3229	... V.63	Toolbox bottom bolt nut	1	1, 16H, 18	4
E5379	... V.62	Toolbox bottom bolt washer	2	1, 16H, 18	3

SADDLE AND FITTINGS.

A2/540	... H.6	Saddle	1	1, 16H, 18, ES2	2 17 0
A11/540	... H.1	Saddle	1	30, 30M, 40, 40M	2 17 0
A2/541	... H.7	Saddle spring (each)	2	1, 16H, 18, ES2	4 0
A11/541	... H.2	Saddle spring (each)	2	30, 30M, 40, 40M	4 0
E6453	...	Saddle spring stud offside	1	1, 16H, 18, ES2	8
E6047	... H.5	Saddle spring frame stud	2	30, 30M, 40, 40M	2 0
E5642	...	Saddle spring frame stud distance tube ..	2	30, 30M, 40, 40M	6
E3223	... H.3	Saddle spring stud nut	2	All Models	4
E5456	... H.4	Saddle spring stud washer	2	All Models	3
12080	...	Saddle front anchor bolt	1	All Models	1 8
E3223	...	Saddle front anchor bolt nut	1	All Models	4
E5379	...	Saddle front anchor bolt washer	1	All Models	3

(See Horn Attachment for Near Side Saddle Spring Bolt. Models 1, 16H, 18, and ES2).

REAR STAND AND FITTINGS.

A2/542	... W.9	Rear stand	1	1, 16H, 18	2 2 0
E3813	... W.5	Rear stand attachment bolt	2	1, 16H, 18	1 0
11664	... W.6	Rear stand attachment bolt nut	2	1, 16H, 18	5
A2/543	... W.8	Rear stand spring	1	1, 16H, 18	3 0

FRONT STAND AND FITTINGS.

A2/544	... V.19	Front stand	1	1, 16H, 18, ES2	1 0 0
A11/544	... V.19	Front stand	1	30, 40	1 0 0
A11M/544	... V.28	Front stand	1	30M, 40M	1 0 0
13261	... V.17	Front stand attachment pin	2	30, 40, 1, 16H, 18, ES2	5
13299	... V.26	Front stand attachment pin	2	30M, 40M	6
E3231	... V.27	Front stand attachment pin nut	2	30M, 40M	4
E5379	... V.18	Front stand attachment pin washer	2	All Models	3

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
PILLION SEAT AND FITTINGS.					
A2/585	...	Pillion seat	1	30, 40, 1, 16H, 18, ES2	1 13 4
12342	...	Pillion seat attachment pin	4	30, 40, 1, 16H, 18, ES2	5
E3222	...	Pillion seat attachment pin nut	4	30, 40, 1, 16H, 18, ES2	4

MATTRESS AND FITTINGS. Manx Models.

A11M/832	...	H.8	Rubber Mattress	1	30M, 40M	3 15 0
A11M/833	...	H.15	Rubber mattress support stay, L.H. or R.H.	2	30M, 40M	3 6
E3798	...	H.16	Bolt attaching stay to mudguard	2	30M, 40M	4
E3231	...	H.14	Nut attaching stay to mudguard	2	30M, 40M	4
11796	...		Washer attaching stay to mudguard	4	30M, 40M	3
A2/504	...	H.10	Jaw joint	2	30M, 40M	4 6
12342	...	H.9	Bolt attaching jaw joint to saddle frame	2	30M, 40M	5
E3222	...	H.11	Nut attaching jaw joint to saddle frame ..	2	30M, 40M	4
E5379	...		Washer attaching jaw joint to saddle frame	2	30M, 40M	3
11940	...	H.13	Bolt for bottom of jaw joint	2	30M, 40M	5
11796	...	H.12	Bolt washer for bottom of jaw joint	6	30M, 40M	3

BATTERY CARRIER AND FITTINGS.

A2/586	...	W.34	Battery carrier	1	1, 16H, 18, ES2	15 0
A11/586	...	W.34	Battery carrier	1	30, 40 ...	15 0
E6453	...	W.30	Battery carrier top stud	1	1, 16H, 18, ES2, 30, 40 ...	6
E3223	...	W.32	Battery carrier top stud nut	1	1, 16H, 18, ES2, 30, 40 ...	4
E5456	...	W.31	Battery carrier stud washer	1	1, 16H, 18, ES2, 30, 40 ...	3

(See Oil Tank Fittings for Bottom Bolt).

REAR CARRIER.

A2/605	...		Rear carrier	1	30, 40, 1, 16H, 18, ES2	1 4 6
12343	...		Rear carrier attachment bolt	4	30, 40, 1, 16H, 18, ES2	8
E3222	...		Rear carrier attachment bolt nut	4	30, 40, 1, 16H, 18, ES2	4

SPEEDOMETER AND FITTINGS.

B11/545	...		Speedometer head	1	30, 40 ...	3 0 0
B2/545	...	H.24	Speedometer head	1	1, 16H, 18, ES2	3 0 0
B2/681	...	H.60	Speedometer head rubber washer	1	30, 40, 1, 16H, 18, ES2	6
B2/555	...	H.61	Speedometer head attachment bracket ...	1	30, 40, 1, 16H, 18, ES2	1 6
B2/556	...	H.25	Speedometer head securing nut	2	30, 40, 1, 16H, 18, ES2	4

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	-------------	---------------------------

SPEEDOMETER AND FITTINGS—cont.

B2/557	...	Speedometer head securing washer	2	30, 40, 1, 16H, 18, ES2	3
B2/552	...	Speedometer cable complete	1	30, 40, 1, 16H, 18, ES2	1 5 0
B2/553	... H.27	Speedometer cable, outer	1	30, 40, 1, 16H, 18, ES2	12 6
B2/554	... H.26	Speedometer cable, inner	1	30, 40, 1, 16H, 18, ES2	12 6
B2/564	... S.34	Speedometer gear box complete	1	30, 40, 1, 16H, 18, ES2	1 10 0

REVOLUTION COUNTER.

A11M/545	... H.17	Revolution counter head only	1	30M, 40M	3 0 0
A11M/555	... H.20	Revolution counter attachment bracket ...	1	30M, 40M	4 0
A11M/681	... H.19	Revolution counter rubber washer	1	30M, 40M	2 0
A11M/556	... H.18	Revolution counter securing nut	2	30M, 40M	4
A11M/557	...	Revolution counter securing nut washer ..	2	30M, 40M	3
A11M/858	... H.21	Revolution counter retaining cup	1	30M, 40M	4 0
A11M/552	...	Revolution counter cable complete	1	30M, 40M	1 5 0
A11M/553	... H.23	Revolution counter cable, outer	1	30M, 40M	12 6
A11M/554	... H.22	Revolution counter cable, inner	1	30M, 40M	12 6
A11M/546	... B.7	Revolution counter gearbox	1	30M, 40M	2 2 6
A11M/859	... B.8	Revolution counter gearbox attachment pin	2	30M, 40M	5
A11M/860	... B.9	Revolution counter gearbox attachment pin nut	4	30M, 40M	3

(For Driving Nut see Mag. Drive Parts).

PILLION FOOTRESTS AND FITTINGS.

A2/582	... Y.40	Pillion footrest hanger, L.H. or R.H.	1	30, 40, 1, 16H, 18, ES2	4 0
A2/583	... Y.39	Pillion footrest rubber, L.H. or R.H.	2	30, 40, 1, 16H, 18, ES2	3 0
E3801	... Y.41	Pillion footrest attachment bolt	2	30, 40, 1, 16H, 18, ES2	5
5790A	... Y.42	Pillion footrest attachment bolt spring washer	2	30, 40, 1, 16H, 18, ES2	4
E3223	... Y.43	Pillion footrest attachment bolt nut	2	30, 40, 1, 16H, 18, ES2	4
A2/584	...	Pillion footrest complete with pins (per pair)	1	30, 40, 1, 16H, 18, ES2	17 0
B4/686	... Y.45	Frame pillion footrest lug	2	30, 40, ES2	2 6
11601	... Y.44	Frame pillion footrest lug bolt	2	30, 40, ES2	6

B.T.H. MAGNETO AND FITTINGS.

KD1-C6TT	...	Magneto complete	1	30M, 40M	9 15 0
CX1883-C16	...	Contact breaker complete	1	30M, 40M	2 1 6
CX63472-G6	...	Contact breaker lever with springs	1	30M, 40M	15 0
SKC24474-G1	...	Contact breaker screw adjustable	1	30M, 40M	8 4
CR29487-1	...	Contact breaker securing screw	1	30M, 40M	5

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
B.T.H. MAGNETO AND FITTINGS—cont.					
SKC6219-G1		Earthing brush and spring	1	30M, 40M	7
SKC30961-G1		Brush holder H.T.	1	30M, 40M	5 0
SKC6607-1 ...		Brush holder screw	2	30M, 40M	3
SKC6306-G1		Brush and spring H.T.	1	30M, 40M	5
SKC28537-G1		Contact breaker cover	1	30M, 40M	5 0
CZ60707-G10		H.T. Lead	1	30M, 40M	5 0

MAGDYNO PARTS (LUCAS).

463121	...	Magdyno fibre gear wheel assembly	1	1, 16H, 18, ES2, 30, 40 ...	16 10
200569	...	Slotted screw securing dynamo to magneto	1	1, 16H, 18, ES2, 30, 40 ...	5
200290	...	Dynamo brushes (per set)	1	1, 16H, 18, ES2, 30, 40 ...	3 0
463066	...	H.T. pickup for magneto	1	1, 16H, 18, ES2, 30, 40 ...	4 2
451260	...	H.T. pickup carbon brush and spring	1	1, 16H, 18, ES2, 30, 40 ...	11
460056	...	Strap with pin and roller securing dynamo to Magneto	1	1, 16H, 18, ES2, 30, 40 ...	2 5
460051	...	Contact breaker complete	1	1, 16H, 18, ES2, 30, 40 ...	13 10
484098	...	Contact breaker points (per set).....	1	1, 16H, 18, ES2, 30, 40 ...	5 5
410600	...	Screwed bush for H.T. pickup	1	1, 16H, 18, ES2, 30, 40 ...	11
460061	...	Contact breaker cover	1	1, 16H, 18, ES2, 30, 40 ...	1 2
200354	...	Dynamo bakelite end cover with screw ...	1	1, 16H, 18, ES2, 30, 40 ...	3 11
454495	...	Steel pinion driven for dynamo	1	1, 16H, 18, ES2, 30, 40 ...	5 1

See Magdyno Driving Parts and Fittings for Sprockets.

HEADLAMP AND PARTS.

502128	...	Headlamp complete with ammeter, switch, bulbs, handlebar dipping switch and cables	1	1, 16H, 18, ES2, 30, 40 ...	5 14 6
112201	...	Headlamp fixing bolt	2	1, 16H, 18, ES2, 30, 40 ...	8
506860	...	Headlamp rim	1	1, 16H, 18, ES2, 30, 40 ...	11 8
507586	...	Headlamp glass	1	1, 16H, 18, ES2, 30, 40 ...	5 5
508736	...	Headlamp glass cork washer	1	1, 16H, 18, ES2, 30, 40 ...	1 0

PART No	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
HEADLAMP AND PARTS—cont.					
364455	...	Ammeter	1	1, 16H, 18, ES2, 30, 40 ...	11 8
351551	...	Switch complete	1	1, 16H, 18, ES2, 30, 40 ...	10 3
SK49	...	Headlamp switch lever and screw	1	1, 16H, 18, ES2, 30, 40 ...	2 1
308330	...	Headlamp panel complete	1	1, 16H, 18, ES2, 30, 40 ...	1 11 3
380501	...	Headlamp dipper switch	1	1, 16H, 18, ES2, 30, 40 ...	6 7

REAR LAMP AND FITTINGS.

53009A	...	Rear lamp complete	1	1, 16H, 18, ES2, 30, 40 ...	16 10
53056A	...	Rear lamp complete (1949)	1	1, 16H, 18, ES2, 30, 40 ...	16 10
526111	...	Rear lamp back portion with bulb holder	1	1, 16H, 18, ES2, 30, 40 ...	6 4
526230	...	Rear lamp back portion (1949)	1	1, 16H, 18, ES2, 30, 40 ...	6 4
526112	...	Rear lamp front portion with red glass ...	1	1, 16H, 18, ES2, 30, 40 ...	7 2
526232	...	Rear lamp front portion (1949)	1	1, 16H, 18, ES2, 30, 40 ...	7 2
A2/587	...	Rear lamp attachment pin and nut	3	1, 16H, 18, ES2, 30, 40 ...	4

VOLTAGE REGULATOR AND FITTINGS.

33018A	...	Voltage regulator	1	1, 16H, 18, ES2, 30, 40 ...	1 19 0
12342	...	Voltage regulator fixing pin	2	1, 16H, 18, ES2, 30, 40 ...	5
E3222	...	Voltage regulator fixing pin nut	2	1, 16H, 18, ES2, 30, 40 ...	4
E5375	...	Voltage regulator fixing washer	2	1, 16H, 18, ES2, 30, 40 ...	3

(See Oil Tank Fittings for Regulator Clip).

ELECTRIC HORN AND FITTINGS.

069343	...	Electric horn with bracket	-	1, 16H, 18, ES2, 30, 40 ...	1 15 8
701686	...	Electric horn bracket	1	1, 16H, 18, ES2, 30, 40 ...	3 4
13299	...	Electric horn bracket fixing bolt to frame	1	1, 16H, 18, ES2	6
762080	...	Electric horn button	1	All Models	5 9

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d.
-------------	--------------	--------------	------	--------------	---------------------------

TOOLS.

A2/561	...	Tyre inflator with connection	1	All Models	8 0
A2/562	...	Tyre inflator connection	1	All Models	3 6
A2/563	...	Tool-roll complete with tools	1	1, 16H	2 10 6
A3/563	...	Tool-roll complete with tools	1	18, ES2,	
				30, 40 ...	2 17 6
A11M/563	...	Tool-roll complete with tools	1	30M, 40M	2 17 6
A2/564	...	6in. adjustable spanner	1	All Models	7 0
A2/563	...	Double ended spanner 3/16in. and 1/4in.	1	All Models	2 0
A2/566	...	Double ended spanner 5/16in. and 3/8in.	1	All Models	2 8
A2/567	...	Screw driver	1	All Models	2 6
C2/568	...	Tappet spanners (per pair)	1	1, 16H	11 0
C3/568	...	Push rod adjusting spanners (per pair) ...	1	18, ES2	2 0
A2/569	...	Chain rivet extractor	1	All Models	5 6
A2/570	...	Wheel nut box spanner	1	All Models	2 0
A3/571	...	Sparking plug spanner	1	18, ES2,	
				30, 40 ...	4 0
A11M/571	...	Sparking plug spanner	1	30M, 40M	5 0
A2/572	...	6in. pliers	1	All Models	5 0
A2/573	...	Tyre lever	1	All Models	2 0
A2/574	...	Wheel spindle spanner	1	All Models	2 8
A2/275	...	Grease gun	1	All Models	15 0
A2/576	...	Gearbox top nut spanner	1	All Models	5 0
C2/577	...	Sparking plug spanner	1	1, 16H	3 6
A2/578	...	Single ended spanner, 1/8in.	1	1, 16H,	
				18, ES2	1 0
A3/579	...	Exhaust pipe " C " spanner	1	18, ES2,	
				30, 30M,	
				40, 40M	3 0
A2/580	...	Cylinder head nut spanner	1	1, 16H	3 6
A2/581	...	Tommy bar	1	All Models	1 0
B2/682	...	Front fork crown and column locknut spanner	1	All Models	2 6
B2/683	...	Front fork filler plug and head adjuster nut spanner	1	All Models	3 0
B2/684	...	Front fork main tube top bush locking spanner	1	All Models	2 0
B2/685	...	Pull through for road holder fork	1	All Models	7 6

LEGSHIELDS AND FITTINGS.

A2/589	...	Legshields and fittings complete (per set)	1	1, 16H,	
				18, ES2	2 13 4
A2/590	...	Legshield blade, L.H.	1	1, 16H,	
				18, ES2	14 8
A2/591	...	Legshield blade, R.H.	1	1, 16H,	
				18, ES2	14 8
A2/592	...	Legshield blade bracket, L.H. or R.H. ...	2	1, 16H,	
				18, ES2	1 0
A2/593	...	Legshield blade bracket back plate	1	1, 16H,	
				18, ES2	8
12342	...	Legshield blade bracket pin	1	1, 16H,	
				18, ES2	5
E3222	...	Legshield blade bracket pin nut	1	1, 16H,	
				18, ES2	4
A2/595	...	Legshield tank attachment bracket	1	1, 16H,	
				18, ES2	2 8
A2/596	...	Legshield tank attachment bracket, R.H.	1	1, 16H,	
				18, ES2	2 8
A2/597	...	Petrol tank front rubber	1	1, 16H,	
				18, ES2	6
A2/598	...	Legshield top securing rod	1	1, 16H,	
				18, ES2	2 0
A2/599	...	Legshield bottom securing rod	1	1, 16H,	
				18, ES2	2 0
E3226	...	Legshield securing rod nut	1	1, 16H,	
				18, ES2	4
A2/600	...	Legshield blade bracket distance tube 3-3/8in.	1	1, 16H,	
				18, ES2	8

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH.
					£ s. d.
LEGSHIELDS AND FITTINGS—cont.					
A2/601	...	Tank bracket distance tube 13-1/8in.	1	1, 16H, 18, ES2	1 4
A2/602	...	Legshield blade tank bracket distance tube 1-7/16in.	1	1, 16H, 18, ES2	4
A2/603	...	Legshield bottom L.H. distance tube 5-1/8in.	1	1, 16H, 18, ES2	8
A2/604	...	Legshield bottom R.H. distance tube 6-7/8in.	1	1, 16H, 18, ES2	8

TRANSFERS.

A2/865	...	Petrol tank name transfer	2	All Models	1 2
A2/866	...	Petrol tank name transfer for top panel	1	All Models	1 2
A2/867	...	Front chaincase transfer	1	1, 16H, 18, ES2, 30, 40 ...	1 2
A2/868	...	Oil tank transfer (minimum oil level) ...	1	—	1 2
A2/869	...	Rear mudguard transfer	1	All Models	1 2

(Please Note.—Panels, Red and Black lines cannot be supplied. These are painted by hand).

RUBBER CABLE CLIPS.

Size "A"	...	For clutch, air, throttle, mag. cables, and head lamp cable harness to top frame tube	1	—	4
Size "D"	...	For tail lamp lead	1	—	4
Size "S"	...	For speedometer cable and battery lead ...	1	—	4

SIDECAR CHASSIS AND FITTINGS.

A2/881	...	Sidecar chassis less all fittings	1	All Models	25 0 0
A2/882	...	Sidecar front chassis attachment arm	1	All Models	2 0 0
A2/883	...	Sidecar front arm chassis attachment bolt	1	All Models	4 0
A2/884	...	Sidecar front attachment arm sleeve nut	1	All Models	1 0
A2/885	...	Sidecar front attachment arm sleeve nut washer	1	All Models	4
E3228	...	Sidecar attachment arm bolt nut	1	All Models	8
A2/885	...	Sidecar attachment arm bolt washer	1	All Models	4
A2/886	...	Crankcase engine plate and 4th point attachment rod	1	All Models	5 0
E3226	...	Crankcase engine plate and 4th point attachment rod nut	1	All Models	5
A2/887	...	Sidecar 4th point connection distance tube	1	All Models	2 0
A2/888	...	Sidecar 4th point attachment stud connection plate	1	All Models	1 6
A2/889	...	Sidecar centre arm frame plug	1	All Models	15 0
E3228	...	Sidecar centre arm frame plug nut	1	All Models	8
A2/885	...	Sidecar centre arm frame plug nut washer	1	All Models	4
A2/890	...	Sidecar centre arm, top portion	1	All Models	9 0
A2/891	...	Sidecar centre arm, bottom portion	1	All Models	2 0 0
E3860	...	Sidecar arm clip pin	1	All Models	8
E3224	...	Sidecar arm clip pin nut	1	All Models	4
A2/892	...	Sidecar centre arm chassis eye bolt	1	All Models	5 0
E3227	...	Sidecar centre arm chassis eye bolt nut ...	1	All Models	5
11871	...	Jaw joint clip complete for chassis rear tube	1	All Models	13 0
E3812	...	Jaw joint clip bolt	2	All Models	1 0
E3224	...	Jaw joint clip bolt nut	2	All Models	4
11765	...	Sidecar centre arm jaw joint bolt	1	All Models	1 0
E3226	...	Sidecar centre arm jaw joint bolt nut ...	1	All Models	5
A2/893	...	Sidecar rear arm	1	1, 16H, 18	19 0
B4/893	...	Sidecar rear arm	1	Spring Frame Models	15 0

PART No.	PLATE No.	DESCRIPTION.	QTY.	USED. ON.	PRICE EACH. £ s. d
SIDECAR CHASSIS AND FITTINGS—cont.					
A2/894	...	Sidecar rear arm frame attachment bolt ...	1	All Models	4 0
A2/895	...	Sidecar rear arm frame attachment bolt distance piece	1	1, 16H, 18	2 0
E3228	...	Sidecar rear arm frame attachment bolt nut	1	All Models	8
A2/885	...	Sidecar rear arm frame attachment bolt nut washer	1	All Models	4
B4/895	...	Sidecar rear arm frame attachment bolt distance piece	1	Spring Frame Models	2 0
A2/896	...	Sidecar front spring	2	All Models	13 0
A2/897	...	Sidecar rear spring	2	All Models	1 5 0
A2/898	...	Sidecar spring holding down 'U' clip, long per set	5	All Models	2 6
A2/899	...	Sidecar spring holding down 'U' clip, short per set	3	All Models	2 0
E3224	...	Sidecar spring holding down 'U' clip nut	16	All Models	4
A2/900	...	Sidecar spring holding down 'U' clip nut washer	16	All Models	3
A2/901	...	Sidecar rear spring shackle	2	All Models	4 6
A2/902	...	Sidecar rear spring shackle bolt	2	All Models	1 0
E3224	...	Sidecar rear spring shackle bolt nut	2	All Models	4
A2/903	...	Sidecar bearer bar, front	1	All Models	9 0
A2/904	...	Sidecar bearer bar, rear	1	All Models	9 0
11664	...	Sidecar bearer bar nut	8	All Models	5
A2/905	...	Sidecar bearer bar nut washer	4	All Models	4
A2/906	...	Sidecar bearer bar body attachment bolt	4	All Models	8
A2/907	...	Sidecar bearer bar body attachment bolt nut	8	All Models	4
A2/908	...	Sidecar bearer bar body attachment bolt washer	4	All Models	4
A2/428	...	Sidecar wheel, complete with hub shell only	1	All Models	5 17 0
A2/429	...	Sidecar wheel spoke, short	20	All Models	4 0
A2/430	...	Sidecar wheel spoke, long	20	All Models	4 0
A2/431	...	Sidecar wheel nipples	40	All Models	4 6
A2/432	...	Sidecar wheel rim	1	All Models	1 5 0
A2/433	...	Sidecar wheel hub shell only	1	All Models	1 17 0
A2/434	...	Sidecar hub shell bearing sleeve	1	All Models	6 0
A2/435	...	Sidecar hub bearing (single row)	1	All Models	16 6
A2/437	...	Sidecar hub bearing oil retaining felt washer	1	All Models	8
A2/439	...	Sidecar hub bearing oil retaining felt washer, steep cup	1	All Models	1 0
A2/440	...	Sidecar hub bearing locking washer	1	All Models	2 0
A2/436	...	Sidecar hub bearing (double row)	1	All Models	1 11 4
A2/441	...	Sidecar hub bearing distance piece, near side	1	All Models	2 0
A2/442	...	Sidecar hub bearing cover	1	All Models	3 0
A2/198	...	Sidecar hub grease nipple	1	All Models	1 0
A2/460	...	Sidecar hub spindle	1	All Models	7 0
A2/909	...	Sidecar wheel hub end cover	1	All Models	3 6
A2/910	...	Sidecar mudguard	1	All Models	1 17 0
A2/911	...	Sidecar mudguard clip	2	All Models	1 6
E3798	...	Sidecar mudguard attachment pin, long ...	6	All Models	4
E5376	...	Sidecar mudguard pin washer	6	All Models	3
E3223	...	Sidecar mudguard pin nut	6	All Models	4
52036A	...	Sidecar lamp	1	All Models	9 9